

IMPORTANT NOTICES

FOR COMPETITION USE ONLY

This Motorcycle is designed, manufactured and sold for closed-course competition use only. It does not conform to Federal Motor Vehicle Safety Standards or U.S. EPA Noise and Emission Standards. Operation on public streets, roads, highways or for off-road recreation is illegal.

State and federal laws prohibit operation of this vehicle except in an organized racing or competitive event on a closed course, or by permit issued by the local governmental jurisdiction. This vehicle is sold “as is” with no warranties.

FOR EXPERIENCED RIDERS, NO PASSENGERS

This motorcycle is designed as an operator-only vehicle and for use by experienced riders only. The load limit and seating configuration do not safety permit the carrying of a passenger.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when it is resold.


All information in this publication is based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your vehicle.

© Honda Motor Co., Ltd. 2011

2012
Honda CRF250R
OWNER'S MANUAL & COMPETITION HANDBOOK

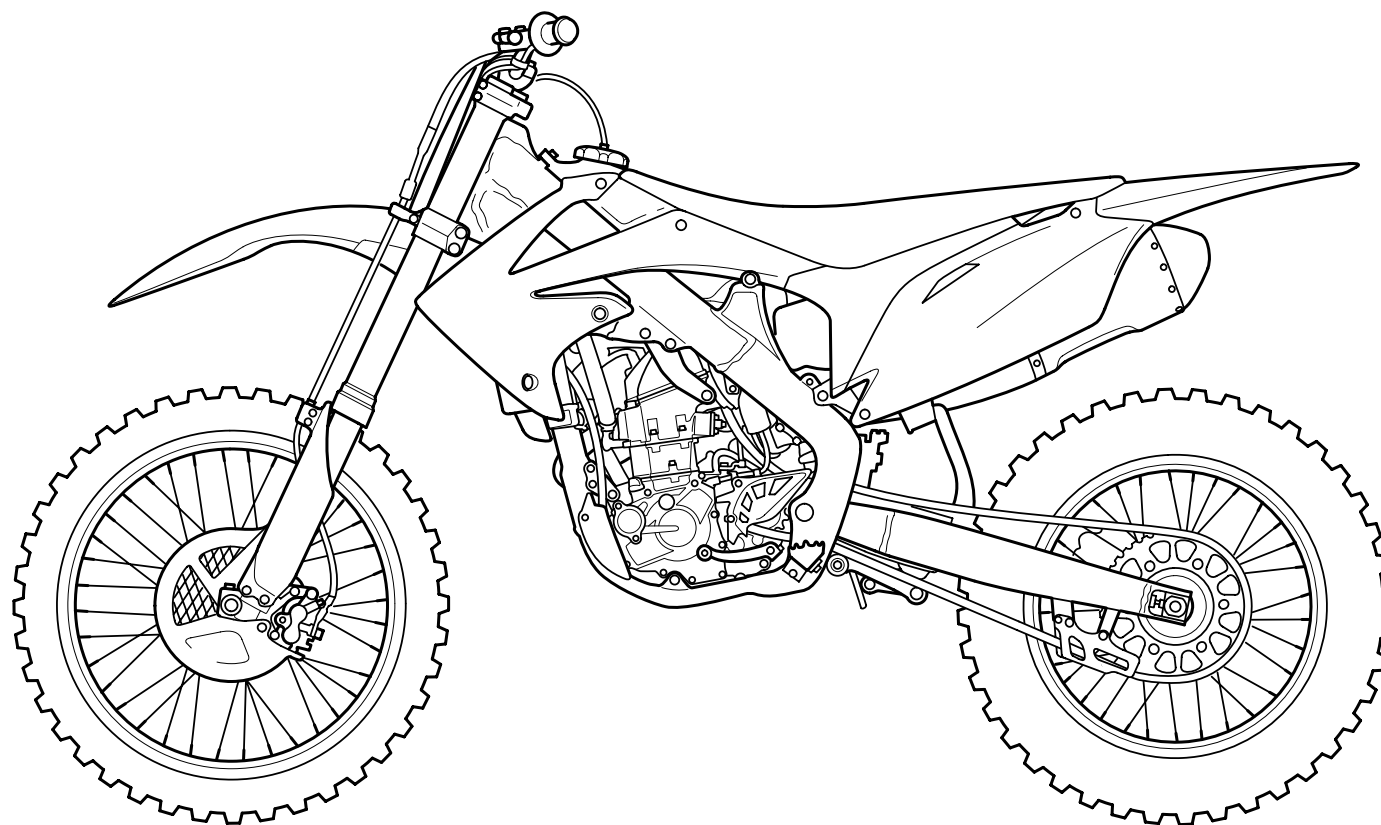

Introduction

Congratulations on choosing your Honda CRF motocross motorcycle.

When you own a Honda, you're part of a worldwide family of satisfied customers – people who appreciate Honda's reputation for building quality into every product.

Your CRF is a high performance racing motorcycle that utilizes the latest motocross technology and is intended for competition use in sanctioned, closed-course events by experienced riders only.

Be aware that motocross is a physically demanding sport that requires more than just a fine motorcycle. To do well, you must be in excellent physical condition and be a skillful rider. For the best results, work diligently on your physical conditioning and practice frequently.

Before riding, take time to get acquainted with your CRF and how it works. To protect your investment, we urge you to take responsibility for keeping your CRF well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all the pre-ride and other periodic checks detailed in this manual.

You should also read the owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a table of contents, a detailed list of topics at the beginning of each section, and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your CRF, other property, or the environment.

Unless you are mechanically qualified and have the proper tools, you should see your dealer for the service and adjustment procedures discussed in this manual.

An official Honda Service Manual for your CRF is available (page 160). It is the same manual your dealer uses. If you plan to do any service on your CRF beyond the standard maintenance procedures in this manual, you will find an official Honda Service Manual a valuable reference.

If you have any questions, or if you ever need a special service or repairs, remember that your dealer knows your CRF best and is dedicated to your complete satisfaction.

Please report any change of address or ownership to your dealer so we will be able to contact you concerning important product information.

You may also want to visit our website at
USA: www.powersports.honda.com.
Canada: www.honda.ca.

Happy riding!

California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

ABBREVIATION

Throughout this manual, the following abbreviations are used to identify the respective parts or system.

Abbrev. term	Full term
CKP sensor	Crankshaft Position sensor
DTC	Diagnostic Trouble Code
ECM	Engine Control Module
ECT sensor	Engine Coolant Temperature sensor
HPSD	Honda Progressive Steering Damper
IAT sensor	Intake Air Temperature sensor
MAP sensor	Manifold Absolute Pressure sensor
MIL	Malfunction Indicator Lamp
PGM-FI	Programmed Fuel Injection
TDC	Top Dead Center
TP sensor	Throttle Position sensor

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, this manual contains a section devoted to *Motorcycle Safety*, as well as a number of Safety Messages throughout the manual.

Safety Messages are preceded by a safety alert symbol ▲ and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**.

These signal words mean:

▲ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgement.

Contents

MOTORCYCLE SAFETY.....1	SERVICING YOUR HONDA.....21	Chassis
Important Safety Information.....2	<i>Before You Service Your Honda</i>	Suspension.....85
Important Safety Precautions.....2	The Importance of Maintenance22	Brakes.....90
Accessories & Modifications3	Maintenance Safety23	Wheels94
Safety Labels4	Important Safety Precautions.....23	Tires & Tubes95
INSTRUMENTS & CONTROLS.....5	Maintenance Schedule24	Drive Chain97
Operation Component Locations6	General Competition Maintenance26	Exhaust Pipe/Muffler100
Indicator7	Before & After Competition Maintenance.....30	Steering Damper.....103
MIL Blink Pattern.....7	Between Motos & Practice Maintenance30	Additional Maintenance Procedures105
Current DTC/Freeze DTC7	After Competition Maintenance30	
Circuit Inspection.....8	<i>Service Preparations</i>	Appearance Care107
DTC Index9	Maintenance Component Locations.....32	
BEFORE RIDING.....11	Seat33	
Are You Ready to Ride?12	Fuel Tank34	
Is Your Motorcycle Ready to Ride?.....13	Subframe36	
Pre-ride Inspection13	<i>Service Procedures</i>	
BASIC OPERATING INSTRUCTIONS15	<u>Fluids & Filters</u>	
Safe Riding Precautions.....16	Fuel System40	
Starting & Stopping the Engine17	Engine Oil49	
Fast Idle Knob17	Transmission Oil52	
Preparation17	Coolant54	
Starting Procedure17	Air Cleaner56	
How to Stop the Engine.....18	Crankcase Breather58	
Break-in Guidelines19	<u>Engine</u>	
	Throttle59	
	Engine Idle Speed61	
	Clutch System62	
	Spark Plug67	
	Valve Clearance.....68	
	Piston/Piston Rings/Piston Pin.....76	

Contents

ADJUSTMENTS FOR COMPETITION ...109

Front Suspension Adjustments	110
Front Suspension Air Pressure	110
Front Suspension Damping	110
Fork springs	111
Front Suspension Disassembly	112
Damper Oil Change	115
Fork Assembly	118
Rear Suspension Adjustments	125
Rear Suspension Spring Pre-Load	125
Rear Suspension Damping	126
Rear Suspension Race Sag	127
Suspension Adjustments for Track Conditions	129
Suspension Adjustment Guidelines	130
Tuning Tips	133
Spark Plug Reading	133
Steering Damper Adjustment	134
Steering Damper Damping	134
Steering Damper Adjustment Guidelines	135
Chassis Adjustments	136
Rear End	136
Fork Height/Angle	136
Wheelbase	136
Gearing	137
Tire Selection for Track Conditions	138
Personal Fit Adjustments	139
Control Positioning	139
Handlebar Position, Width & Shape	139

TIPS141

Transporting Your Motorcycle	142
Storing Your Honda	143
Preparation for Storage	143
Removal from Storage	143
You & the Environment	144
Troubleshooting	145

TECHNICAL INFORMATION147





Vehicle Identification	148
Serial Numbers	148
Specifications	149
Torque Specifications	150
Nuts, Bolts, Fasteners	150
Oxygenated Fuels	153
Competition Logbook	154
Optional Parts List	156
Spare Parts & Equipment	157
Spare Parts	157
General Tools	157
Honda Special Tools	157
Chemical Products	157
Other Products	157
Wiring Diagram	158

CONSUMER INFORMATION159

Authorized Manuals	160
Contacting Honda	161
Your Dealer	162
The Honda Rider's Club (USA only)	163

INDEX164

    QUICK REFERENCE



Motorcycle Safety

This section presents some of the most important information and recommendations to help you ride your CRF safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your CRF.

Important Safety Information.....	2
Important Safety Precautions.....	2
Accessories & Modifications	3
Safety Labels	4

Important Safety Information

Important Safety Precautions

Your CRF can provide many years of pleasure, if you take responsibility for your own safety and understand the challenges you can meet in competitive racing.

As an experienced rider, you know there is much you can do to protect yourself when you ride. The following are a few precautions we consider to be most important.

Never Carry a Passenger.

Your CRF is designed for one operator only. Carrying a passenger can cause a crash in which you and others can be hurt.

Wear Protective Gear.

Whether you're practicing to improve your skills, or riding in competition, always wear an approved helmet, eye protection, and proper protective gear.

Take Time to Get to Know Your CRF.

Because every motorcycle is unique, take time to become thoroughly familiar with how this one operates and responds to your commands before placing your machine, and yourself, in competition.

Learn and Respect Your Limits.

Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, illness and fatigue can reduce your ability to perform well and ride safely.

Don't Drink and Ride.

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep your Honda in Safe Condition.

Maintaining your CRF properly is critical to your safety. A loose bolt, for example, can cause a breakdown in which you can be seriously injured.

Accessories & Modifications

Accessories & Modifications

Installing non-Honda accessories, removing original equipment, or modifying your CRF in any way that would change its design or operation, could seriously impair your CRF's handling, stability, and braking, making it unsafe to ride.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding modifications and accessories.

Safety Labels

Read these labels carefully and don't remove them.

If the label comes off or becomes hard to read, contact your dealer for replacement.

(For Canada)


THIS COMPETITION VEHICLE IS FOR USE
EXCLUSIVELY IN CLOSED-COURSE COMPETITION
AND IS NOT INTENDED FOR USE ON PUBLIC
HIGHWAYS.
CE VÉHICULE DE COMPÉTITION EST DESTINÉ À
ÊTRE UTILISÉ EXCLUSIVEMENT DANS LES COURSES
EN CIRCUIT FERMÉ ET N'EST PAS DESTINÉ AUX
VOIES PUBLIQUES.

IMPORTANT INFORMATION

Operator only. No passengers. This Honda
Motorcycle is sold as is without warranty, and
the entire risk as to quality and performance is
with the buyer. Read owner's manual.

This vehicle is designed, manufactured and sold
for competition use only. It does not conform
to Federal Motor Vehicle Safety Standards or
U.S. EPA Noise and Emissions Standards.
Operation on public streets, roads, highways or
for off-road recreation is illegal.

State and Federal laws prohibit operation of this
vehicle except in an organized racing or
competitive event on a closed course. Or by
permit issued by the local governmental agency
having jurisdiction.

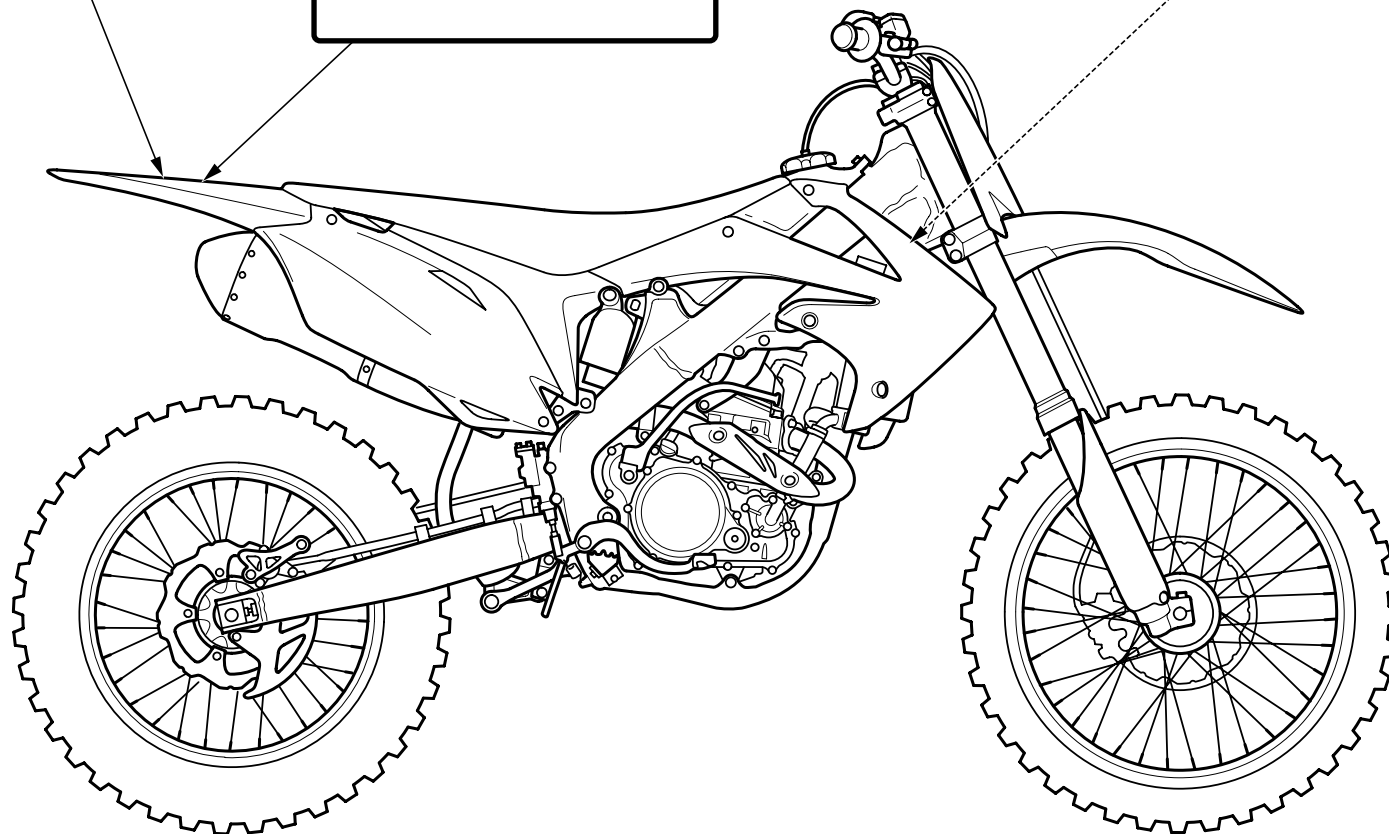


Instruments & Controls

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.


Operation Component Locations	6
Indicator	7
MIL Blink Pattern	7
Current DTC/Freeze DTC	7
Circuit Inspection.....	8
DTC Index	9

Operation Component Locations

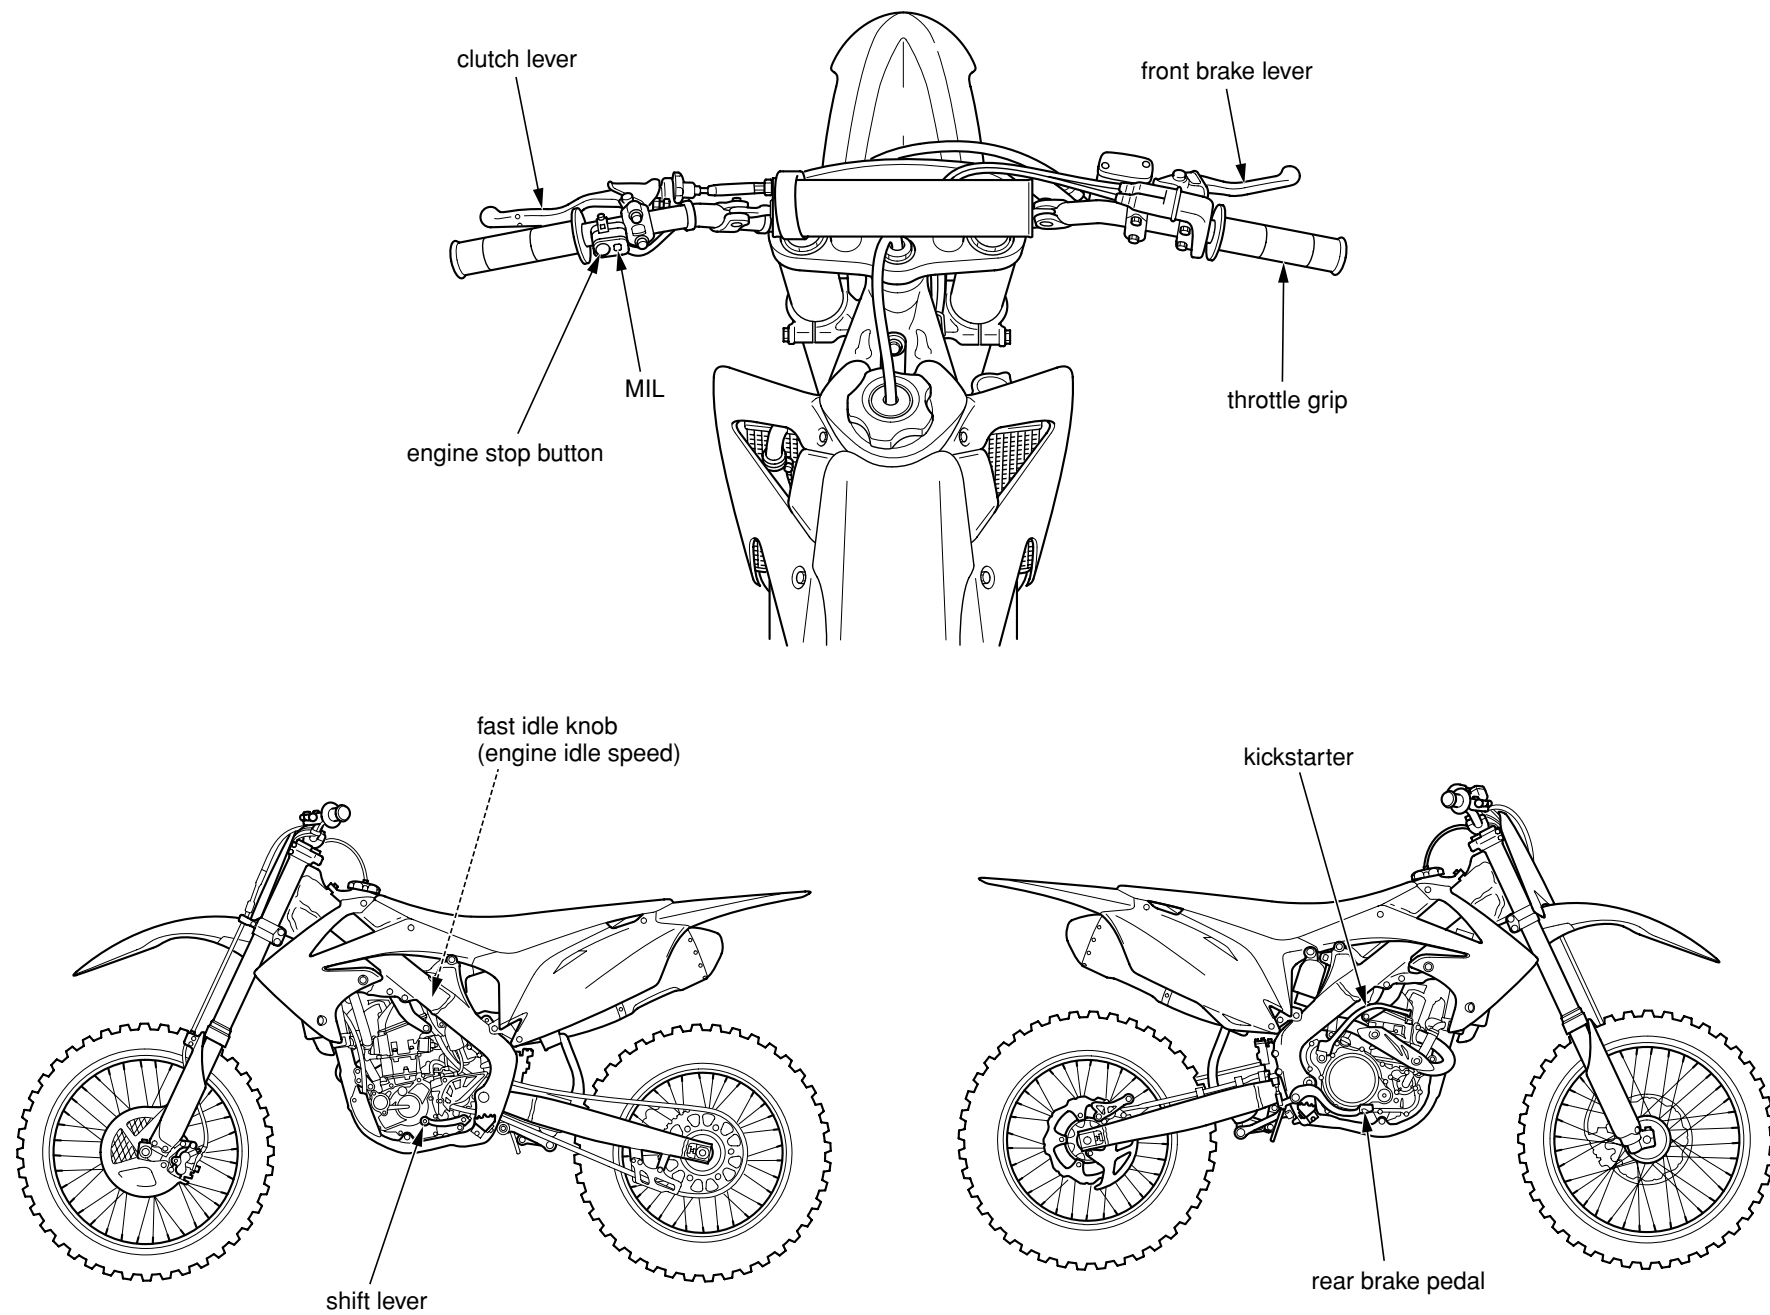

Indicator

The MIL on your CRF keeps you informed, alerts you to possible problems, and makes your riding safer and more enjoyable. Refer to the MIL frequently.

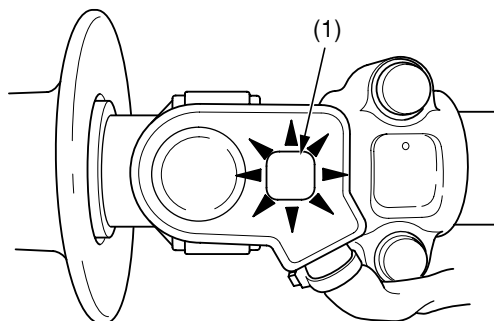

(1) MIL

The MIL flashes when there is any abnormality in the PGM-FI system. It should also light for a few seconds and then go off when the engine is started.

If the MIL comes on at any other time, reduce speed and refer to an official Honda Service Manual available for purchase from your dealer (page 160).

If the MIL does not come on when it should, have your dealer check it for problems.

MIL Blink Pattern

The MIL will blink the appropriate DTC number if the ECM detects an active problem while the engine is running at less than 5,500 rpm. The MIL will stay ON when the engine speed is over 5,500 rpm.

The MIL has two types of blinks: a long blink and short blink. The long blinking lasts for 1.2 seconds, the short blinking lasts for 0.4 seconds. One long blink is the equivalent of ten short blinks. For example, when one long blink is followed by two short blinks, the MIL is 12 (one long blink = 10 blinks, plus two short blinks).

When the ECM stores more than one DTC, the MIL will indicate them by blinking in the order from the lowest number to highest number.

Current DTC/Freeze DTC

The DTC is indicated in two ways according to the failure status.

- In the case that the ECM detects an active problem, the MIL will come on and will start to blink the DTC when the engine is started.
- In the case that the ECM does not detect an active problem but has recorded a previous problem in its memory, the MIL will not come on. If it is necessary to retrieve any past problems stored in the memory, refer to an official Honda Service Manual.

Indicator


Circuit Inspection

Always clean around the ECM and keep debris away from the connectors before disconnecting them.

A faulty PGM-FI system is often related to poorly connected or corroded connections. Check the following connections.

- (1) MAP sensor connector
- (2) ECT sensor connector
- (3) TP sensor connector
- (4) IAT sensor connector
- (5) Injector connector
- (6) No.1/No.2 CKP sensor connector
- (7) ECM connector

Remember, circuit inspection is not a “cure-all” for other problems in your engine’s PGM-FI system.

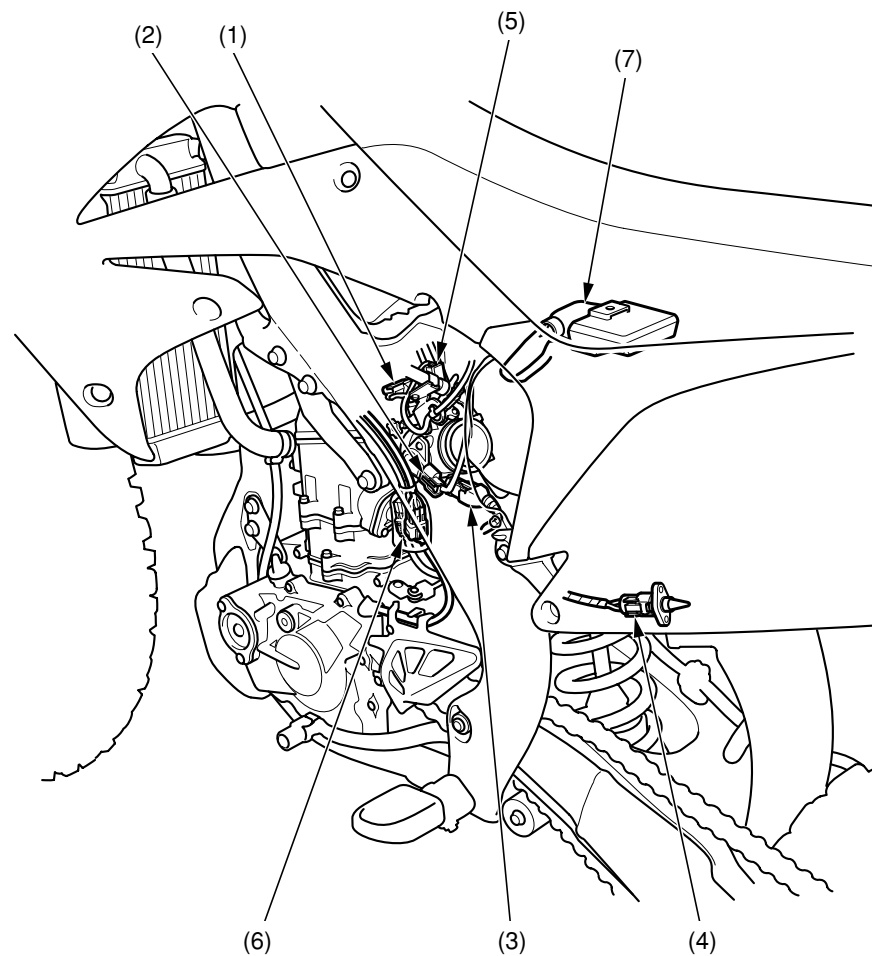

DTC Index

Refer to MIL Blink Pattern on page 7.

MIL blinks	Function Failure	Symptom/Fail-safe Function
1	MAP sensor circuit malfunction	Engine operates normally
2	MAP sensor performance problem	Engine operates normally
7	ECT sensor circuit malfunction	Hard start at a low temperature
8	TP sensor circuit malfunction	Poor engine acceleration
9	IAT sensor circuit malfunction	Engine operates normally
12	Injector circuit malfunction	<ul style="list-style-type: none"> • Engine does not start • Injector, fuel pump and ignition shut down
19	No.1 CKP sensor circuit malfunction	<ul style="list-style-type: none"> • Engine does not start • Injector, fuel pump and ignition shut down
69	No.2 CKP sensor circuit malfunction	<ul style="list-style-type: none"> • Engine does not start • Injector, fuel pump and ignition shut down

Should be serviced by your dealer, unless the owner has proper tools and is technically qualified.
 The series of 12, 19, and 69 MIL blinks cannot be checked because the engine cannot be started.
 If the engine does not start, check all connector connections and/or refer to an official Honda Service Manual (page 160) for troubleshooting of the PGM-FI symptom.

Before Riding

Before each ride, you need to make sure you and your Honda are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, and what items you should check on your CRF.

For information about suspension, steering damper, and other adjustments, see page 109.

Are You Ready to Ride?.....	12
Is Your Motorcycle Ready to Ride?.....	13
Pre-ride Inspection.....	13

Are You Ready to Ride?

Before riding your CRF for the first time, we strongly recommend that you read this owner's manual, make sure you understand the safety messages, and know how to operate the controls.

Before each ride, it's also important to make sure you and your CRF are both ready to ride.

For information about suspension, steering damper, and other adjustments, see page 109.

Whether you're preparing for competition or for practice, always make sure you are:

- In good physical and mental condition
- Free of alcohol and drugs
- Wearing an approved helmet, eye protection, and other appropriate riding gear

Although complete protection is not possible, wearing the proper gear can reduce the chance or severity of injury when you ride.

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you always wear a helmet, eye protection and other protective apparel when you ride.

Is Your Motorcycle Ready to Ride?

Competitive riding can be tough on a motorcycle, so it's important to inspect your CRF and correct any problems you find before each ride. Check the following items (page numbers are at the right):

⚠ WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

Pre-ride Inspection

Check the following before each ride:

- Engine oil level50
- Transmission oil level53
- Fuel line for condition40
- Coolant for proper level 54
- Cooling system and hoses for condition55
- Spark plug for proper heat range, carbon fouling and spark plug wire terminal for looseness67
- Air cleaner for condition and contamination56
- Clutch lever adjustment and freeplay62
- Breather drain for cleaning58
- Steering head bearing and related parts for condition105
- Steering damper operation103
- Throttle operation59
- Tires for damage or improper inflation pressure95
- Spokes for looseness94
- Rim locks for looseness94
- Front and rear suspension for proper operation85, 86
- Front and rear brakes, check operation90
- Drive chain for correct slack and adequate lubrication97-98
- Drive chain sliders and drive chain rollers for damage or wear97, 98
- Exhaust pipe/Muffler for looseness100
- Every possible part for looseness (such as cylinder head nuts, engine mounting bolts/nuts, axle nuts, handlebar holder bolts, fork bridge pinch bolts, drive chain adjuster, drive chain guide, wire harness connectors, kickstarter mounting bolt)150-152
- Indicator7

Basic Operating Instructions

This section gives basic information on how to start and stop your engine as well as break-in guidelines.

Safe Riding Precautions.....	16
Starting & Stopping the Engine	17
Fast Idle Knob	17
Preparation	17
Starting Procedure	17
How to Stop the Engine.....	18
Break-in Guidelines	19

Basic Operating Instructions

Safe Riding Precautions

Before riding your CRF for the first time, please review the *Important Safety Precaution* beginning on page 2 and the previous section, titled *Before Riding*.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your CRF's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Your CRF can be kickstarted with the transmission in gear by pulling in the clutch lever before operating the kickstarter.

Fast Idle Knob

The fast idle knob has two functions:

- When pulled out, the fast idle knob assists in first-time start-up for cold weather starting.
- When pushed in, it acts as an idle adjustment screw. Refer to *Idle Speed Adjustment* on page 61.

Preparation

Make sure that the transmission is in neutral.

Starting Procedure

Always follow the proper starting procedure described as follows.

Check the engine oil, transmission oil and coolant levels before starting the engine (pages 50, 53, 54).

Cold Engine Starting

1. Shift the transmission into neutral.
2. If the temperature is 95°F (35°C) or below, pull the fast idle knob (1) fully out.



(1) fast idle knob

3. With the throttle closed, operate the kickstarter starting from the top of the kickstarter stroke, and kick through to the bottom with a rapid, continuous motion.
4. About a minute after the engine starts, push the fast idle knob back all the way to fully OFF.

If idling is unstable, open the throttle slightly.

Warm Engine Starting

1. Shift the transmission into neutral.
2. Kick-start the engine (Do not open the throttle).


If Difficult to Start After Stalling

1. Shift the transmission into neutral.
2. With the throttle fully opened, repeat kickstarter operation approximately 10 times to discharge excessive fuel from the engine.
3. Kick-start the engine. (Do not open the throttle.)

Snapping the throttle or fast idling for more than 5 minutes may cause exhaust pipe discoloration.

Starting & Stopping the Engine

How to Stop the Engine

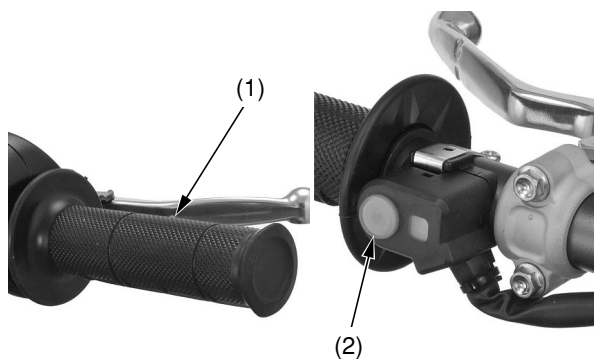

(1) throttle

(2) engine stop button

Normal Engine Stop

1. Shift the transmission into neutral.
2. Lightly open the throttle (1) two or three times, and then close it.
3. Push and hold the engine stop button (2) until the engine stops completely.

Emergency Engine Stop

To stop the engine in an emergency, push and hold the engine stop button.

Break-in Guidelines

Help assure your CRF's future reliability and performance by paying extra attention to how you ride during the first operating day or 15 miles (25 km).

During this period, avoid full-throttle starts and rapid acceleration.

This same procedure should be followed each time when:

- piston is replaced
- piston rings are replaced
- cylinder is replaced
- crankshaft or crank bearings are replaced

Servicing Your Honda

Keeping your CRF well maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun.

To help keep your CRF in good shape, this section includes a Maintenance Schedule for required servicing and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on oils, and tips for keeping your Honda looking good.

An ECM system is used on this motorcycle; consequently, routine ignition timing adjustment is unnecessary. If you want to check the ignition timing, refer to the Honda Service Manual (page 160).

An optional tool kit may be available. Check with your dealer's parts department.

Before You Service Your Honda

The Importance of Maintenance	22
Maintenance Safety	23
Important Safety Precautions	23
Maintenance Schedule	24
General Competition Maintenance	26
Before & After Competition Maintenance	30
Between Motos & Practice Maintenance	30
After Competition Maintenance	30

Service Preparations

Maintenance Component Locations	32
Seat	33
Fuel Tank	34
Subframe	36

Service Procedures

Fluids & Filters

Fuel System	40
Engine Oil	49
Transmission Oil	52
Coolant	54
Air Cleaner	56
Crankcase Breather	58

Engine

Throttle	59
Engine Idle Speed	61
Clutch System	62
Spark Plug	67
Valve Clearance	68
Piston/Piston Rings/Piston Pin	76

Chassis

Suspension	85
Front Suspension Inspection	85
Rear Suspension Inspection	86
Recommended Fork Oil	87
Fork Oil Change	87
Brakes	90
Wheels	94
Tires & Tubes	95
Drive Chain	97
Exhaust Pipe/Muffler	100
Steering Damper	103
Additional Maintenance Procedures	105
Appearance Care	107

The Importance of Maintenance

Keeping your CRF well-maintained is absolutely essential to your safety. It's also a good way to get maximum performance during each moto. Careful pre-ride inspections and good maintenance are especially important because your CRF is designed to be ridden in off-road competition.

Remember, proper maintenance is your responsibility. Be sure to inspect your CRF before each ride and follow the Maintenance Schedule in this section.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

This section includes instructions on how to perform some important maintenance tasks. Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Important Safety Precautions

- Make sure the engine is off before you begin any maintenance or repairs.
This will help eliminate several potential hazards:

Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.

Burns from hot motorcycle parts. Let the engine and exhaust system cool before touching.

Injury from moving parts. Do not run the engine unless instructed to do so.

- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using an optional workstand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around gasoline. Use only a non-flammable (high flash point) solvent such as kerosene — not gasoline — to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

Maintenance Schedule

To maintain the safety and reliability of your CRF, regular inspection and service is required as shown in the Maintenance Schedule that follows.

The Maintenance Schedule list items that can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual.

The Maintenance Schedule also includes items that involve more extensive procedures and may require special training, tools, and equipment. Therefore, we recommend that you have your dealer perform these tasks unless you have advanced mechanical skills and the required tools. Procedures for items in this schedule are provided in an official Honda Service Manual available for purchase from your dealer (page 160).

Service intervals in the maintenance schedule are expressed in terms of races and riding hours. To avoid overlooking required service, we urge you to develop a convenient way to record the number of races and/or hours you ride.

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your CRF best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only Honda Genuine Parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 13) at each scheduled maintenance period.

Summary of Maintenance Schedule Notes and Procedures:

Notes:

1. Clean after every moto for dusty riding condition.
2. Replace every 2 years. Replacement requires mechanical skill.
3. Replace after the first break-in ride.
4. Inspect after the first break-in ride.
5. Replace the transmission oil, if the clutch discs and plates are replaced.
6. Replace every year.

Maintenance Procedures:

I: inspect and clean, adjust, lubricate or replace if necessary

C: clean

A: adjust

L: lubricate

R: replace

Maintenance Schedule

Perform the Pre-ride Inspection (page 13) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. A: Adjust. L: Lubricate. R: Replace.

FREQUENCY ITEMS	NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE	(NOTE 6)	I				R	40
FUEL PUMP FILTER	(NOTE 6)					R	44
THROTTLE OPERATION		I					60
AIR FILTER	(NOTE 1)	C					56
CRANKCASE BREATHER		I					58
SPARK PLUG		I					67
VALVE CLEARANCE	(NOTE 4)			I			68-75
ENGINE OIL	(NOTE 3)	I		R			49
ENGINE OIL FILTER	(NOTE 3)			R			50
ENGINE IDLE SPEED		I					61
PISTON AND PISTON RINGS				R			79
PISTON PIN				R			80
TRANSMISSION OIL	(NOTE 5)	I		R			52
RADIATOR COOLANT	(NOTE 2)	I					54
COOLING SYSTEM		I					54
DRIVE CHAIN		I, L	R				97-99
DRIVE CHAIN SLIDER		I					97
DRIVE CHAIN ROLLER		I					98
DRIVE SPROCKET		I					99
DRIVEN SPROCKET		I					99
BRAKE FLUID	(NOTE 2)	I					91
BRAKE PADS WEAR		I					93
BRAKE SYSTEM		I					90
CLUTCH SYSTEM	(NOTE 5)	I					62
CONTROL CABLES		I, L					105
EXHAUST PIPE/MUFFLER		I					100
SUSPENSION		I					85, 86
SWINGARM/SHOCK LINKAGE			L				86
FORK OIL EXCEPT DAMPER	(NOTE 3)		R				87
FORK OIL DAMPER					R		115
NUTS, BOLTS, FASTENERS		I					106, 150-152
WHEELS/TIRES		I					94-96
STEERING HEAD BEARINGS					I		105

WE RECOMMENDED THESE ITEMS BE SERVICED BY REFERRING TO AN OFFICIAL HONDA SERVICE MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

NOTE: 1.Clean after every moto for dusty riding condition.

2.Replace every 2 years. Replacement requires mechanical skill.

3.Replace after the first break-in ride.

4.Inspect after the first break-in ride.

5.Replace the transmission oil, if the clutch discs and plates are replaced.

6.Replace every year.

General Competition Maintenance

Perform maintenance on firm, level ground using the optional workstand, or equivalent support.

When tightening bolts, nuts or screws, start with the larger diameter or inner fasteners, and tighten them to the specified torque using a crisscross pattern.

Use Honda Genuine Parts or their equivalent when servicing your CRF.

Clean parts in non-flammable (high flash point) cleaning solvent (such as kerosene) when disassembling. Lubricate any sliding surface, O-rings, and seals before reassembling. Grease parts by coating or filling where specified.

After any engine disassembly, always install new gaskets, O-rings, cotter pins, piston pin clips, snap rings, etc. when reassembling. After reassembly, check all parts for proper installation and operation.

All Pre-ride Inspection Items

Refer to *Pre-ride Inspection* page 13.


General Competition Maintenance

Spark Plug

Some non-resistor plugs may cause ignition problems. Refer to the recommendations elsewhere in this manual for specific types so you will be sure to use the proper reach and heat range. Replace periodically as specified in the Maintenance Schedule. (page 25).

Spark Plug Cap

Install a small plastic tie-wrap around the spark plug cap to reduce any possibility of it loosening or of water penetration.

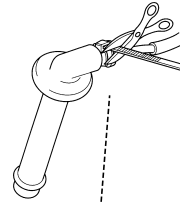

Air Cleaner

Clean and oil your air cleaner regularly because the volume of air able to pass through it has a great effect on performance. Both engine performance and long-term durability may be affected by an air cleaner that has deteriorated and allows dirt to pass through it. Inspect the air cleaner closely each time it's serviced for evidence of small tears or seam separation. Keep a spare air cleaner oiled and ready to install, sealed in a plastic bag. Riding in dusty conditions may require servicing the air cleaner or replacing it with a pre-serviced air cleaner between motos. Be careful not to over oil the air cleaner. While it is important to oil the air cleaner thoroughly, over oiling will cause an overall rich running condition, probably more noticeable off idle and in low-rpm performance. Follow the servicing instructions in the Maintenance section. Use Pro Honda Foam Filter Oil or an equivalent. Be sure to grease the air cleaner flange where it contacts the air cleaner housing. Pro Honda White Lithium Grease, or an equivalent, is handy for this because any dirt that penetrates this sealing area will show up clearly (page 56).

Use a Honda Genuine air cleaner or an equivalent air cleaner specified for your model.

Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

Engine Oil and Filter

Drain and replace the engine oil often to ensure the greatest service life of the piston, cylinder and crankshaft.


Also replace the engine oil filter often to ensure the greatest service life. Frequent oil changes will also assure consistent engine power and response. (page 50).

Transmission Oil

Drain and replace the transmission oil often to ensure the greatest service life of the transmission and clutch. Frequent changes will also assure consistent shifting and clutch performance (page 53).

Air cleaner Housing Sealing

Remove and reseal the air cleaner housing boot where it connects to the air cleaner housing with Pro Honda Handgrip Cement or an equivalent if there is any doubt to its sealing integrity. Inspect the air cleaner and air intake tract regularly for signs of deterioration or dirt penetration.

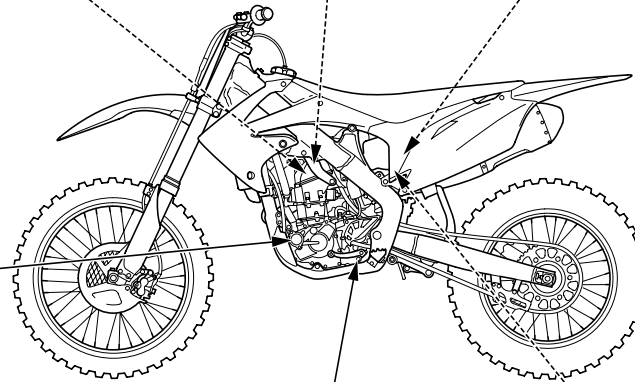


General Competition Maintenance

Steering Head Bearings

Periodically clean, inspect and regrease the steering head bearings — especially if wet, muddy or extremely dusty courses are encountered often.

Use urea based multi-purpose grease designed for high temperature, high pressure performance (example: EXCELITE EP2 manufactured by KYODO YUSHI, Japan or Shell Stamina EP2 or equivalent).

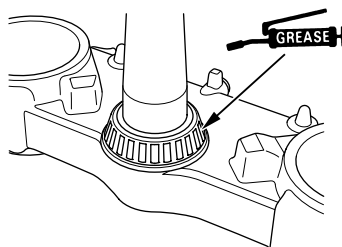

Fork Oil/Performance

Disassemble, clean and inspect the front fork and replace oil regularly. Contamination due to the tiny metal particles produced from the normal action of the fork, as well as normal oil breakdown, will deteriorate the performance of the suspension. Refer to the Honda Service Manual. Use only HP Fork Oil, SS-19 or equivalent which contains special additives to assure maximum performance of your CRF's front suspension.

Frame

Because your CRF is a high-performance machine, the frame should not be overlooked as part of your overall competition maintenance program. Periodically inspect the frame closely for possible cracking or other damage. It makes good racing sense.

Spokes

Check spoke tension frequently between the first few rides. As the spokes, spoke nuts and rim contact points seat-in, the spokes may need to be retightened. Once past this initial seating-in period, the spokes should hold their tension. Still, be sure your race maintenance program includes checking spoke tension and overall wheel condition on a regular basis (page 94).

Nuts, Bolts, Etc


Application of a thread locking agent to essential fasteners offers added assurance and security. Remove the nuts, clean the threads of both the nuts and bolts, apply Pro Honda Hondalock or an equivalent and tighten to the specified torque.

Gaskets

Always use new gaskets when reassembling components.

Cylinder Removal

Put a little grease on the cylinder mounting dowels to prevent corrosion from dissimilar metals. The tolerances are extremely tight, so it's important to keep these dowels absolutely clean (pages 76, 79).

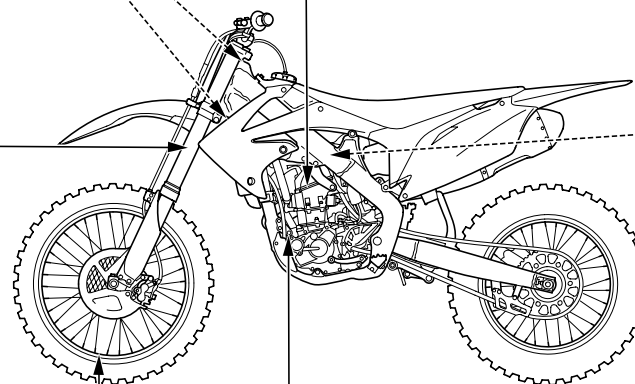


Fuel Line

Refer to *Fuel System* on page 40. Check the fuel line for deterioration, damage, or leakage. Replace the fuel line every year.

Electrical Connectors

Clean electrical connectors and wrap them with electrical tape to reduce the possibility of unwanted disconnections, water shorts or corrosion. For additional corrosion protection, apply Pro Honda Dielectric Grease to all the electrical connections.

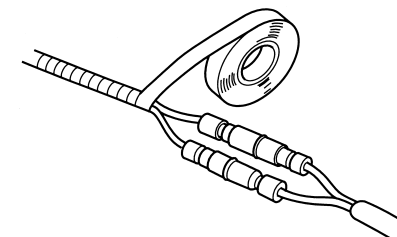


Engine Mounting Bolts and Nuts

Make sure the engine mounting bolts and nuts are tightened to the proper torque specification. For added peace of mind, remove the nuts, clean the threads, and apply Pro Honda Hondalock or an equivalent before torquing the nuts.

General Competition Maintenance


Suspension Linkage Lubrication

Disassemble, clean, inspect and lubricate all suspension linkage pivot bearings with grease after each 7.5 hours of running time in order to maintain proper suspension performance and minimize component wear.

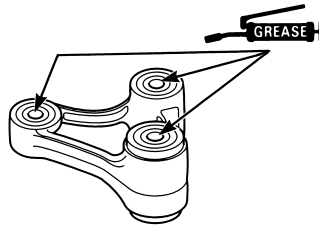

Swingarm Pivot Lubrication

Clean, inspect and lubricate swingarm and suspension linkage pivots with grease. Be sure all of the dust seals are in good condition.

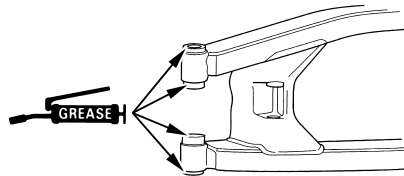


Swingarm

Do not attempt to weld or otherwise repair a damaged swingarm. Welding will weaken the swingarm.

Footpegs


Worn footpeg teeth can be repaired by filing the grooves between the teeth with a triangular-shaped file. Be aware that filing them too sharp will reduce boot sole lifespan. Sharpen only the points of the teeth. Filing the grooves deeper will weaken the footpegs. Be sure the pegs are free to pivot freely and that the pivot pin retaining cotter pins are in good condition.

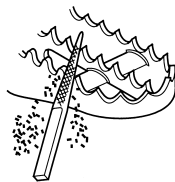

Brake Fluid Replacement

Refer to *Brake Pad Wear* in your Owner's Manual, page 93. **Brake Caliper Inspection:** Be sure both the front and rear calipers are able to move freely on the caliper bracket pins. Check pad thickness periodically and replace the pads when minimum thickness is reached. If the brakes fade when they are hot, inspect the pads for glazing or damage, and replace if necessary.

Brake Fluid Replacement: Refer to the Honda Service Manual (page 160) for brake fluid replacement instructions. Replace the hydraulic fluid in the brake system every 2 years. Replace the fluid more frequently if you subject your brakes to severe use. Heavy braking heats the brake fluid and it may deteriorate sooner than expected. Any type of riding that requires frequent use of the brakes, such as in tight woods, can shorten the service life of brake fluid.

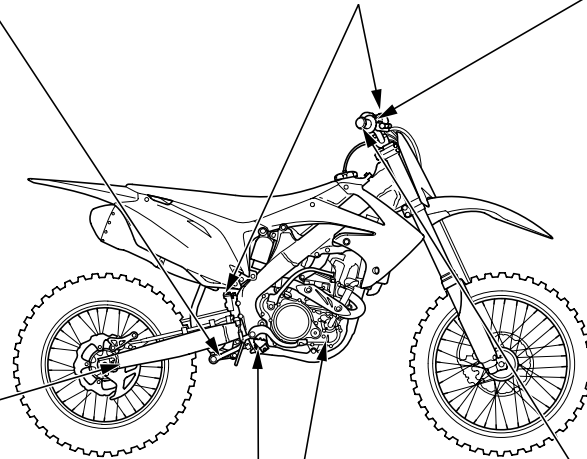

Bleed Hole

After every race, check the bleed hole below the water pump cover for leakage. Clean away any clogged dirt or sand, if necessary. Check for signs of seal leakage. A small amount of "coolant weeping" from the bleed hole is normal. If water leaks through the bleed hole, the mechanical seal is damaged. If oil leaks through the bleed hole, the oil seal is damaged. See an official Honda Service Manual or consult your dealer for replacing the mechanical seal or oil seal. Both seals should be replaced at the same time.


Handgrips

Always use Pro Honda Handgrip Cement when replacing handgrips.


Throttle Grip

Align the index mark on the throttle grip with the edge of the throttle cable guide. Left handlebar grip: Align the "Δ" mark on the left handlebar grip with the paint mark on the handlebar.

Refer to the Service Manual for installation instructions.

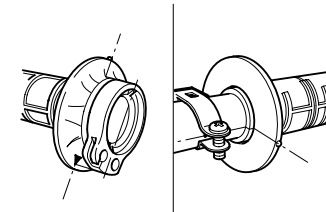

For added security, you may choose to bind the hand grips to the handlebar and throttle pipe with safety wires to prevent the possibility of them loosening. Position the twisted wire ends away from your palms and be sure to bend the wire ends well into the handgrip rubber so they will not snag your glove.

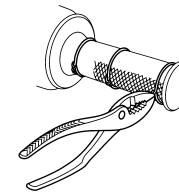

Throttle Control


Remove the throttle control every few rides, clean the inside of the throttle pipe and the handlebar thoroughly. Inspect the cable carefully for kinks or other damage that may restrict throttle control in any way. Move the handlebar from lock to lock to be sure there is no cable interference. Make certain the throttle operation is perfect after servicing and inspecting.

Before & After Competition Maintenance

Between Motos & Practice Maintenance

After practice or between motos you have a chance to make additional checks and adjustments.

- Clean accumulated dirt from under the fenders and off the wheels, suspension components, handgrips, controls, and footpegs. A stiff, nylon parts cleaning brush works well.
- Check tire air pressure.
- Check spoke tension, and make sure the rim locks are secure.

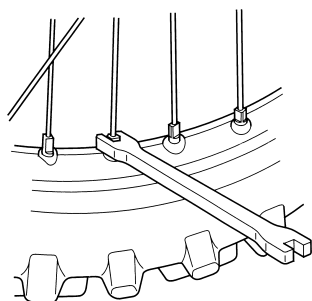


- Check to make sure the sprocket bolts and nuts are secure.
- Clean the sides of the drive chain with a stiff, nylon parts-cleaning brush. Lubricate and adjust the chain as necessary.

Do not perform maintenance while the engine is running.


Injury to your fingers or hands may result.

- After adjustment, check that the chain adjuster index marks (1) are in the same position on each side. This will ensure that the rear wheel is in proper alignment and allow maximum performance from the rear disc brake. Maintaining proper wheel alignment will also extend brake pad wear.

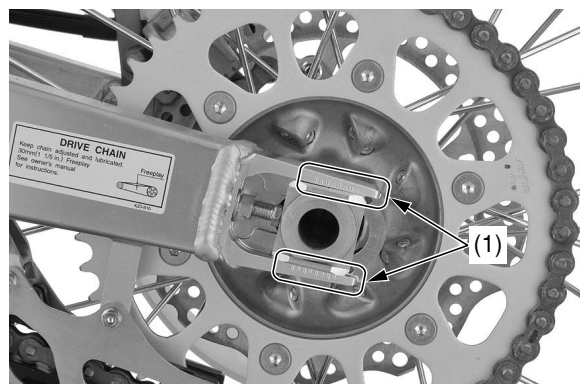

(1) chain adjuster index marks

- Suspend the front wheel above the ground and use the pressure release screws (2) to release the built-up pressure (in excess of normal atmospheric pressure: 0 psi (0 kPa, 0 kgf/cm²)) in the fork tubes. This pressure is caused by normal fork action while riding. (If you are riding at altitude, remember that fork pressure of 0 at sea level will increase as elevation increases.)

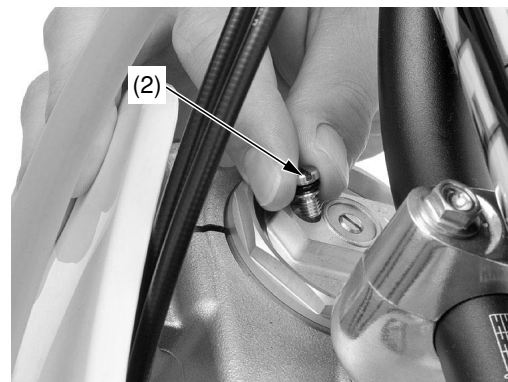

(2) pressure release screw

After Competition Maintenance


It is important to the long-term performance of your CRF to practice a consistent maintenance program. Right after the event is a good time to begin your next maintenance cycle.

After Race Lubrication

Apply a light coating of rust-inhibiting oil to the drive sprocket and any steel portions of the chassis or engine where the paint has worn away. This will prevent rusting of the exposed metal. Apply rust-inhibiting oil more heavily if the event was particularly wet or muddy. Take care to avoid spraying any oil near the brake pads or brake disc.

Take care to prevent catching your fingers between the chain and sprocket.

Remove the drive chain, clean and lubricate it. Be sure the chain is wiped clean and is dry before lubricating it.

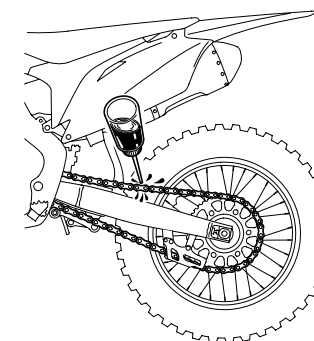

Before & After Competition Maintenance

Routine Cleaning

If your CRF is only slightly dirty, it is best to clean it by hand with the aid of a stiff bristled nylon brush and some clean rags.


Take care to prevent catching your fingers between the chain and sprocket.

A variety of reasonably priced cleaning brushes are available from variety, drug, food, and hardware stores. Some of these brushes are extremely useful in removing dirt from the many tight contours of the metal pieces of your CRF. Avoid using stiff, abrasive brushes on the plastic or rubber parts.

If your CRF was exposed to sea air or salt water, rinse it off as soon as possible after the event, dry it, and apply a spray lubricant to all metal parts.

If you decide to wash your CRF or use cleaners, refer to *Appearance Care* (page 107).


Maintenance Component Locations

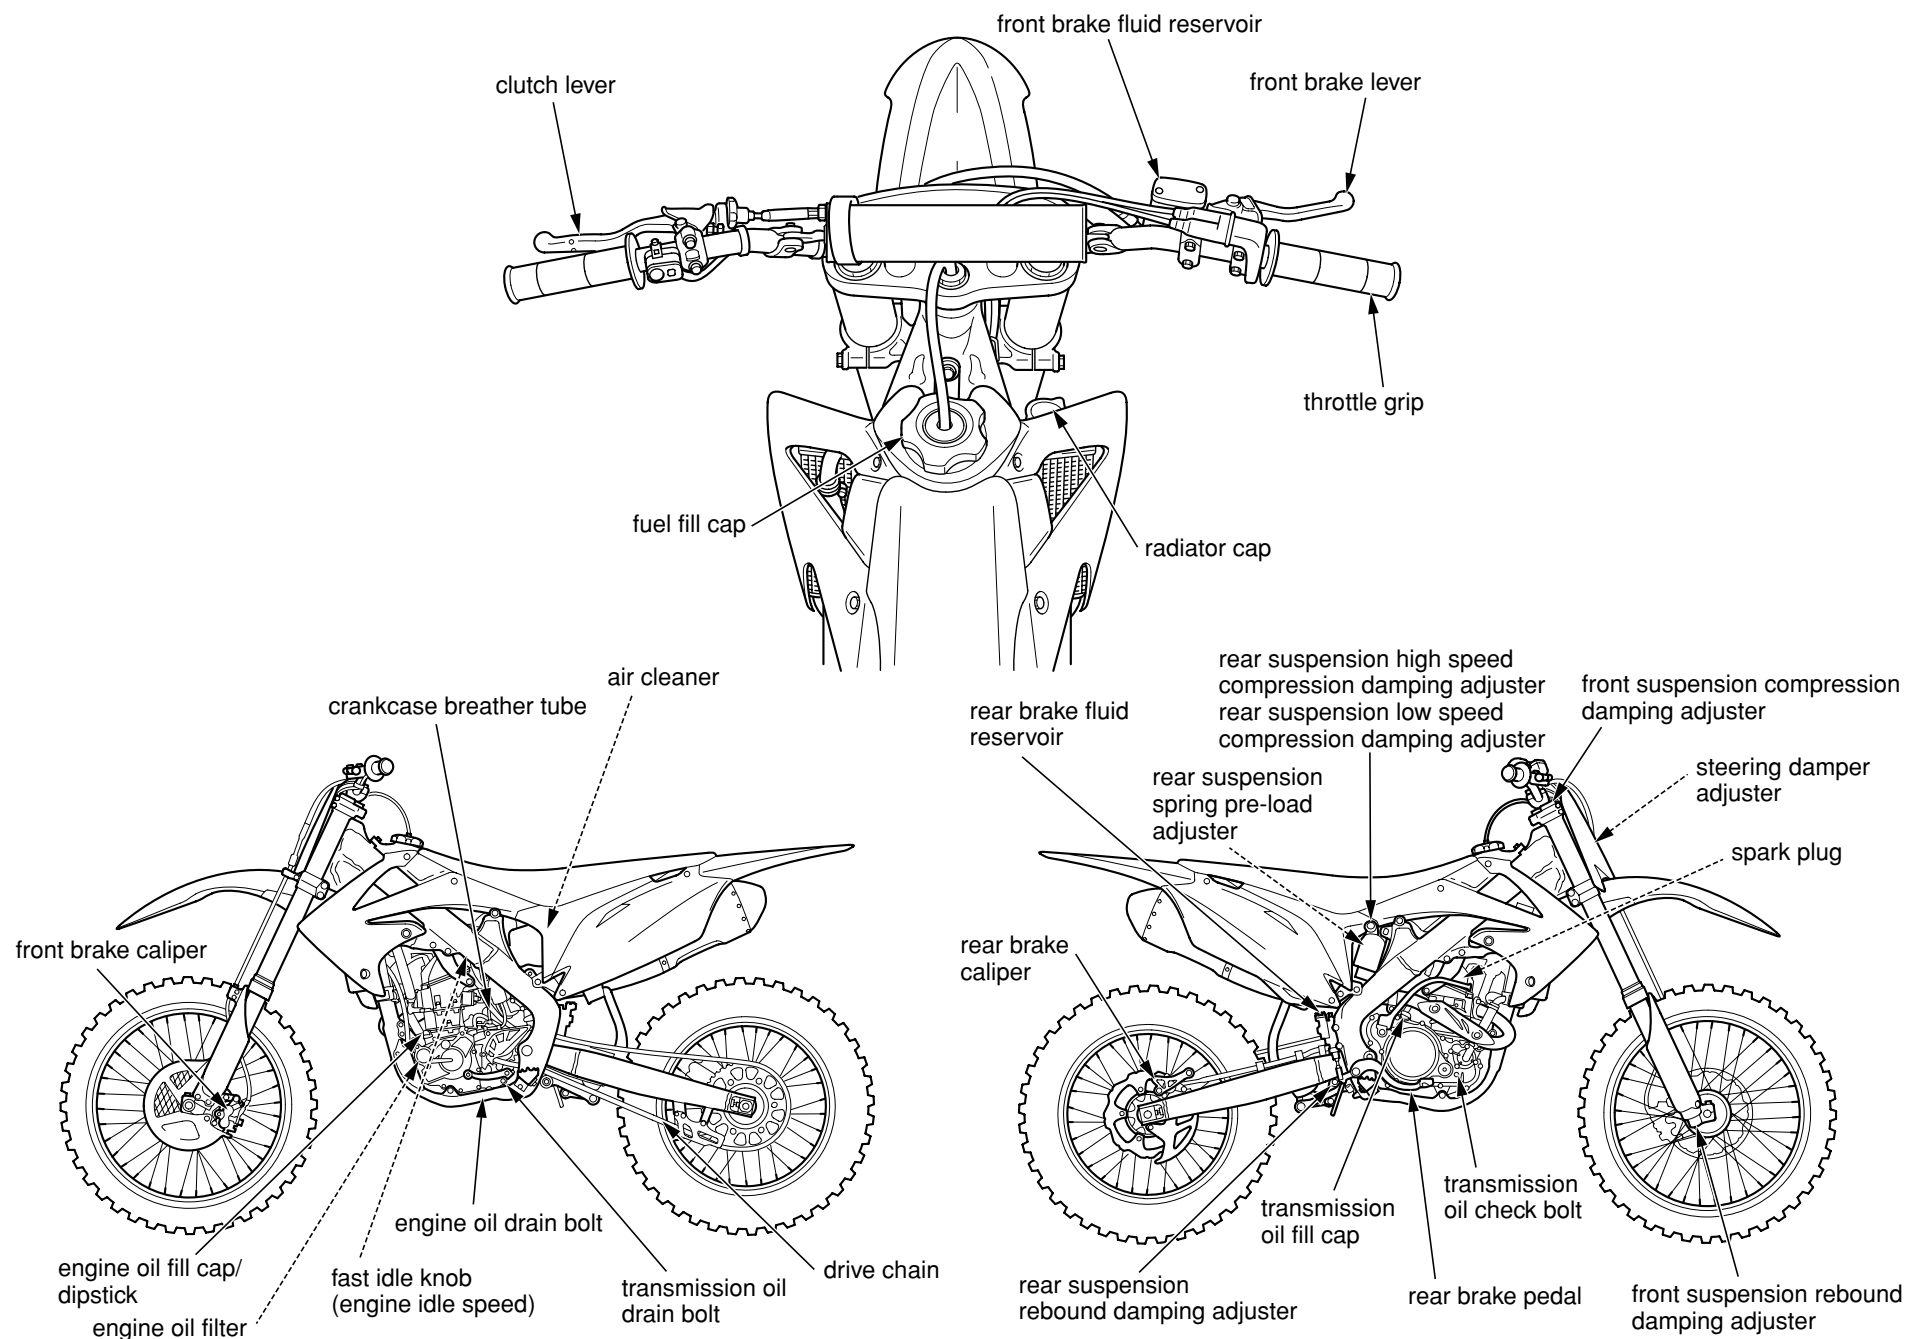

Refer to *Safety Precautions* on page 23.

Removal

1. Remove the seat mounting bolts (1).
2. Remove the seat (2) by sliding it backward.

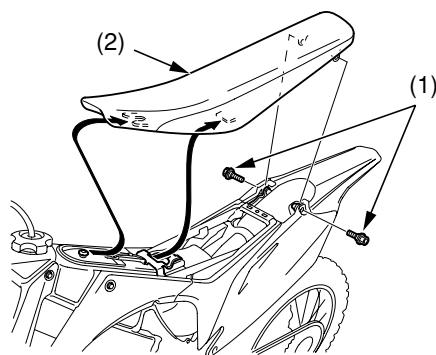


(1) seat mounting bolts

(2) seat

Installation

1. Install the seat while aligning the seat front prong (1) with the seat bracket (2) and seat rear prong (3) with the ECM bracket (4).
2. Install and tighten the seat mounting bolts to the specified torque:
19 lbf·ft (26 N·m, 2.7 kgf·m)

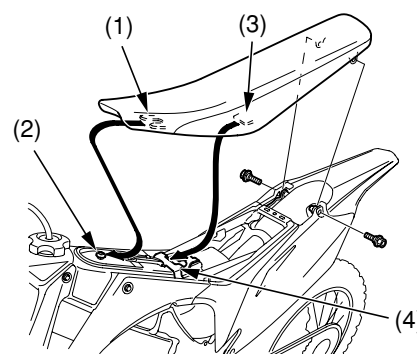


- (1) seat front prong
(2) seat bracket
(3) seat rear prong
(4) ECM bracket

Fuel Tank

Refer to *Safety Precautions* on page 23.


Removal

1. Remove the seat (page 33).
2. Remove the shroud A bolts and collars (1).
3. Remove the shroud B bolts (2) and shrouds (3).

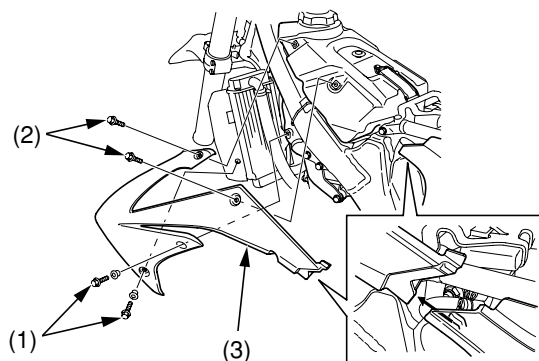

- (1) shroud A bolts and collars (3) shrouds
(2) shroud B bolts


4. Install a hose clamp (4) to the breather tube (5) and shut the hose clamp securely

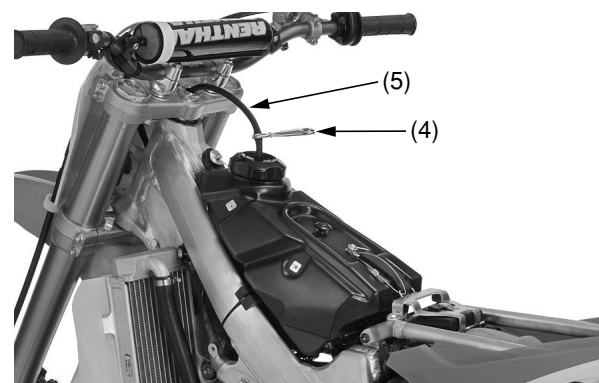

- (4) hose clamp (5) breather tube

5. Pull the breather tube (5) out of steering stem nut.
6. Unhook the fuel tank band (6).

7. Remove the fuel tank bolt and collar (7).

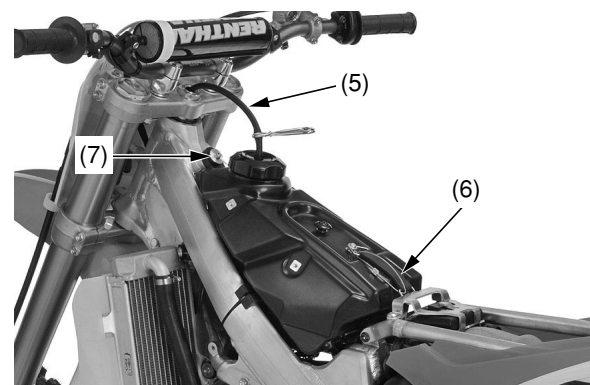

- (5) breather tube
(6) fuel tank band
(7) fuel tank bolt and collar

8. Unhook the fuel feed hose (8) from the clamp (9).




- (8) fuel feed hose (9) clamp

9. Pull the fuel tank (10) out of the frame and hang it to the left of the frame.
Check the fuel tank stopper cable (11) for deterioration, kinks or other damage.
Do not support the fuel tank by the fuel feed hose (8).

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

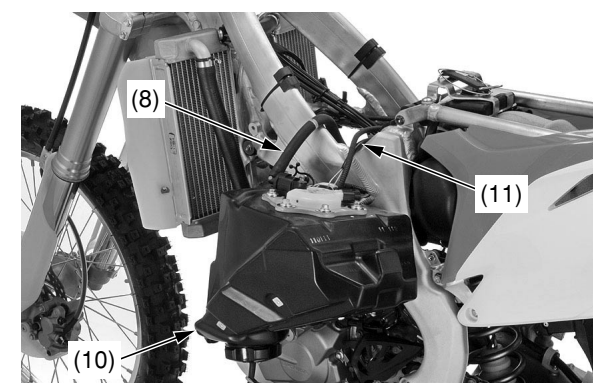

- (8) fuel feed hose (11) fuel tank stopper cable
(10) fuel tank

10. Check for interference between the frame and tank and adjust the cushion rubbers (12) if necessary.

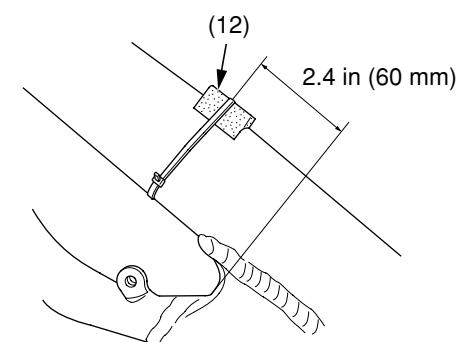

- (12) cushion rubbers

Fuel Tank


Installation

1. Install the fuel feed hose (1) to the clamp (2) if it is removed.




(1) fuel feed hose (2) clamp

2. Install the fuel tank (3) on the frame.
3. Install the collar and fuel tank bolt (4).
4. Hook the fuel tank band (5).

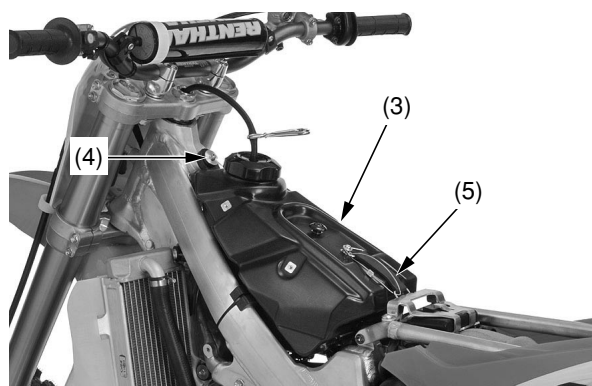


(3) fuel tank (4) collar and fuel tank bolt (5) fuel tank band

5. Put the breather tube (6) in the steering stem nut (7).
6. Remove the hose clamp (8) from the breather tube.

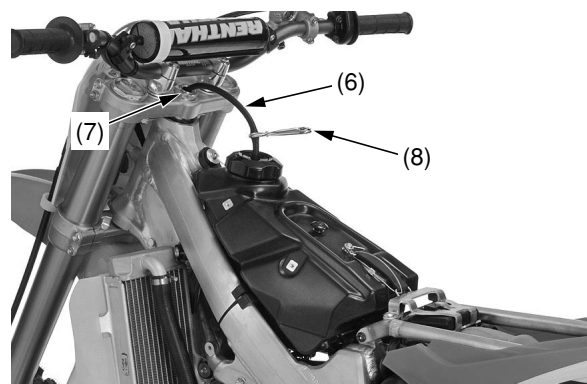

(6) breather tube (7) steering stem nut (8) hose clamp

7. Install the shrouds (9) by aligning shroud tabs (10) with the air cleaner housing cover tabs (11).

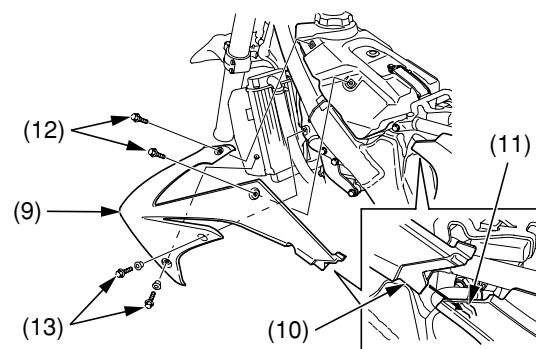


(9) shrouds
(10) shroud tabs
(11) air cleaner housing cover tabs
(12) shroud B bolts
(13) collars and shroud A bolts

Subframe

Refer to *Safety Precautions* on page 23.


Removal

1. Remove the side covers (1) by removing the seat mounting bolts (2) and bolts (3).
2. Remove the seat (4).

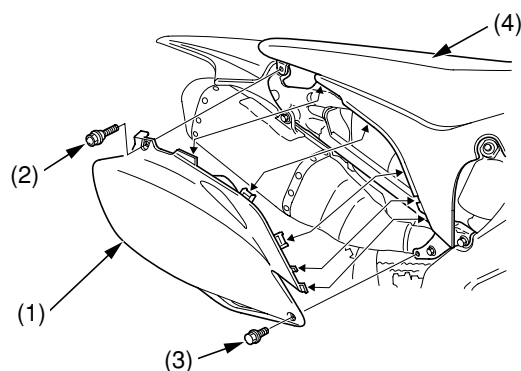


- (1) side covers (3) bolts
(2) seat mounting bolts (4) seat

3. Loosen the muffler clamp bolt (5).

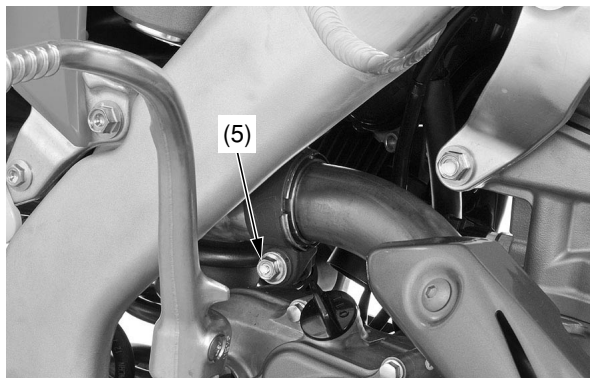


- (5) muffler clamp bolt

4. Remove the muffler mounting A bolt (6), muffler mounting B bolt (7), washer A (8), washer B (9) and muffler (10).

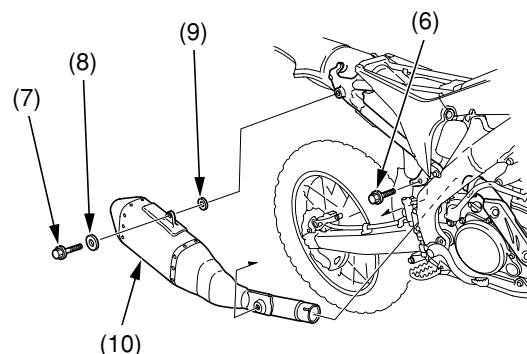


- (6) muffler mounting A bolt (9) washer B
(7) muffler mounting B bolt (10) muffler
(8) washer A

5. Disconnect the IAT sensor connector (11).

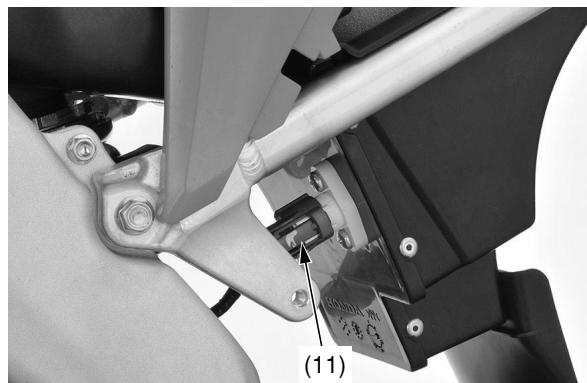


- (11) IAT sensor connector

6. Remove the ECM mounting rubber (12) from the ECM bracket (13). Unhook the fuel tank band (14).

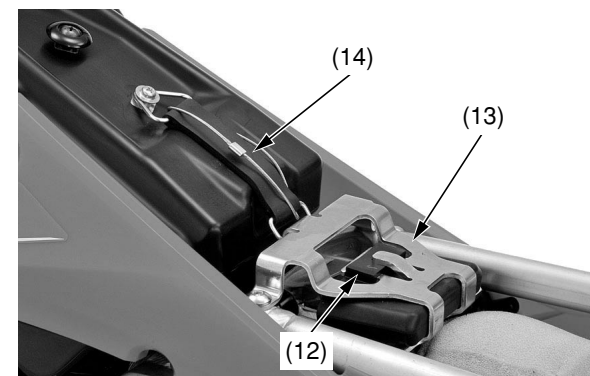

- (12) ECM mounting rubber
(13) ECM bracket
(14) fuel tank band


7. Loosen the screw (15) on the air cleaner connecting tube clamp (16).

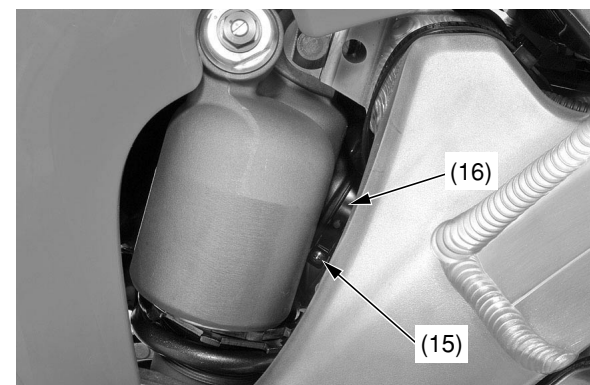

- (15) screw
(16) air cleaner connecting tube clamp

Subframe


8. Remove the right subframe lower bolt (17) and left subframe lower bolt (18).
Remove the subframe upper bolts (19).

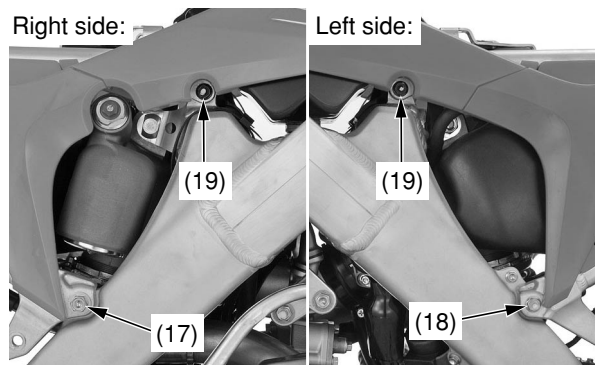

(17) right subframe lower bolt
(18) left subframe lower bolt
(19) subframe upper bolts

9. Slightly pull the subframe (20) backward and disconnect the crankcase breather tube (21) from the air cleaner connecting tube. Remove the subframe.


Be careful not to damage the ECM and wires.

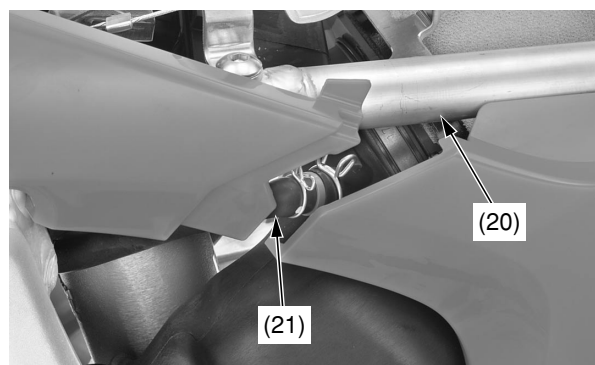

(20) subframe
(21) crankcase breather tube


Installation

1. Connect the crankcase breather tube (1).

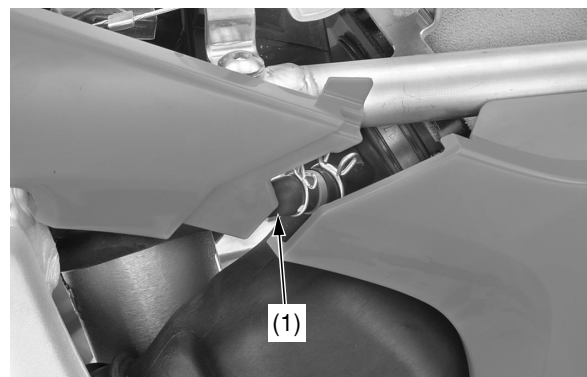

(1) crankcase breather tube

2. Position the ECM (2) in the bracket (3).
3. Align the shroud tabs (4) with the air cleaner housing cover tabs (5).
4. Loosely attach the upper and lower end of the subframe to the main frame while connecting the air cleaner connecting tube (6) to the throttle body (7).
5. Loosely install all subframe bolts.

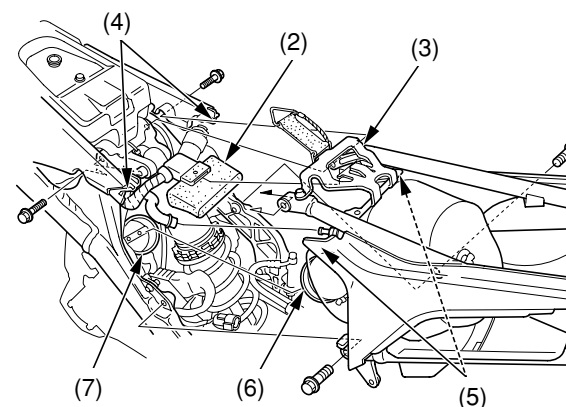

(2) ECM
(3) bracket
(4) shroud tabs
(5) air cleaner housing cover tabs
(6) air cleaner connecting tube
(7) throttle body

6. Align the subframe with the rear wheel and tighten the subframe upper bolts (8), left subframe lower bolt (9) and right subframe lower bolt (10) to the specified torque:

subframe upper bolts:


24 lbf·ft (33 N·m, 3.4 kgf·m)

left subframe lower bolt:

24 lbf·ft (33 N·m, 3.4 kgf·m)

right subframe lower bolt:

36 lbf·ft (49 N·m, 5.0 kgf·m)

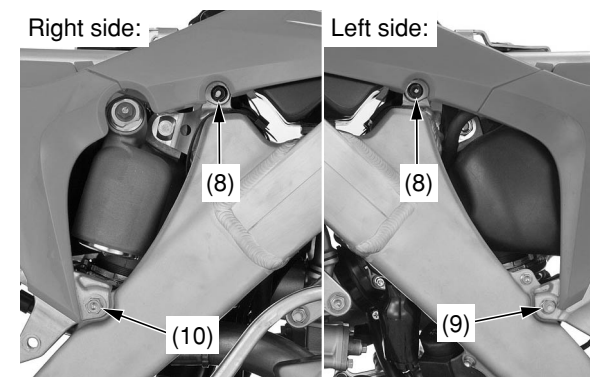


(8) subframe upper bolts
(9) left subframe lower bolt
(10) right subframe lower bolt

(cont'd)


Subframe

7. Make sure the air cleaner connecting tube tab (11) aligns with the air cleaner connecting tube clamp hole (12).

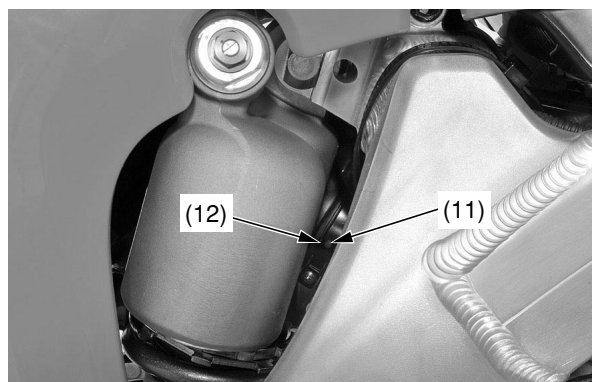


(11) air cleaner connecting tube tab
(12) air cleaner connecting tube clamp hole

8. Tighten the screw (13) on the air cleaner connecting tube clamp to the specified torque:
0.5 lbf·ft (0.7 N·m, 0.1 kgf·m)
Check the distance between the band ends is
0.18 ± 0.06 in (4.5 ± 1.5 mm).

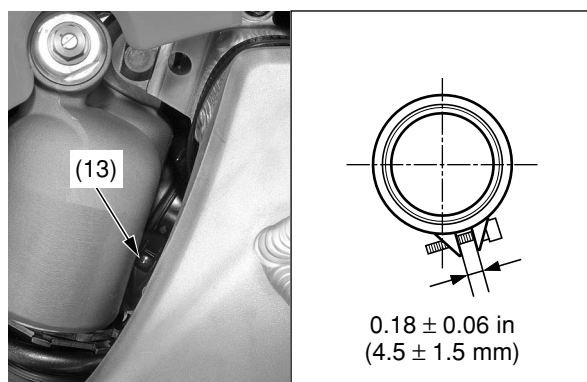


(13) screw

9. Hook the fuel tank band (14).
Install the ECM mounting rubber (15) to the ECM bracket (16).

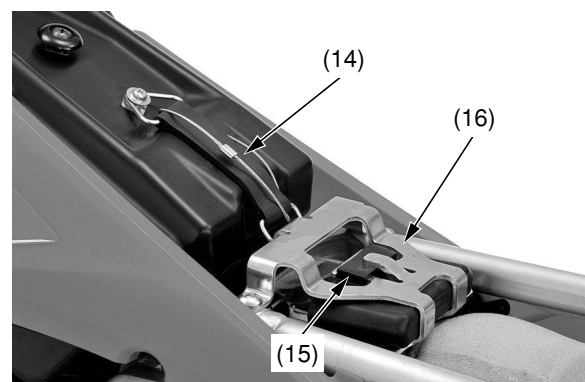


(14) fuel tank band
(15) ECM mounting rubber
(16) ECM bracket

10. Connect the IAT sensor connector (17).

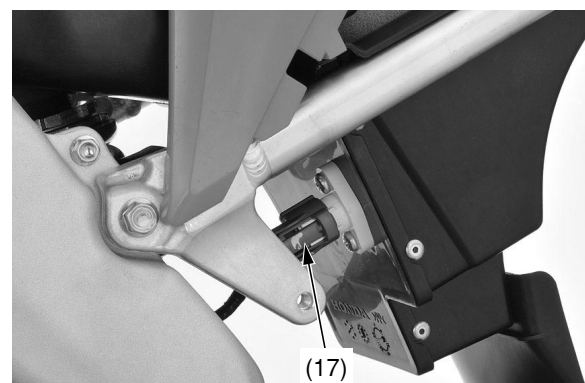


(17) IAT sensor connector

11. Remove the old gasket from exhaust pipe.
12. Install the muffler clamp (18) and a new gasket (19) to the exhaust pipe (20).

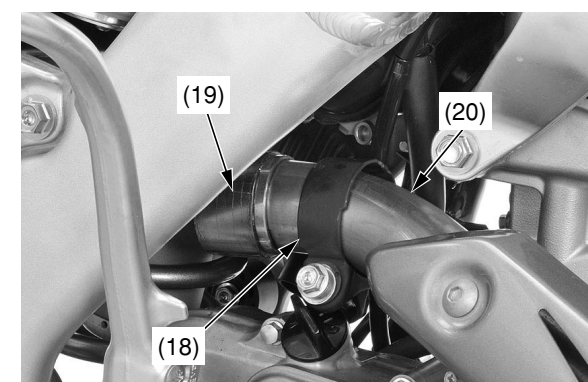

(18) muffler clamp
(19) gasket (new)
(20) exhaust pipe


13. Install the muffler (21).
14. Install the muffler clamp (18) by aligning the tab (22) of the muffler clamp with the cutout (23) of the muffler.

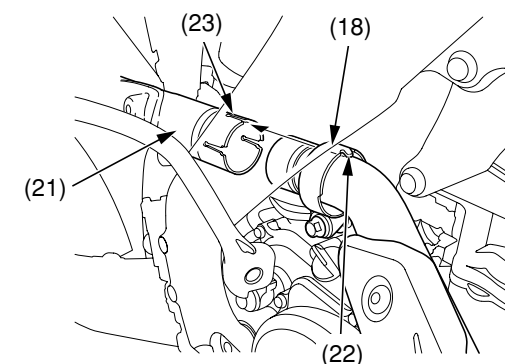

(18) muffler clamp
(21) muffler
(22) tab
(23) cutout


Subframe

15. Install the washer A (24), washer B (25), muffler mounting B bolt (26) and muffler mounting A bolt (27).

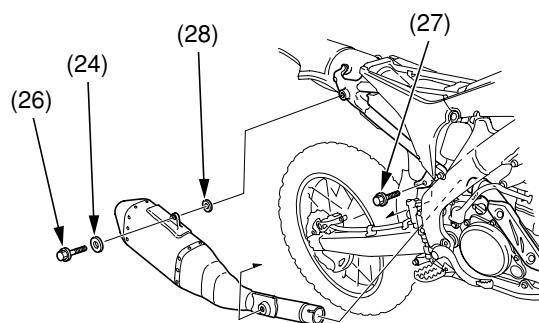

- (24) washer A
(25) washer B
(26) muffler mounting B bolt
(27) muffler mounting A bolt

16. Tighten the muffler clamp bolt (28) to the specified torque:
15 lbf·ft (21 N·m, 2.1 kgf·m)

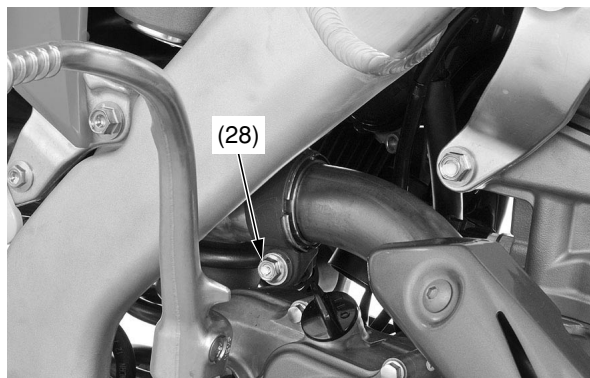

(28) muffler clamp bolt

17. Tighten the muffler mounting B bolt (26) and muffler mounting A bolt (27) to the specified torque:

19 lbf·ft (26 N·m, 2.7 kgf·m)

18. Install the seat (29).


19. Install the side covers (30), seat mounting bolts (31) and bolts (32). Then tighten the seat mounting bolts and side cover bolts to the specified torque:

seat mounting bolts:

19 lbf·ft (26 N·m, 2.7 kgf·m)

side cover bolts:

7 lbf·ft (10 N·m, 1.0 kgf·m)

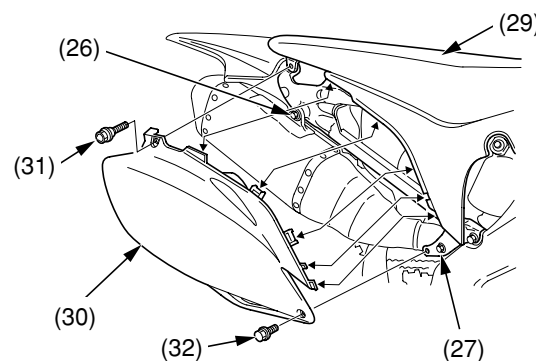

- (26) muffler mounting B bolt
(27) muffler mounting A bolt
(29) seat
(30) side covers
(31) seat mounting bolts
(32) bolts

Fuel System

Refer to *Safety Precautions* on page 23.

Fuel

Type	Unleaded
Pump Octane Number	91 (or higher)

Use only unleaded fuel in your Honda. If you ride your Honda in a country where leaded fuel might be available, take precautions to use only unleaded fuel.

Your engine is designed to use any unleaded gasoline that has a pump octane number of 91 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see page 153.

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a louder rapping noise) which, if severe, can lead to engine damage. (Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.)


If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your dealer.

Never use stale or contaminated gasoline. Avoid getting dirt, dust or water in the fuel tank.

Dirty fuel will clog the fuel pump filter and can damage the fuel pump. Commercially available fuel straining devices may reduce the occurrence of dirty fuel.

Refueling Procedure

1. To open the fuel fill cap (1), pull the breather tube (2) out of the steering stem nut (3). Turn the fuel fill cap counterclockwise and remove it.

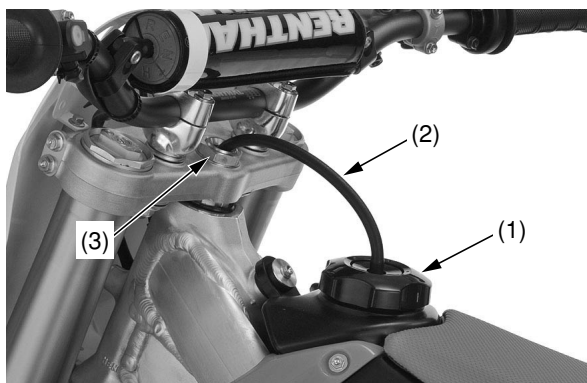

(1) fuel fill cap (3) steering stem nut
(2) breather tube

2. Add fuel until the level reaches the bottom of the filler neck.

Fuel Tank Capacity: 1.5 US gal (5.7 ℓ)
Be careful not to damage the fuel pump while filling the fuel tank.
Avoid overfilling the tank. There should be no fuel in the filler neck.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

3. Close the fuel fill cap and insert the breather tube in the steering stem nut.

Fuel Line

1. Hang the fuel tank to the left side of the frame (page 34).
2. Remove the fuel quick connect fitting cover (1).
3. Check the fuel line (2) for cracks, deterioration, damage or leakage. Replace the fuel line, if necessary.
4. Install the fuel quick connect fitting cover.
5. Install the fuel tank (page 35).

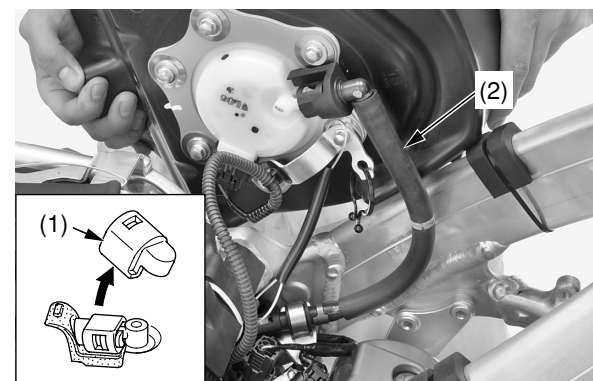


(1) fuel quick connect fitting cover
(2) fuel line

Fuel System

Fuel Pressure Relieving

1. Disconnect the fuel pump sub-harness connector (1).

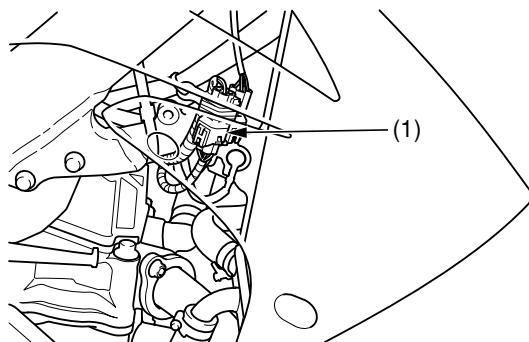

(1) fuel pump sub-harness connector

2. Start the engine and let it idle until the engine stalls.


Fuel Line Replacement

Disconnection

1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame (page 34).
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.


Injector side:

Fuel Pump side:

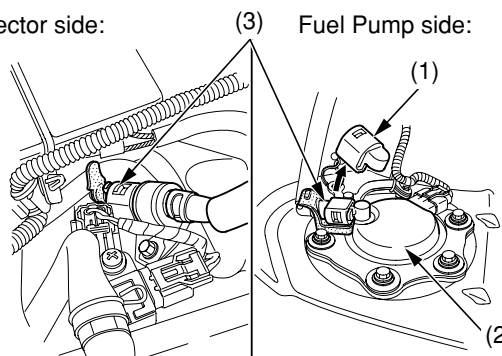

- (1) fuel quick connect fitting cover
- (2) fuel pump
- (3) fuel quick connect fitting


5. Remove the bolt (4), clamp and setting rubber (5).

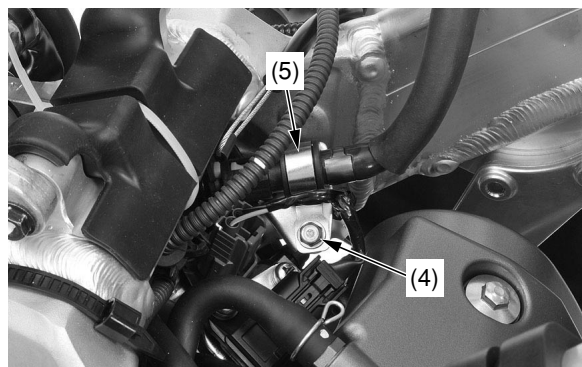

(4) bolt

(5) clamp and setting rubber

6. Pull and release the joint rubber (6) of the injector side from the retainer (7).

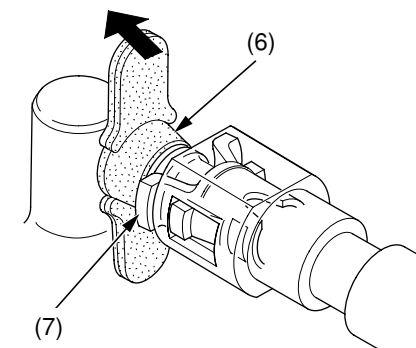


- (6) joint rubber (injector side only)
- (7) retainer

7. Place a shop towel (8) over the fuel quick connect fitting.

Injector side:

Fuel Pump side:

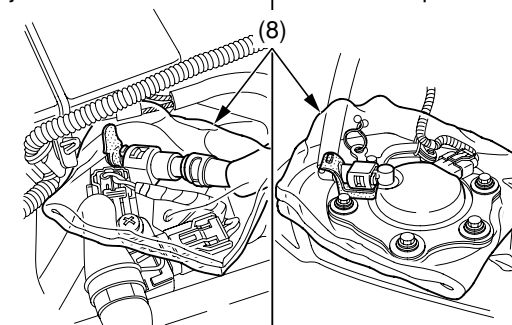

(8) shop towel

(cont'd)

Fuel System

8. Hold the connector with one hand and squeeze the retainer tabs (9) with the other hand to remove them from the locking pawls (10). Pull the connector off, then remove the retainer.


- Use a shop towel to absorb the remaining fuel in the fuel feed hose.
- Be careful not to damage the hose or other parts.
- Do not use tools.
- If the connector does not move, keep the retainer tabs pressed down, and alternately pull and push the connector until it comes off easily.

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Injector side:

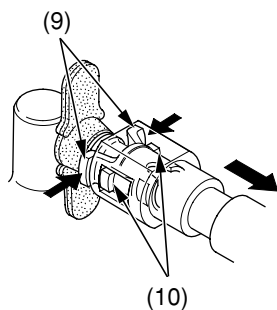


(9) retainer tabs
(10) locking pawls

Fuel Pump side:

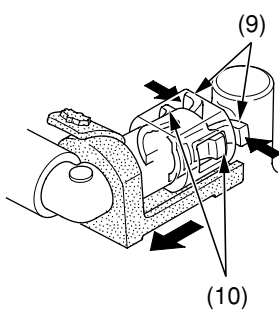

9. To prevent damage and keep foreign matter out, cover the disconnected connectors (11) and fuel joints (12) with plastic bags (13).

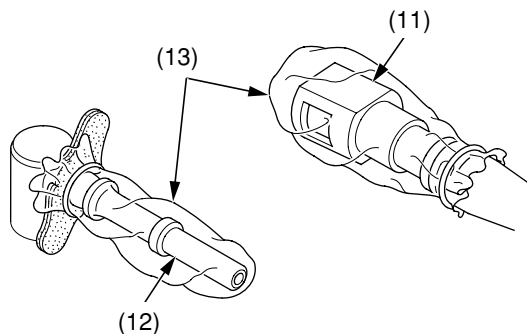


(11) disconnected connector
(12) fuel joint
(13) plastic bags

Connection

1. Insert a new retainer (1) into the connector (2) by aligning its locking pawls (3) with the connector grooves (4).

- Always replace the retainer of the quick connect fitting when the fuel feed hose is disconnected.
- If the joint rubber is damaged or cut, replace it with a new one.
- Do not bend or twist the fuel feed hose.
- If any retainer needs replacing, use the same manufacture's retainer as the ones being removed (The various manufacture's feature different retainer specification).

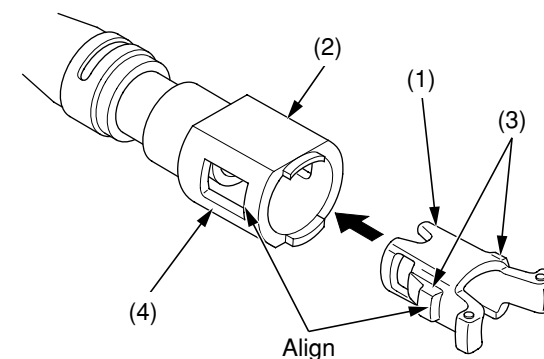


(1) retainer (new)
(2) connector

(3) locking pawls
(4) connector grooves

Fuel System


2. Install the joint rubber (5) and seat it onto the fuel joint as shown. Align the fuel quick connect fitting with the fuel joint. Then press the quick fitting onto the pipe of the fuel joint until both retainer pawls lock with a “click”.

If it is hard to connect, put a small amount of engine oil on the pipe end.

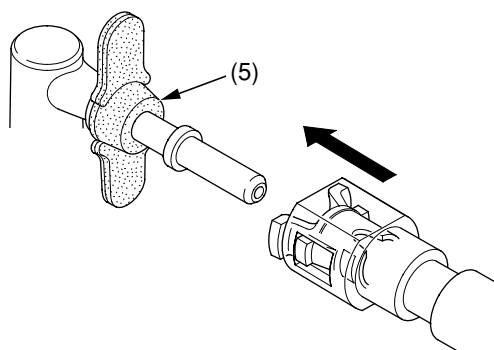


(5) joint rubber (injector side only)

3. Make sure the connection is secure and that the pawls are firmly locked into place; check visually and by pulling the connector.
4. Make sure the joint rubber (5) is in place between the flange (6) and retainer tab (7).

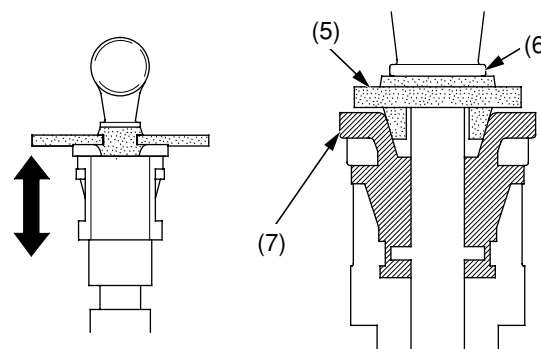

(5) joint rubber (injector side only)
(6) flange
(7) retainer tab


5. Install the rubber (8), clamp (9) and bolt (10) by aligning the clamp tab (11) with the groove (12) of the stay.

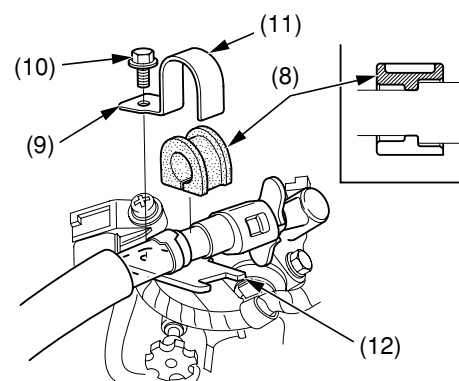

(8) rubber
(9) clamp
(10) bolt
(11) clamp tab
(12) groove

6. Install the fuel quick connect fitting cover (13) and set the rubber cover tab (14) to the hole (15) of the fuel quick connect fitting cover.

Be sure the rubber cover (16) is properly installed between the fuel quick connect fitting cover and fuel pump.

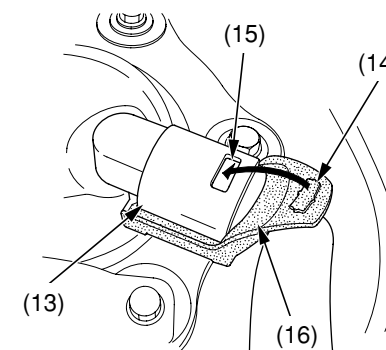

(13) fuel quick connect fitting cover
(14) rubber cover tab
(15) fuel quick connect fitting cover hole
(16) rubber cover

7. Install the fuel tank (page 35).
8. Increase the fuel pressure (page 48).

Fuel System

Fuel Pump Filter Replacement

Empty the fuel tank into an approved gasoline container using a commercially available hand siphon or an equivalent method.

Be careful not to damage the fuel pump while draining the fuel in the fuel tank.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Removal

1. Relieve the fuel pressure (page 41).
2. Disconnect the fuel line (page 41).
3. Remove the fuel pump mounting bolts (1), stopper cable guide (2), stopper cable (3), washers (4), collars (5), conical spring washers (6) and fuel pump plate (7) while holding the fuel tank.
4. Remove the fuel tank.


Be careful not to drop the fuel tank when removing the stopper cable.

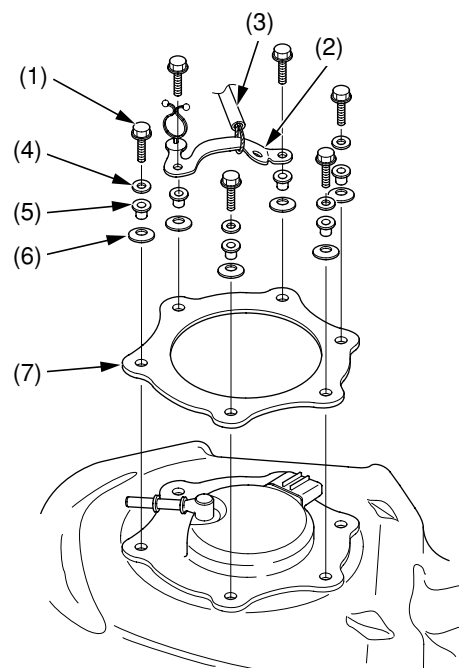

- (1) fuel pump mounting bolts
- (2) stopper cable guide
- (3) stopper cable
- (4) washers
- (5) collars
- (6) conical spring washers
- (7) fuel pump plate

5. Remove the fuel pump unit (8) and O-rings (9).


Be careful not to damage the fuel pump unit.

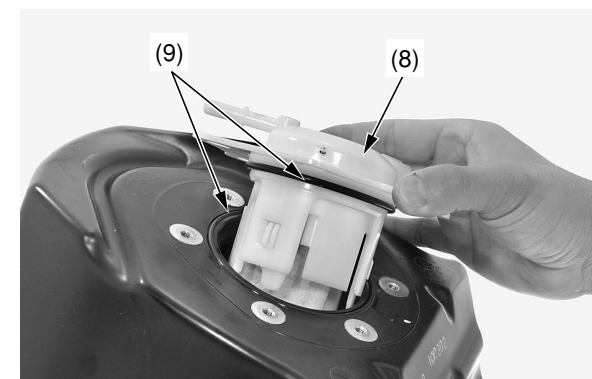

- (8) fuel pump unit
- (9) O-rings

6. Disconnect the fuel pump wire terminals (10) from the fuel pump base (11).

Be careful not to damage the wires when disconnecting the fuel pump wire terminals.

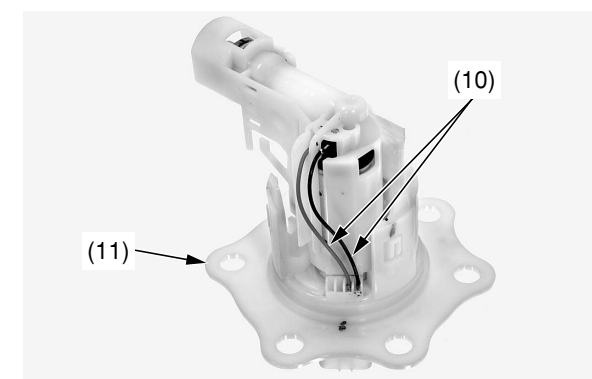


- (10) fuel pump wire terminals
- (11) fuel pump base

Fuel System

7. Check the hooks (12) of the fuel pump unit holder and tabs (13) on the fuel pump base for damage or discoloration.
If the hooks and tabs are damaged or discolored, replace the fuel pump unit as an assembly.
8. Release the hooks of the fuel pump unit holder from the grooves (14) on the fuel pump base tabs while pushing the holder against the base and slightly spreading the base tabs.

Be careful not to damage the hooks and tabs.

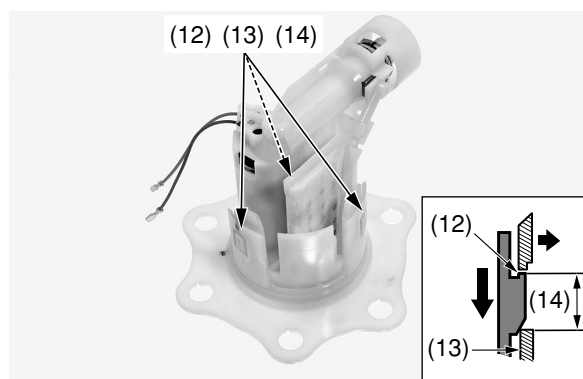


(12) hooks
(13) tabs

(14) grooves


9. Remove the fuel pump unit holder assembly (15) from the fuel pump base (11) and remove the O-ring (16).

Wipe the spilled out fuel immediately.

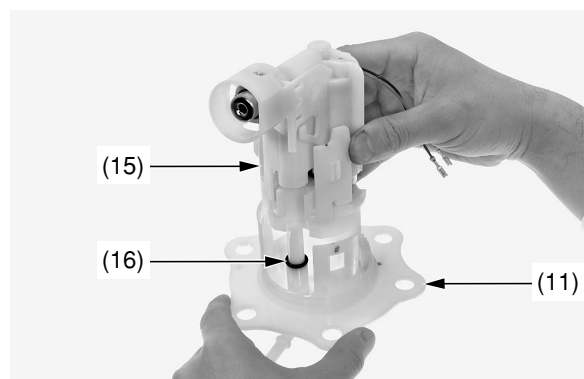


(11) fuel pump base
(15) fuel pump unit holder assembly
(16) O-ring

10. Remove the fuel pump stopper (17) and damper rubber (18).

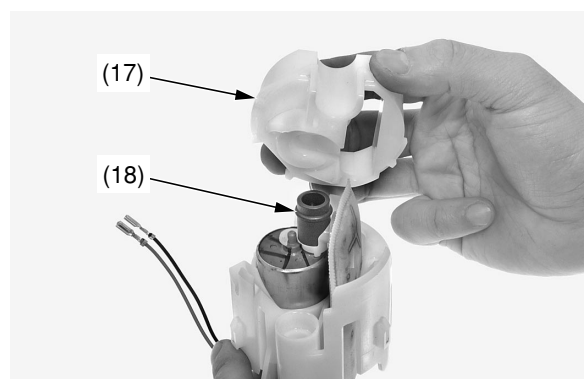

(17) fuel pump stopper
(18) damper rubber

11. Remove the fuel pump assembly (19) with fuel pump filter (20), O-ring (21) from the fuel pump unit holder (22).

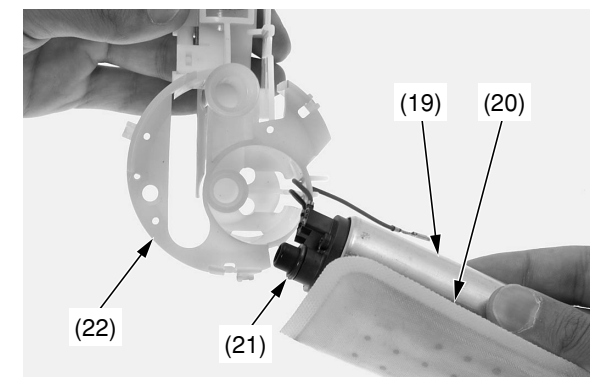

(19) fuel pump assembly
(20) fuel pump filter
(21) O-ring
(22) fuel pump unit holder

12. Check the fuel pump filter (20) for clog, damage or deterioration and replace if necessary.
13. Remove the fuel pump filter from the fuel pump assembly (20).



(19) fuel pump assembly


(20) fuel pump filter

Fuel System

Installation


1. Install a new fuel pump filter (1) onto the fuel pump assembly (2) aligning its hook (3) with the joint boss (4) completely.

Be careful not to damage the hook.

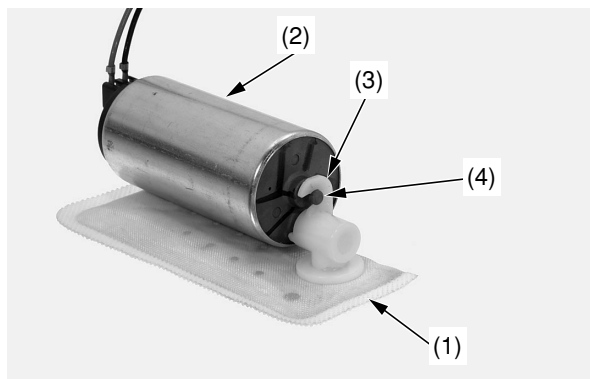


(1) new fuel pump filter
(2) fuel pump assembly
(3) hook
(4) joint boss

2. Apply a small amount of silicone grease to a new O-ring (5).
Install a new O-ring to the fuel pump assembly (2).
3. Install the fuel pump assembly with fuel pump filter into the fuel pump unit holder (6) while routing the fuel pump red (7) and black (8) wires through the holder grooves (9) as shown.

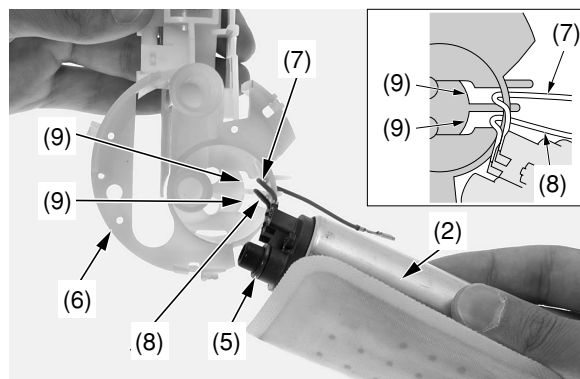

(2) fuel pump assembly
(5) O-ring (new)
(6) fuel pump unit holder
(7) red wire
(8) black wire
(9) grooves


4. Install a new damper rubber (10) to the fuel pump filter as shown.
Install the fuel pump stopper (11).

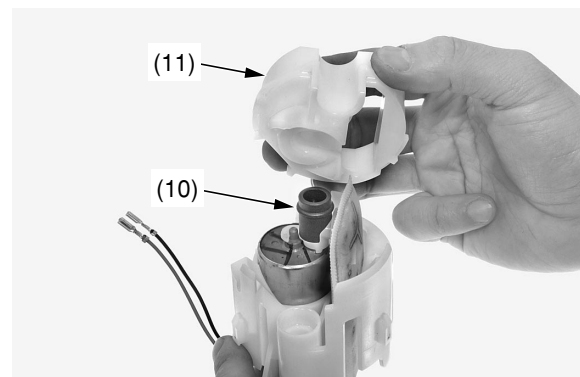

(10) new damper rubber
(11) fuel pump stopper

5. Apply a small amount of silicone grease to a new O-ring (12).
Install a new O-ring to the fuel pump base (13).
6. Install the fuel pump unit holder assembly (14) into the fuel pump base while aligning its hooks (15) with the grooves (16) in the fuel pump base tabs (17).
If the gap between the hooks and tabs is more than 0.04 in (1.0 mm), replace the fuel pump unit.

Be sure that the hooks are completely seated.

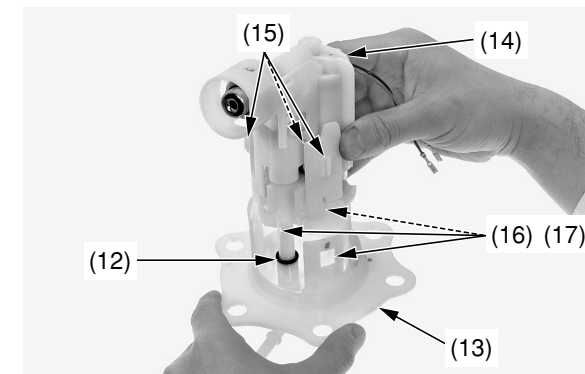



(12) O-ring (new)
(13) fuel pump base
(14) fuel pump unit holder assembly
(15) hooks
(16) grooves
(17) tabs

Fuel System

7. Connect the fuel pump red (18) and black (19) wire terminals to the fuel pump base terminals (20).
Push the wire terminals until they stop as shown.

Be careful not to damage the wires.


8. Apply 0.5 g maximum of engine oil to a new O-ring (21).
Install a new O-ring onto the fuel pump unit (22).

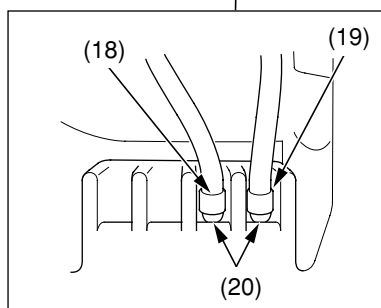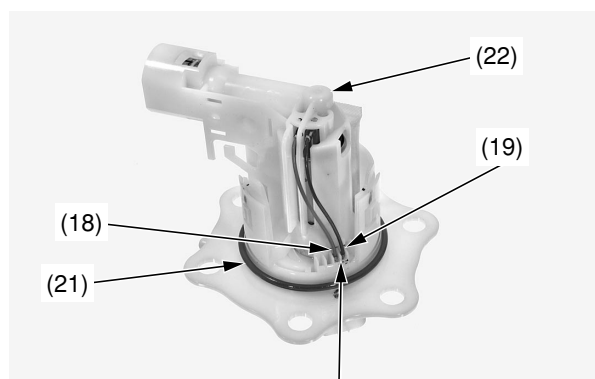

- (18) red wire terminal
(19) black wire terminal
(20) fuel pump base terminals
(21) O-ring (new)
(22) fuel pump unit


9. Install a new O-ring (23) into the fuel tank groove.
10. Install the fuel pump unit (24) into the fuel tank (25).

Be careful not to damage the wires.

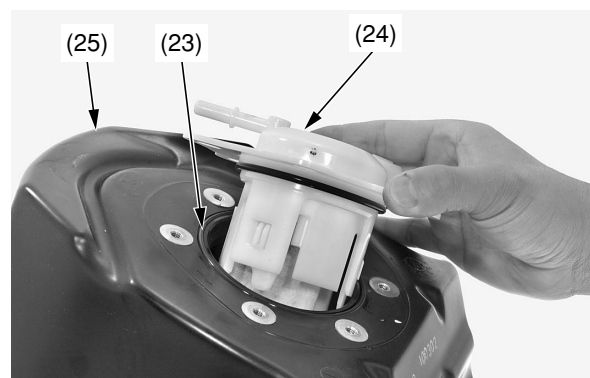

- (23) O-ring (new)
(24) fuel pump unit
(25) fuel tank


11. Install the fuel pump plate (26) with its identification mark (27) facing toward the front side and facing up.

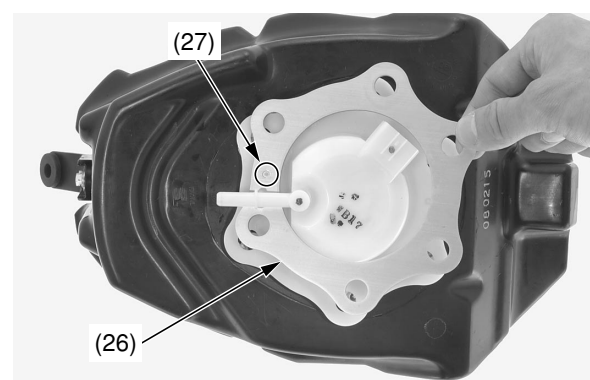

- (26) fuel pump plate
(27) identification mark


12. Install the conical spring washers (28), collars (29), washers (30), stopper cable (31), stopper cable guide (32) and fuel pump mounting bolts (33).
13. Install the fuel tank.

Make sure that the convex surface of the conical spring washers are upside.

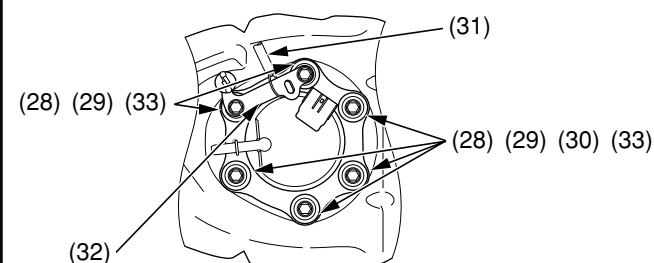

- (28) conical spring washers
(29) collars
(30) washers
(31) stopper cable
(32) stopper cable guide
(33) fuel pump mounting bolts

14. Tighten the fuel pump mounting bolts to the specified torque in the specified sequence as shown.
8 lbf·ft (11 N·m, 1.1 kgf·m)

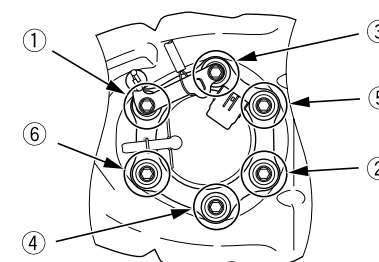


15. Connect the fuel line (page 42).
16. Increase the fuel pressure (page 48).

Fuel System

Fuel Pressure Increasing


Make sure the fuel remains enough (0.3 US gal (1.0 ℓ) minimum) in the fuel tank and add fuel if necessary before increasing fuel pressure.

1. Connect the fuel pump sub-harness connector (1).

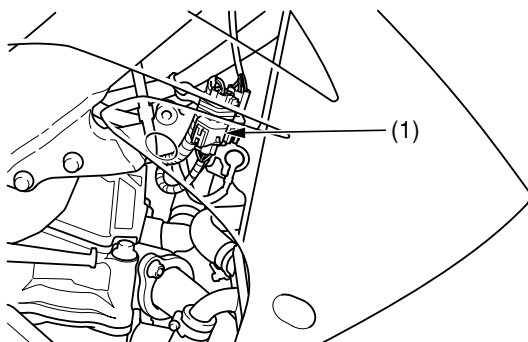

(1) fuel pump sub-harness connector


2. Before connecting the battery harness cables to a 12V battery, make sure that the battery harness selector switches are OFF.
3. Connect the battery harness (2) and battery harness adapter (3) between the main and sub-harness as shown.
Connect the battery harness positive (+) cable first, then connect the battery harness negative (–) cable to a 12V battery terminals.
 - Battery harness 070MZ-MEN0100
 - Battery harness adapter 070MZ-KRN0100

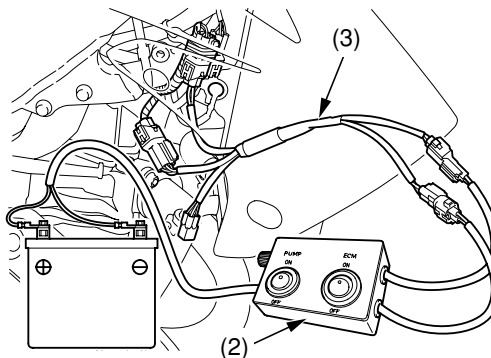

(2) battery harness
(3) battery harness adapter

4. Position the fuel tank on the main frame.
5. Turn the “PUMP” selector switch (4) ON.
The selector switches can be used to change power delivery as follows:
 - “ECM” selector switch ON:
Power to ECM only.
 - “PUMP” selector switch ON:
Power to fuel pump only.
 - Both selector switches ON:
Power to ECM and fuel pump.

6. Run the fuel pump for about 3 – 5 seconds, and fuel pressure will rise.
7. Turn the “PUMP” selector switch OFF.
Check that there is no leakage in the fuel line.

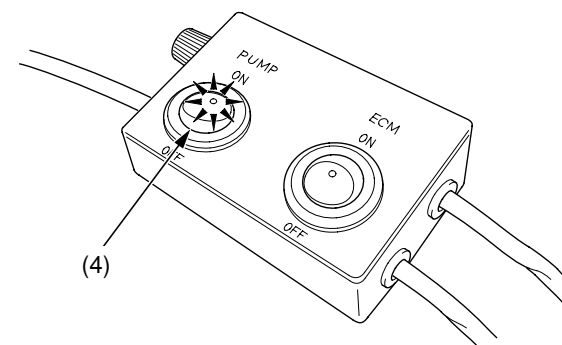

(4) “PUMP” selector switch

8. Remove the battery harness.

Engine Oil

Refer to *Safety Precautions* on page 23.

Using the proper oil, and regularly checking, adding, and changing oil will help extend the service life of the engine. Even the best oil wears out. Changing oil helps get rid of dirt and deposits. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine.

Oil Recommendation

API classification	SG or higher except oils labeled as energy conserving on the circular API service label
viscosity (weight)	SAE 10W-30
JASO T 903 standard	MA
suggested oil*	Pro Honda GN4 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil*

* Suggested 4-stroke engine oils are equal performance to SJ oils that are not labeled as energy conserving on the circular API service label.

- Your CRF does not need oil additives. Use the recommended oil.
- Do not use API SH or higher 4-stroke engine oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication.




NOT RECOMMENDED




OK

Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

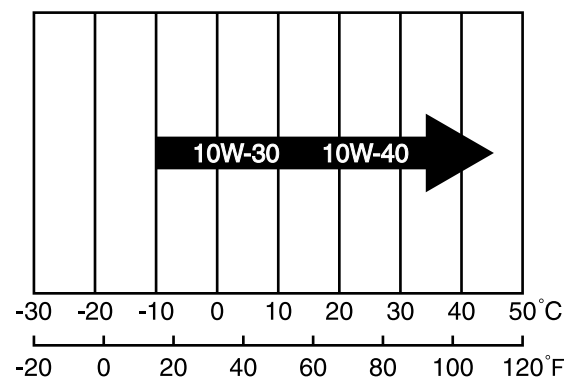

JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

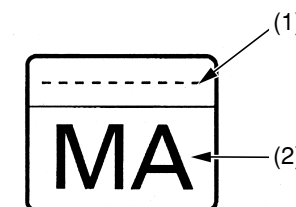


- (1) oil code
(2) oil classification


Engine Oil

Checking & Adding Oil


1. Run the engine at idle for 3 minutes, then shut it off.
2. Wait 3 minutes after shutting off the engine to allow the oil to properly distribute itself in the engine.
3. Support the CRF in an upright position on a level surface.
4. Remove the engine oil fill cap/dipstick (1), wipe it clean, and insert the engine oil fill cap/dipstick without screwing it in. Remove the oil fill cap/dipstick.
5. Check that the oil level is between the upper (2) and lower (3) level marks on the engine oil fill cap/dipstick.
 - If the oil is at or near the upper level mark, you do not have to add oil.
 - If the oil is below or near the lower level mark, add the recommended oil until it reaches the upper level mark. (Do not overfill)
 Reinstall the engine oil fill cap/dipstick. Repeat steps 1–5.

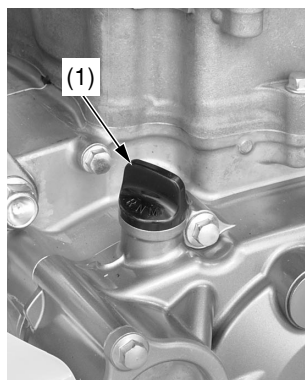

(1) engine oil fill cap/dipstick
(2) upper level mark
(3) lower level mark

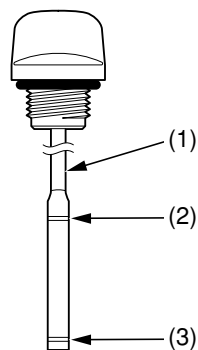

6. Check that the O-ring (4) is in good condition and replace it if necessary.
7. Reinsert the engine oil fill cap/dipstick (1).

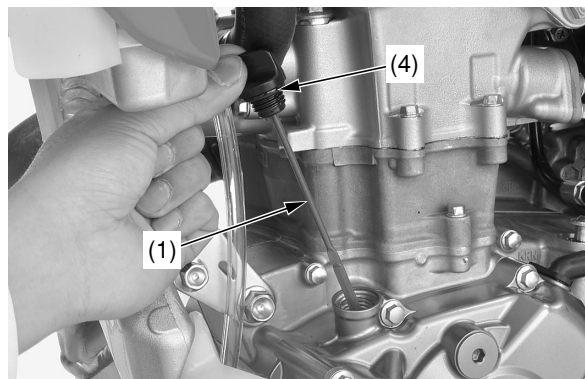

(1) engine oil fill cap/dipstick
(4) O-ring


8. Check for oil leaks.

Changing Engine Oil & Filter

1. Run the engine at idle for 3 minutes, then shut it off.
 2. Support the CRF in an upright position on a level surface.
 3. Remove the engine oil fill cap/dipstick (1) from the left crankcase cover.
 4. Place an oil drain pan under the engine to catch the oil. Then remove the engine oil drain bolt (2) and sealing washer (3).
 5. With the engine stop button pushed, repeat kickstarter operation approximately five times to drain the engine oil completely.
 6. After the oil has drained, apply engine oil to the drain bolt threads and tighten it with a new sealing washer to the specified torque:
12 lbf·ft (16 N·m, 1.6 kgf·m)
- Pour the drained oil into a suitable container and dispose of it in an approved manner (page 144).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

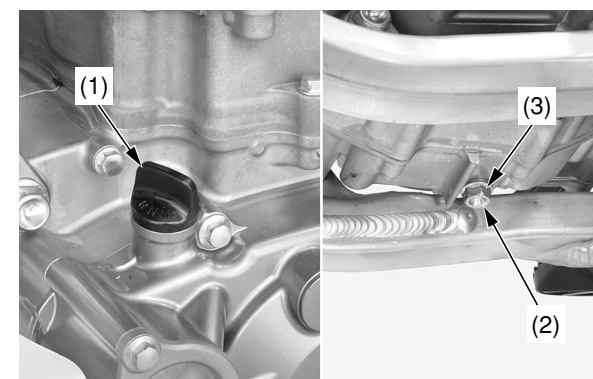

(1) engine oil fill cap/dipstick
(2) engine oil drain bolt
(3) sealing washer (new)

Transmission Oil

Refer to *Safety Precautions* on page 23.

Using the proper oil, and regularly checking, adding, and changing oil will help extend the service life of the transmission and clutch. Even the best oil wears out. Changing oil helps get rid of dirt and deposits. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine and transmission.

Oil Recommendation

API classification (4-stroke engine oil only)	SG or higher except oils labeled as energy conserving on the circular API service label
Viscosity (weight)	SAE 10W-30
JASO T903 standard	MA
others	without friction modifiers as molybdenum additives
suggested oil*	Pro Honda GN4 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil*

* Suggested 4-stroke engine oils are equal performance to SJ oils that are not labeled as energy conserving on the circular API service label.

- Your CRF does not need oil additives. Use the recommended oil.
- Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.
- Do not use API SH or higher 4-stroke engine oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication and clutch performance.




NOT RECOMMENDED




OK

Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

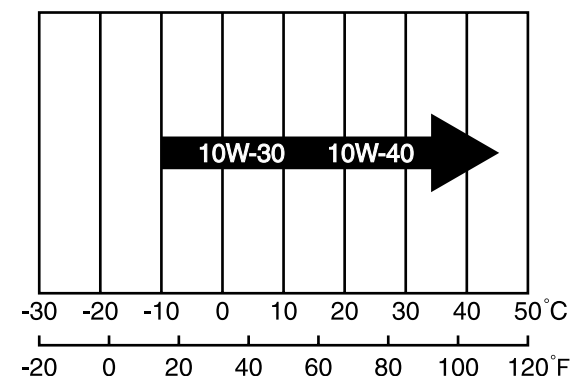

JASO T 903 standard


The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

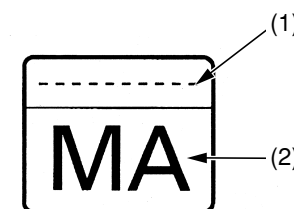

- (1) oil code
(2) oil classification

Transmission Oil


Checking & Adding Oil

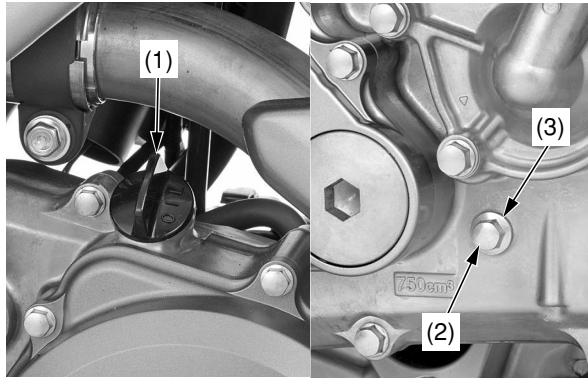

(1) transmission oil fill cap (3) sealing washer
(2) oil check bolt

1. Run the engine at idle for 3 minutes, then shut it off.
2. Wait 3 minutes after shutting off the engine to allow the oil to properly distribute itself in the clutch and transmission.
3. Support the CRF in an upright position on a level surface.
4. Remove the transmission oil fill cap (1), oil check bolt (2) and sealing washer (3) from the right crankcase cover. A small amount of oil should flow out of the oil check bolt hole. Allow any excess oil to flow out of the oil check bolt hole.
If no oil flows out of the oil check bolt hole, add oil slowly through the transmission oil filler hole until oil starts to flow out of the oil check bolt hole.
Install the oil check bolt with a new sealing washer and transmission oil fill cap. Repeat step 1– 4.
5. After inspecting the oil level or adding oil, tighten the oil check bolt to the specified torque:
Oil Check Bolt: 9 lbf·ft (12 N·m, 1.2 kgf·m).


6. Check that the O-ring (4) is in good condition and replace it if necessary.
7. Reinstall the transmission oil fill cap (1).
8. Check for oil leaks.

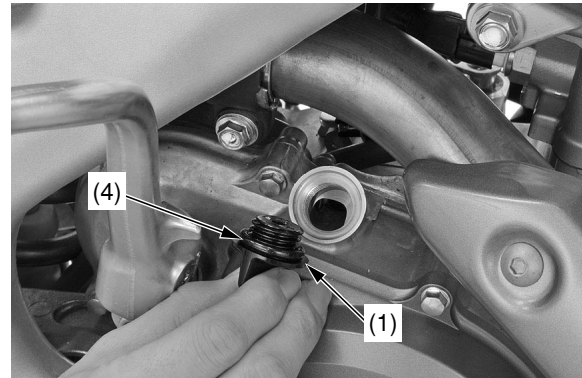

(1) transmission oil fill cap
(4) O-ring

Replacing Transmission Oil

1. Run the engine at idle for 3 minutes, then shut it off.
2. Support the CRF in an upright position on a level surface.
3. Remove the transmission oil fill cap (1) from the right crankcase cover.
4. Place an oil drain pan under the engine to catch the oil. Then remove the transmission oil drain bolt (2) and sealing washer (3).
5. After the oil has drained, apply fresh engine oil to the transmission oil drain bolt threads.
6. Install and tighten the transmission oil drain bolt with a new sealing washer to the specified torque:
12 lbf·ft (16 N·m, 1.6 kgf·m)

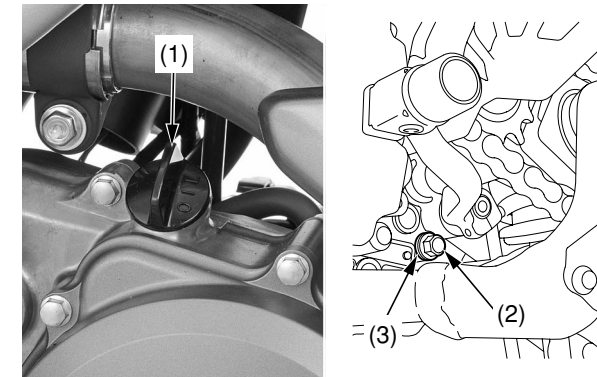

(1) transmission oil fill cap
(2) transmission oil drain bolt
(3) sealing washer

7. Fill the crankcase with recommended oil.
Capacity: 0.72 US qt (0.68 ℓ) after draining
8. Install the transmission oil fill cap.
9. Check the transmission oil level by following the steps in *Checking & Adding Oil* (this page).

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 144).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Coolant

Your CRF's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

Coolant Recommendation

Use Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. Check the antifreeze container label.

Use only distilled water as a part of the coolant solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of water seals or blockage of radiator passages. Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.

Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

Checking & Adding Coolant


Refer to *Safety Precautions* on page 23.

1. With the engine cold, remove the radiator cap (1) and check coolant level. The coolant level is correct when it is at the bottom of the radiator filler neck (2).

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

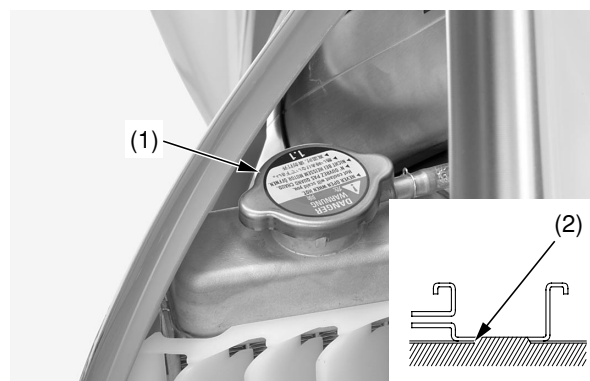

- (1) radiator cap
(2) radiator filler neck

2. Add coolant up to the filler neck if the level is low.

Inspect the coolant level before each outing. A coolant loss of 0.7 – 2.0 US oz (20 – 60 cm³) through the overflow tube is normal. If coolant loss is more than this, inspect the cooling system.

Capacity:

1.16 US qt (1.10 ℓ) after disassembly

1.09 US qt (1.03 ℓ) after draining

3. Install the radiator cap securely.


NOTICE

If the radiator cap is not installed properly, it will cause excessive coolant loss and may result in overheating and engine damage.

Coolant


Cooling System Inspection

1. Check the cooling system for leaks (see the Honda Service Manual for troubleshooting of leaks).
2. Check the water hoses (1) for cracks, deterioration, and hose clamp for looseness.
3. Check the radiator mount for looseness.
4. Make sure the overflow tube (2) is connected and not clogged.
5. Check the radiator fins for clogging.

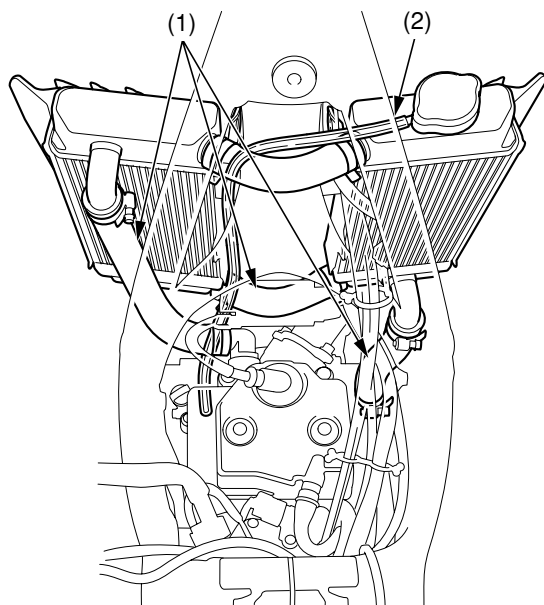

(1) water hoses
(2) overflow tube

6. Check the bleed hole (3) below the water pump cover (4) for leakage. Clean away any clogged dirt or sand, if necessary. Check for signs of seal leakage. A small amount of “coolant weeping” from the bleed hole is normal. If water leaks through the bleed hole, the mechanical seal is damaged. If oil leaks through the bleed hole, the oil seal is damaged. See an official Honda Service Manual or consult your dealer for replacing the mechanical seal or oil seal. Both seals should be replaced at the same time.

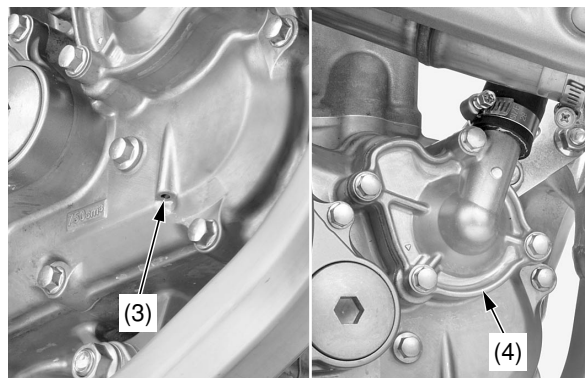

(3) bleed hole
(4) water pump cover

Coolant Replacement

Refer to *Safety Precautions* on page 23.

Coolant should be replaced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the Honda Service Manual (page 160).

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, page 144.

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Air Cleaner

Refer to *Safety Precautions* on page 23.

The air cleaner uses polyurethane inner and outer pieces which can't be separated.

A dirty air cleaner will reduce engine power.

Proper air cleaner maintenance is very important for off-road vehicles. A dirty, water-soaked, worn-out, or defective air cleaner will allow dirt, dust, mud, and other impurities to pass into the engine.

Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your dealer can help you determine the correct service interval for your riding conditions.

Your CRF's air cleaner has very specific performance requirements. Use a new Honda Genuine air cleaner specified for your model or an air cleaner of equal quality.

NOTICE

Using the wrong air cleaner may result in premature engine wear.


Proper air cleaner maintenance can prevent premature engine wear or damage, expensive repairs, low engine power, poor gas mileage, and spark plug fouling.

NOTICE

Improper or lack of proper air cleaner maintenance can cause poor performance and premature engine wear.

Cleaning


1. Remove the seat (page 33).
2. Remove the air cleaner retaining bolt (1) and air cleaner assembly (2).

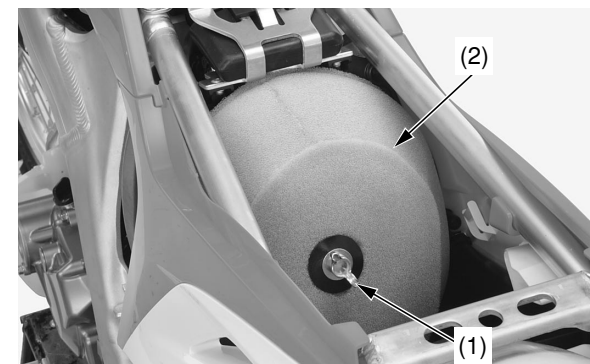

- (1) air cleaner retaining bolt
(2) air cleaner assembly


Air Cleaner

3. Remove the air cleaner element (3) from the air cleaner holder (4) by releasing the holder tab (5) from the hole (6) of the air cleaner element.

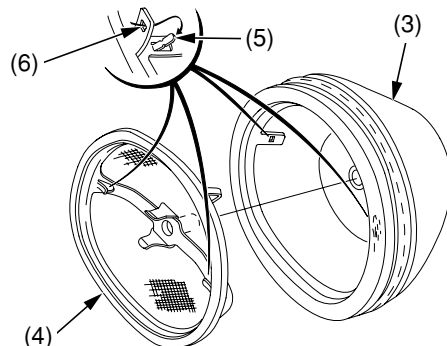


(3) air cleaner element (5) holder tab
(4) air cleaner holder (6) hole

4. Wash the air cleaner in clean non-flammable cleaning solvent. Then wash in hot, soapy water, rinse well, and allow to dry thoroughly. The air cleaner element is made in two pieces: inner and outer, which cannot be separated.
5. Clean the inside of the air cleaner housing.
6. Allow the air cleaner to dry thoroughly. After drying, apply 1.7 oz (50 cm³) of clean Pro Honda Foam Filter Oil or an equivalent air cleaner oil from the inside of the element. Place the element into a plastic bag (7) and spread the oil evenly by hand.

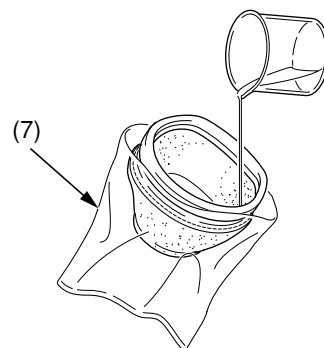

(7) plastic bag

7. Assemble the air cleaner element and holder. Install the holder tab (5) in the hole (6) of the air cleaner element.
8. Apply 0.1 – 0.2 oz (3 – 5 g) of Pro Honda White Lithium Grease or equivalent to the air cleaner housing contact area of the air cleaner element.
9. Install the air cleaner assembly (2) into the air cleaner housing by aligning its tabs (8) with the stay (9) of the air cleaner housing.
10. Carefully position the sealing flange of the element to prevent dirt intrusion.

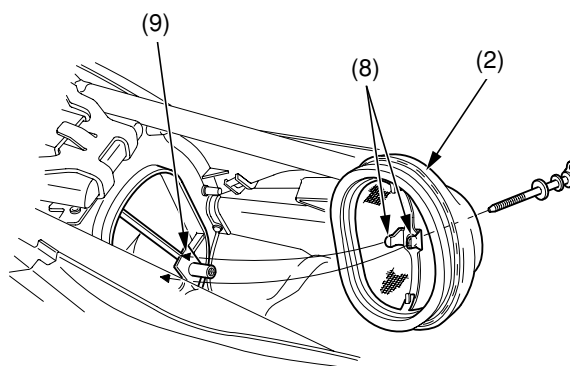

(2) air cleaner assembly
(8) air cleaner assembly tabs
(9) air cleaner housing stay

11. Install and tighten the air cleaner retaining bolt (1) securely.



(1) air cleaner retaining bolt

NOTICE

Improper installation of the air cleaner assembly may allow dirt and dust to enter the engine and cause rapid wear of the piston rings and cylinder.

12. Install the seat (page 33)

Crankcase Breather


Refer to *Safety Precautions* on page 23.

Service more frequently if your CRF is ridden in the rain or often at full throttle.

Service the breather if you can see deposits in the transparent section of the drain tube.

Draining

1. Remove the crankcase breather tube plug (1) from the tube (2) and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

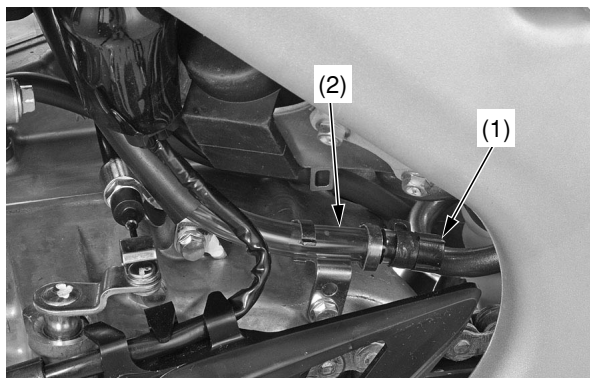


(1) crankcase breather tube plug
(2) crankcase breather tube

Throttle

Refer to *Safety Precautions* on page 23.

Throttle Freeplay

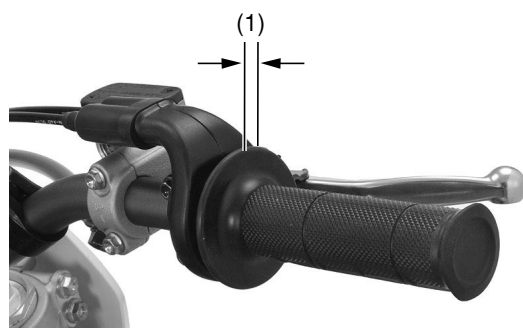

(1) freeplay

Inspection


Check freeplay (1).

Freeplay: 1/8 – 3/16 in (3 – 5 mm)

If necessary, adjust to the specified range.

Upper Adjustment

Minor adjustments are generally made with the upper adjuster.

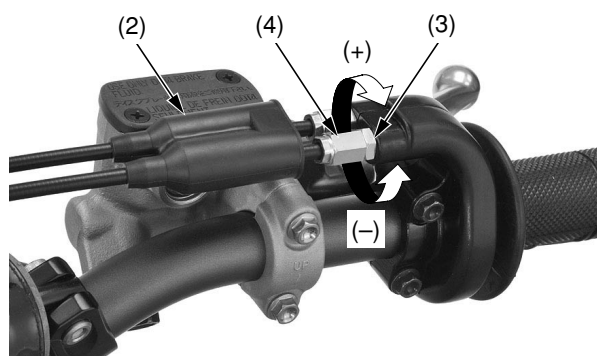


(2) dust cover
(3) lock nut
(4) upper adjuster

(+) increase
(-) decrease

1. Pull the dust cover (2) back.
2. Loosen the lock nut (3).
3. Turn the upper adjuster (4).
Turning the adjuster in direction (–) will decrease freeplay and turning it in direction (+) will increase freeplay.
4. Tighten the lock nut to the specified torque:
3.0 lbf·ft (4 N·m, 0.4 kgf·m)
Return the dust cover to its normal position.
5. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.
If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in and back out one turn. Tighten the lock nut, install the dust cover and make the adjustment with the lower adjuster.

Lower Adjustment

The lower adjuster is used for major freeplay adjustment, such as after replacing the throttle cables or removing the throttle body. It is also used if you cannot get the proper adjustment with the upper adjuster.

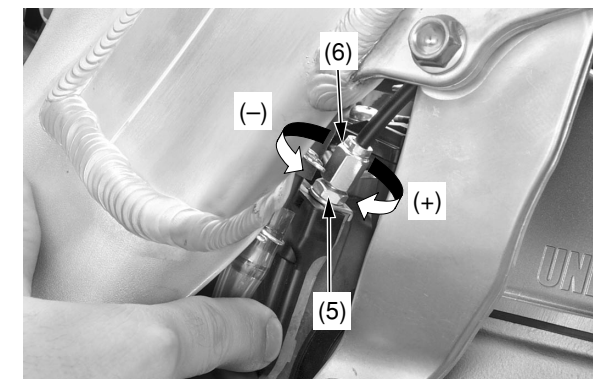

(5) lock nut
(6) lower adjuster
(+) increase
(-) decrease


1. Loosen the lock nut (5).
2. Turn the lower adjuster (6) in direction (–) to decrease freeplay, and in direction (+) to increase freeplay.
3. Tighten the lock nut to the specified torque:
3.0 lbf·ft (4 N·m, 0.4 kgf·m)
4. Operate the throttle grip to ensure that it functions smoothly and returns completely.

If you can't get the freeplay within the specified range, contact your dealer.

Throttle


Throttle Inspection

1. Check that the throttle assembly is positioned properly (the end of the throttle housing (1) is aligned with the paint mark (2) on the handlebar) and the securing bolts are tight.

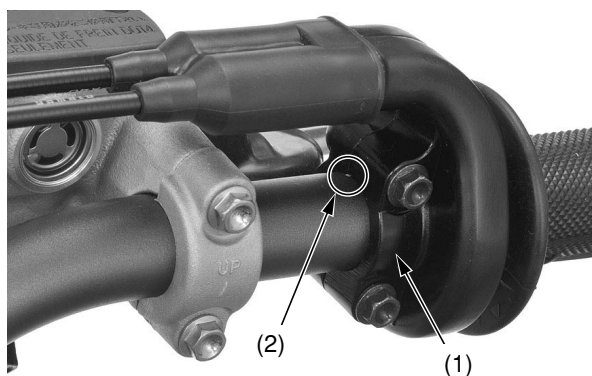

(1) throttle housing (2) paint mark

2. Check for smooth rotation of the throttle (3) from fully open to fully closed in all steering positions. If there is a problem, see your dealer.

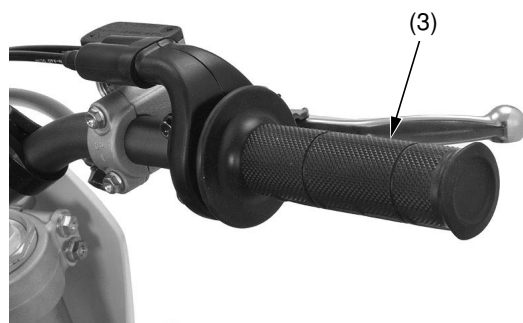

(3) throttle

3. Inspect the condition of the throttle cables from the throttle grip down to the throttle body. If the cable is kinked or chafed, have it replaced.
4. Check the cables for tension or stress in all steering positions.
5. Lubricate the cables with a commercially available cable lubricant to prevent premature rust and corrosion.

Engine Idle Speed

Refer to *Safety Precautions* on page 23.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s PGM-FI system. Adjusting the idle will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment. When pushed in, the fast idle knob acts as the idle adjust screw.

Turning it counterclockwise results in a faster/higher idle speed.

Turning it clockwise results in a slower/lower idle speed.

Idle Speed Adjustment

1. If the engine is cold, start it and warm it up 3 minutes. Then shut it off.
2. Connect a tachometer to the engine.
3. Shift the transmission into neutral. Start the engine.
4. Keep the motorcycle in an upright position.
5. Adjust idle speed with the fast idle knob (1).
Idle speed: $2,000 \pm 100$ rpm

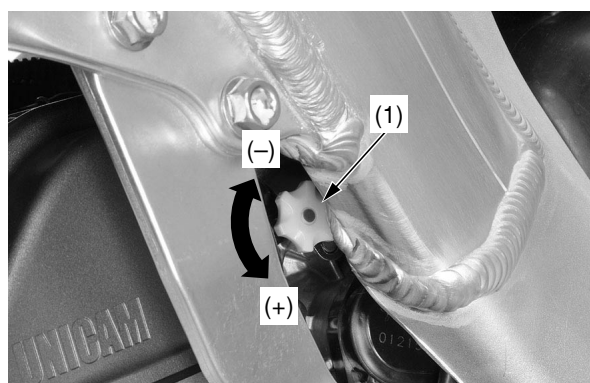

(1) fast idle knob
(+) increase
(-) decrease


Clutch System

Refer to *Safety Precautions* on page 23.

Clutch Lever Adjustment

The distance between the tip of the clutch lever and grip may be adjusted.


Make sure to adjust the clutch lever freeplay after the clutch lever position adjustment or clutch cable disconnected.

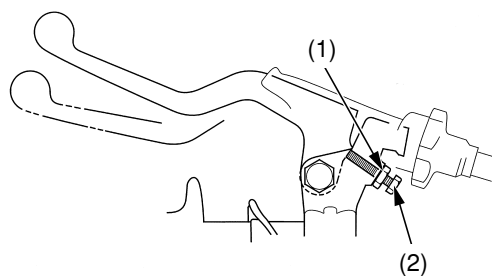

(1) lock nut (2) adjuster


1. Loosen the lock nut (1).
2. To position the clutch lever farther away from the handgrip, turn the adjuster (2) counterclockwise. To position the brake lever closer to the handgrip, turn the adjuster clockwise.
3. Tighten the lock nut.

4. Turn the cable end adjuster (3) in direction (+) until it seats lightly and then turn it out 5 turns.

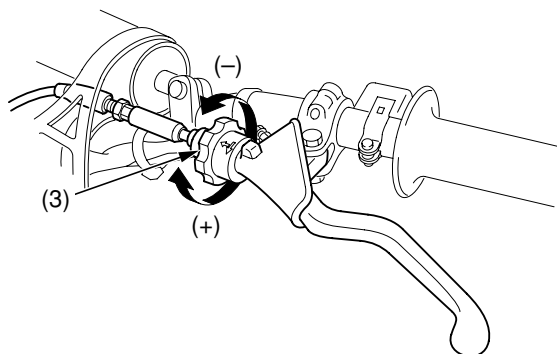

(3) cable end adjuster
(+) increase freeplay
(-) decrease freeplay


5. Loosen the lock nut (4) and turn the integral cable adjuster (5) to adjust the clutch lever freeplay $3/8 - 13/16$ in (10 – 20 mm) at the tip of lever. Tighten the lock nut.

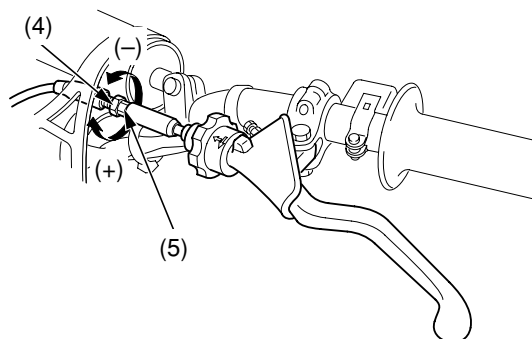

(4) lock nut
(5) integral cable adjuster
(+) increase freeplay
(-) decrease freeplay

6. Adjust the cable end adjuster for minor adjustment.

Clutch Lever Freeplay

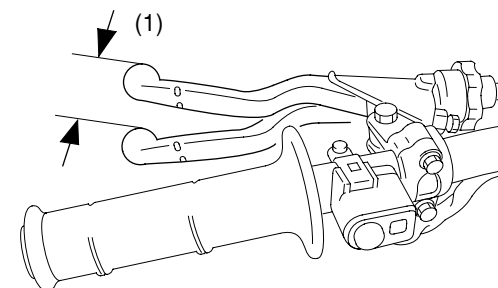

(1) freeplay

Inspection

Check freeplay (1).

Freeplay: $3/8 - 13/16$ in (10 – 20 mm)


If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.

Make sure to adjust the clutch lever freeplay after the clutch cable is disconnected.

Clutch System

Cable End Adjustment

Minor adjustments are generally made with the clutch cable end adjuster.

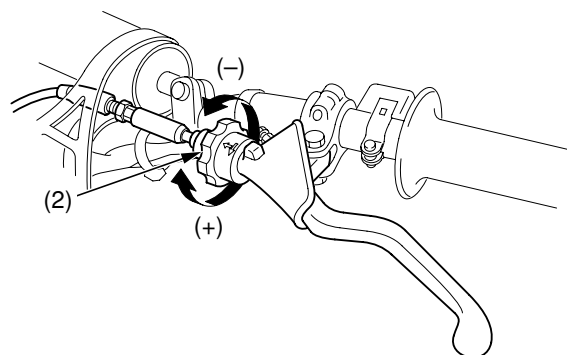


(2) cable end adjuster
(+) increase freeplay
(-) decrease freeplay

Turning the cable end adjuster (2) in direction (+) will increase freeplay and turning it in direction (-) will decrease freeplay.

If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in direction (+) and back out one turn in direction (-) and make the adjustment with the integral cable adjuster.

Integral Cable Adjustment

The integral cable adjuster is used if the cable end adjuster is threaded out near its limit — or the correct freeplay cannot be obtained.

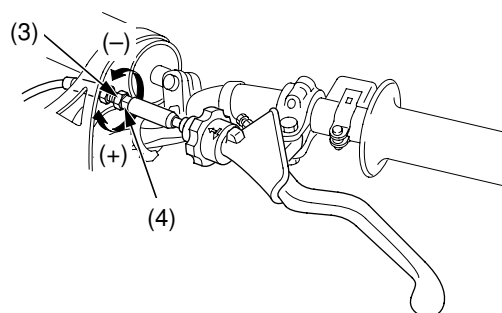


(3) lock nut
(4) integral cable adjuster
(+) increase
(-) decrease

1. Turn the cable end adjuster in direction (+) until it seats lightly and then turn it out 5 turns.
2. Loosen the lock nut (3).
3. Turn the integral cable adjuster (4) to obtain the specified freeplay.
4. Tighten the lock nut. Check the adjustment.
5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your CRF should move smoothly and accelerate gradually.

If you can't get proper adjustment, or the clutch does not work properly, the cable may be kinked or worn, or the clutch discs may be worn. Inspect the clutch discs and plates (page 65).

Other Inspections & Lubrication

- Check that the clutch lever assembly is positioned properly (the end of the holder (1) aligned with the paint mark (2) on the handlebar) and the securing bolts are tight.

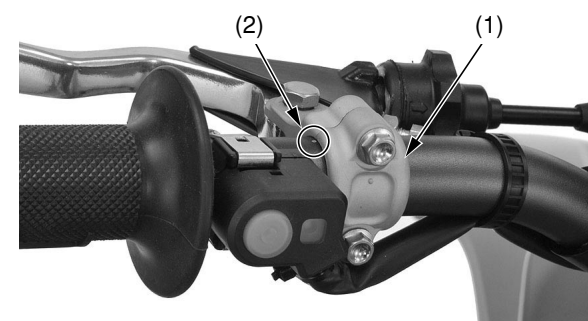

(1) holder
(2) paint mark

- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.


Clutch Operation

1. Check for smooth clutch lever operation. If necessary, lubricate the clutch lever pivot or clutch cable.
2. Check the clutch cable for deterioration, kinks, or damage.

Clutch System

Clutch Cover/Disc/Plate Removal

1. Drain the transmission oil (page 53).
2. Remove the clutch cover bolt A (1), clutch cover bolts B (2), and clutch cover (3).

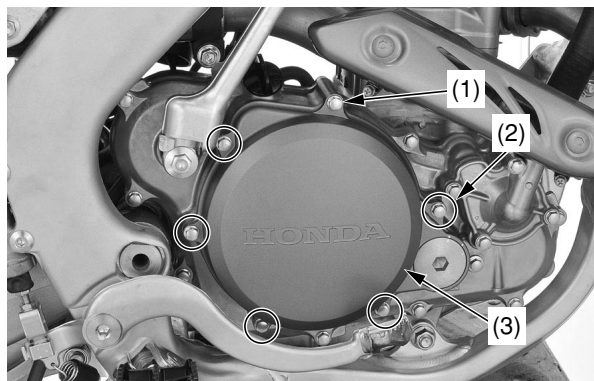


(1) clutch cover bolt A (3) clutch cover
(2) clutch cover bolts B

3. Remove the five clutch spring bolts and clutch springs (4).


Loosen the bolts in a crisscross pattern in two or three progressive steps.

4. Remove the clutch pressure plate (5).

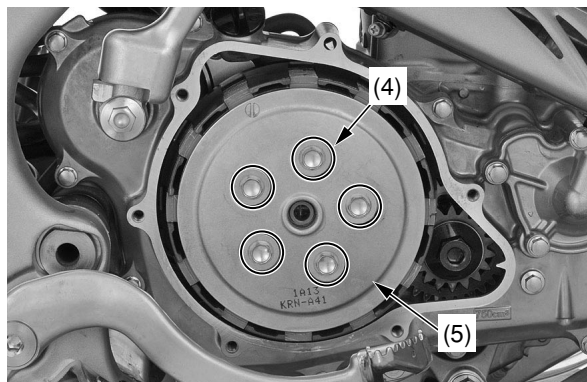

(4) clutch spring bolts/clutch springs
(5) clutch pressure plate

5. Remove the clutch lifter (6) and clutch lifter rod (7).
6. Turn the lifter bearing plate of the clutch lifter with your finger. The bearing plate should turn smoothly and quietly. Discard the clutch lifter if the bearing plate does not turn smoothly.

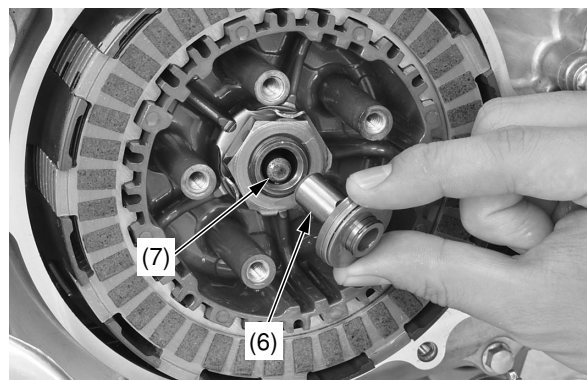

(6) clutch lifter
(7) clutch lifter rod

7. Remove the eight clutch discs, seven clutch plates, judder spring and spring seat (8).



(8) clutch discs, clutch plates, judder spring and spring seat

Clutch System


Clutch Disc/Plate Inspection

Replace the clutch discs (1) if they show signs of scoring or discoloration.

Measure the thickness of each clutch disc.

Service Limit: 0.112 in (2.85 mm)

Replace the clutch discs and clutch plates as an assembly.

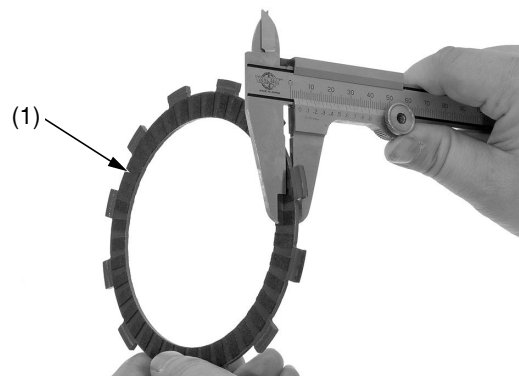


(1) clutch disc

Check the clutch plate (2) for excessive warpage or discoloration. Check the plate warpage on a surface plate using a feeler gauge.

Measure the thickness of the clutch plates.

Service Limit: 0.004 in (0.10 mm)

Replace the clutch discs and plates as a set.

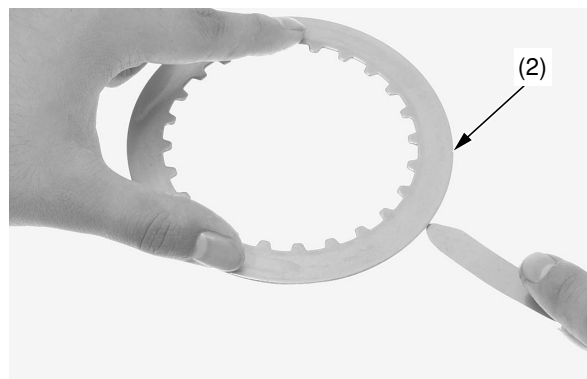


(2) clutch plate

If you feel the clutch slippage when replacing the clutch discs and plates, replace the clutch springs.

Clutch System


Clutch Disc/Plate Installation

1. Install the spring seat (1) and judder spring (2) onto the clutch center as shown.
2. Coat the clutch discs (3) and plates (4) with engine oil.
3. Install the clutch disc A (larger I.D. disc) (5) onto the clutch outer. Stack the seven clutch plates and seven clutch discs alternately.

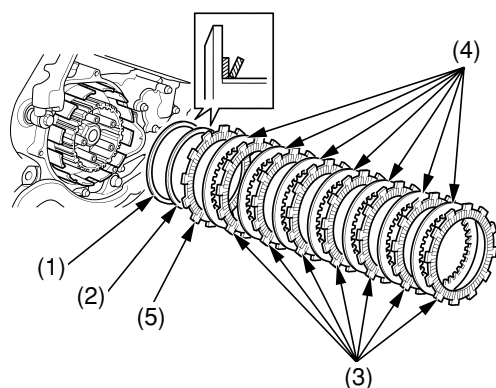


- | | |
|-------------------|-------------------|
| (1) spring seat | (4) clutch plates |
| (2) judder spring | (5) clutch disc A |
| (3) clutch discs | |

4. Apply grease to the clutch lifter rod (6) ends.
5. Insert the clutch lifter rod into the mainshaft.
6. Apply engine oil to the needle bearing of the clutch lifter.
7. Install the clutch lifter (7) onto the clutch lifter rod.

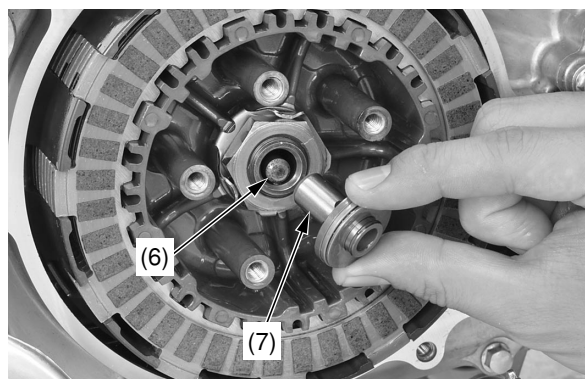


(6) clutch lifter rod (7) clutch lifter

8. Install the clutch pressure plate (8).
9. Install the five clutch springs and clutch spring bolts (9).
10. Tighten the bolts in a crisscross pattern in two or three steps, to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

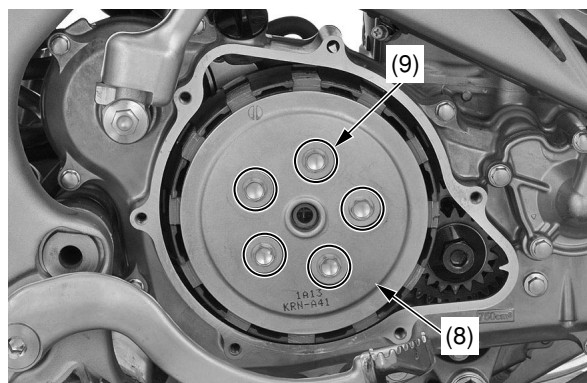

(8) clutch pressure plate
(9) clutch spring bolts/clutch springs

11. Apply oil to a new O-ring (10) and install in the groove of the clutch cover (11).
12. Install the cover by tightening the cover bolts A, and B in a crisscross pattern in two or three steps to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

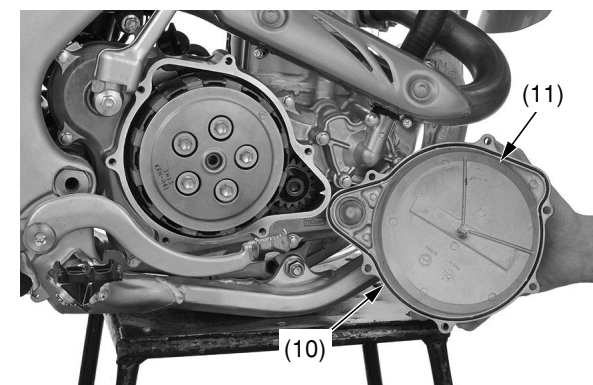

(10) O-ring (new) (11) clutch cover

Spark Plug

Refer to *Safety Precautions* on page 23.

Spark Plug Recommendation

The recommended standard spark plug is satisfactory for most racing conditions.

Standard	R0451B-8 (NGK)
----------	----------------

Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range or incorrect reach can cause engine damage.

Using a non-resistor spark plug may cause ignition problems.


This motorcycle uses a spark plug that has an iridium tip in the center electrode and a platinum tip in the side the electrode.

Be sure to observe the following when servicing the spark plug.

- Do not clean the spark plug. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- To check the spark plug gap, use only a "wire-type feeler gauge." To prevent damaging the iridium tip of the center electrode and platinum tip of the side electrode, never use a "leaf-type feeler gauge."
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.


Spark Plug Inspection & Replacement

1. Remove the seat and hang the fuel tank to the left of the frame (pages 33, 34).
2. Disconnect the spark plug cap (1).
3. Clean any dirt from around the spark plug base.
4. Remove the spark plug (2).

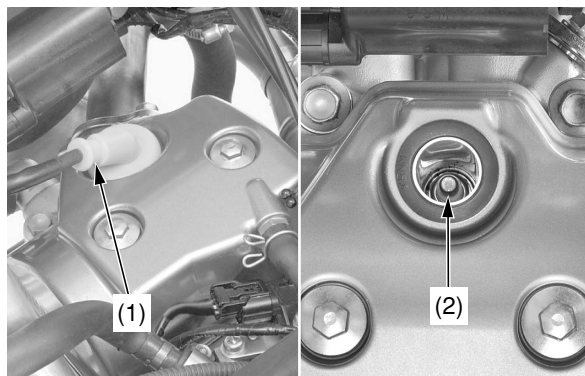

- (1) spark plug cap
(2) spark plug

5. Check the electrode for wear or deposits, the sealing gasket (3) for damage, and the insulator for cracks. Replace if you detect them.
6. Check the spark plug gap (4), using a wire-type feeler gauge. If the gap is out of specifications, replace the plug with a new one.
The recommended spark plug gap is:
0.024 – 0.028 in (0.6 – 0.7 mm)

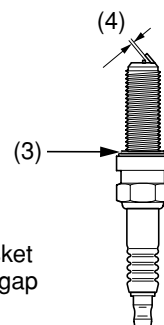

- (3) sealing gasket
(4) spark plug gap

7. To obtain accurate spark plug readings, accelerate up to speed on a straightaway. Push the engine stop button and disengage the clutch by pulling the lever in.
Coast to a stop, then remove and inspect the spark plug. The porcelain insulator around the center electrode should appear tan or medium gray.

If you're using a new plug, ride for at least 10 minutes before taking a plug reading; a brand-new plug will not show color initially.

If the electrodes appear burnt, or the insulator is white or light gray (lean) or the electrodes and insulator are black or fouled (rich), there is a problem elsewhere (page 133).
Check the PGM-FI system and ignition timing.

8. With the sealing gasket attached. Thread the spark plug in by hand to prevent cross-threading.
9. Tighten the spark plug:
 - If the old plug is good:
1/8 turn after it seats.
 - If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
NGK: 1/2 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
1/8 turn after it seats.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

10. Connect the direct ignition coil. Take care to avoid pinching any cables or wires.
11. Install the fuel tank and seat (pages 33, 35).

Valve Clearance

Refer to *Safety Precautions* on page 23.


Excessive valve clearance will cause noise and eventual engine damage. Little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check the valve clearance when the engine is cold at the intervals specified in the Maintenance Schedule (page 25).

The checking or adjusting of the clearance should be performed while the engine is cold. The valve clearance will change as engine temperature rises.

Cylinder Head Cover Removal


Before inspection, clean the engine thoroughly to keep dirt from entering the engine.

1. Remove the seat and hang the fuel tank to the left of the frame (pages 33,34).
2. Disconnect the breather tube (1) and spark plug cap (2).

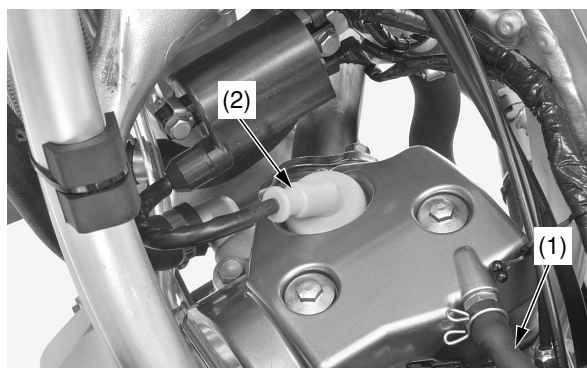

(1) breather tube (2) spark plug cap

3. Remove the cylinder head cover bolts/rubber seals (3) and cylinder head cover (4).

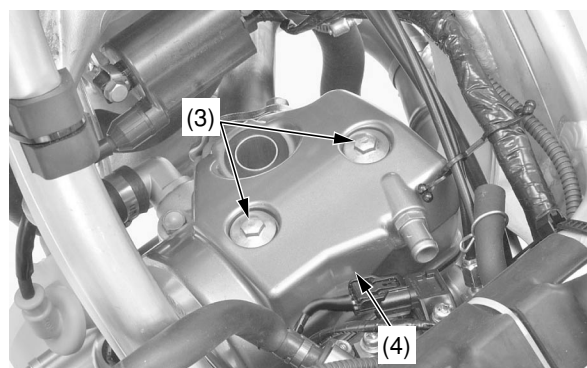


(3) cylinder head cover bolts/rubber seals
(4) cylinder head cover

4. Remove the spark plug hole packing.

Positioning At Top Dead Center On The Compression Stroke

1. Remove the crankshaft hole cap (1).

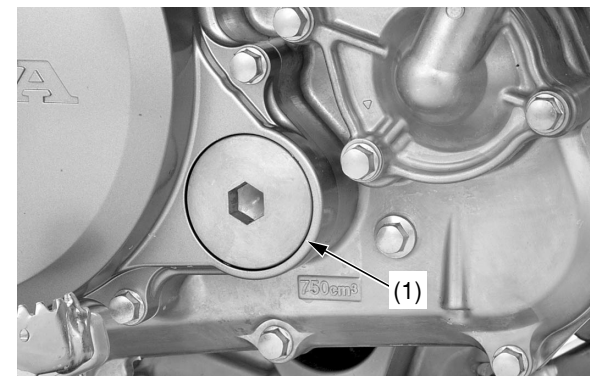


(1) crankshaft hole cap

2. Remove the spark plug (page 67).


Valve Clearance

3. Rotate the crankshaft by turning the primary drive gear bolt (2) (crankshaft) clockwise until aligning the punch mark (3) on the primary drive gear with the “Δ” mark (4) on the right crankcase cover. In this position, the piston may either be on the compression or exhaust stroke. If the crankshaft passed the punch mark, rotate the primary drive gear bolt clockwise again and align the punch mark with the “Δ” mark.

The inspection must be made when the piston is at the top of the compression stroke when both the intake and exhaust valves are closed. This condition can be determined by moving the exhaust rocker arm (5). If it is free, it is an indication that the valves are closed and that the piston is on the compression stroke. If it is tight and the valves are open, rotate the primary drive gear bolt 360° and realign the punch mark to the “Δ” mark.

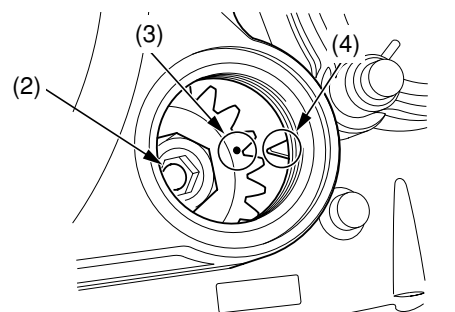


(2) primary drive gear bolt
(3) punch mark
(4) “Δ” mark

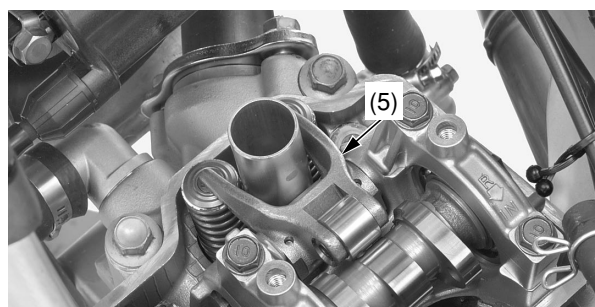

(5) exhaust rocker arm


Valve Clearance Inspection

1. Measure the intake valve clearance by inserting a feeler gauge (1) between the valve lifters (2) and intake cams (3).

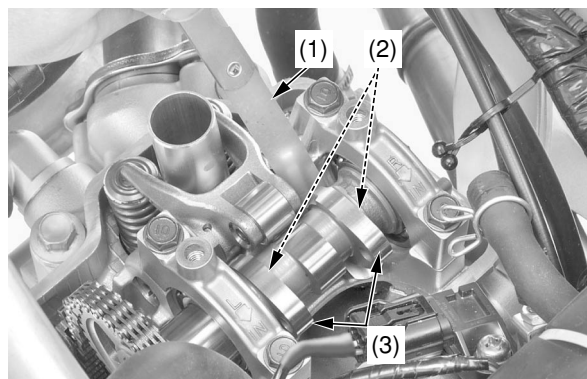

(1) feeler gauge
(2) valve lifters
(3) intake cams

2. Measure the exhaust valve clearance by inserting a feeler gauge (1) between the exhaust rocker arm (4) and exhaust valve shims (5).

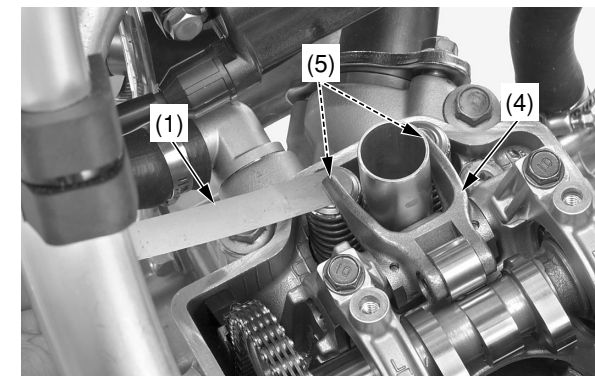

(1) feeler gauge
(4) exhaust rocker arm
(5) exhaust valve shims

Valve Clearances:

IN: 0.005 ± 0.001 in (0.12 ± 0.03 mm)
EX: 0.011 ± 0.001 in (0.28 ± 0.03 mm)


If intake valve clearance and exhaust valve clearance need adjustment, see *Camshaft Removal* (page 70) and select the correct shim for each valve.

Valve Clearance

Camshaft Removal

1. Record the intake valve clearance and exhaust valve clearance (page 69).

2. Remove the cam chain tensioner lifter cover bolt (1) and sealing washer (2).

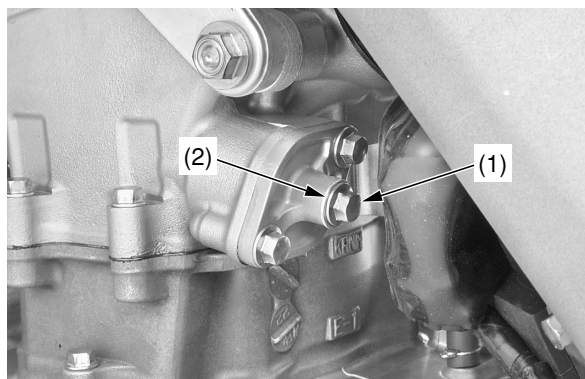


- (1) cam chain tensioner lifter cover bolt
(2) sealing washer

Use the tensioner stopper tool.

- Tensioner stopper 070MG-0010100
07AMG-001A100


3. Turn the tensioner shaft clockwise with the tensioner stopper (3) until it stops, in order to retract the tensioner fully.
Then insert the tensioner stopper fully to hold the stopper in the fully retracted position.

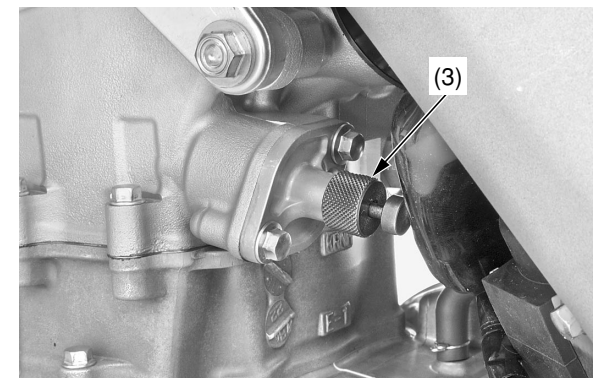

- (3) tensioner stopper

Valve Clearance

4. Make sure the piston is at TDC on the compression stroke (page 68).
Remove the camshaft holder bolts A (4), B (5) and camshaft holders (6).
Loosen the camshaft holder bolts in a crisscross pattern in two or three steps.

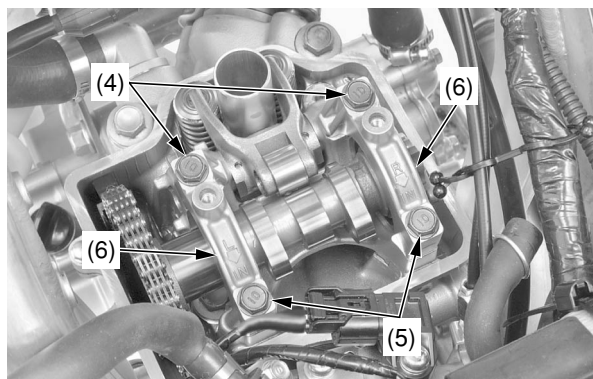


(4) camshaft holder bolts A
(5) camshaft holder bolts B
(6) camshaft holders

NOTICE

Do not let the set rings fall into the crankcase.

If the set rings are remained on the camshaft holder, remove the set rings carefully.

5. Slide the left camshaft bearing (7) and remove the camshaft (8) and cam chain (9), then attach a piece of wire to the cam chain to prevent it from falling into the crankcase.

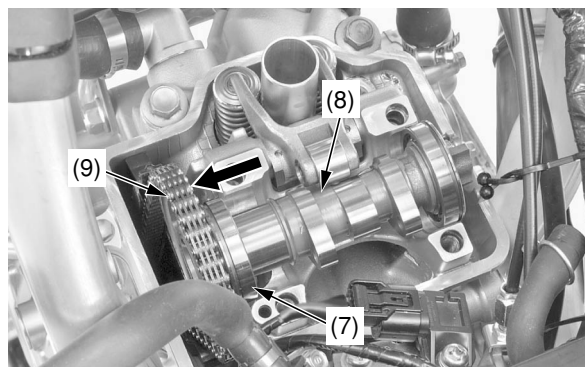


(7) left camshaft bearing
(8) camshaft
(9) cam chain

6. Remove the valve lifters (10).

Position the removed intake valve lifters and shims to indicate their location such as intake or exhaust, right or left.


NOTICE

Do not let the valve lifters or shims fall into the crankcase.

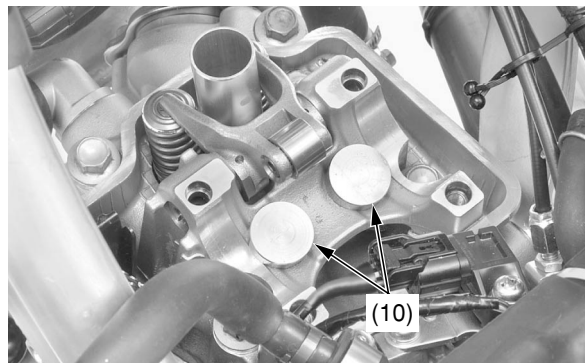

(10) valve lifters

7. Remove the shims (11).

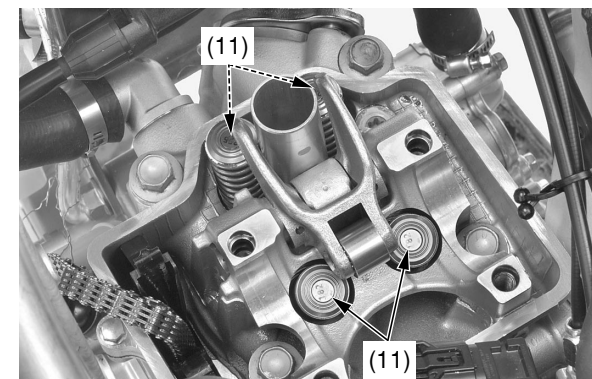


(11) shims

Valve Clearance


Shim Selection

1. Clean the valve shim contact area in the valve lifter (1) with compressed air.

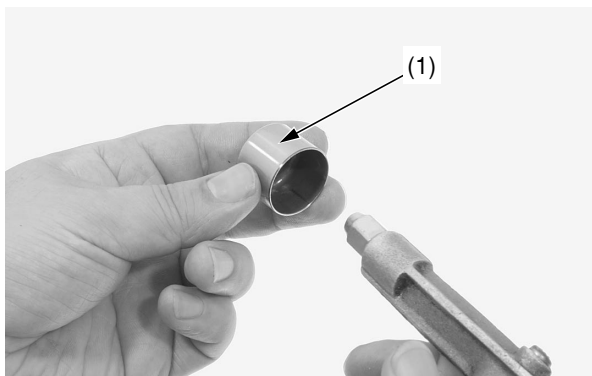

(1) valve lifter

2. Measure the shim thickness with a micrometer and record it.
Sixty-nine different thickness shims (2) are available from the thinnest (1.200 mm thickness) shim to the thickest (2.900 mm thickness) in intervals of 0.025 mm.

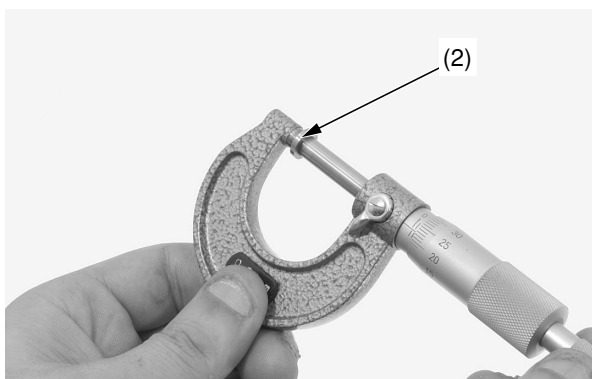

(2) shim

3. Calculate the new shim thickness using the equation below.

$$A = (B - C) + D$$

A: New shim thickness
B: Recorded valve clearance
C: Specified valve clearance
D: Old shim thickness

- Make sure of the correct shim thickness by measuring the shim with a micrometer.
- Reface the intake valve seat if carbon deposits result in a calculated dimension of over 2.450 mm.
Reface the exhaust valve seat if carbon deposits result in a calculated dimension of over 2.900 mm.



1.80 mm



1.825 mm



1.85 mm



1.875 mm


Valve Clearance

Camshaft Installation

1. Install the newly selected shims (1) on the valve retainers (2).


NOTICE

Do not let the shims fall into the crankcase.

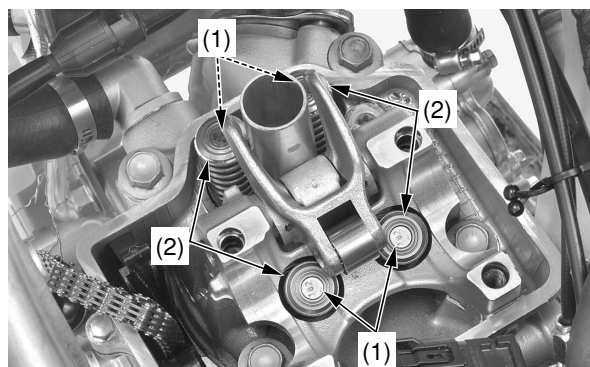


(1) shims (2) valve retainers

2. Apply molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease containing more than 3% molybdenum disulfide additive) to the outer surface of the each the valve lifters (3).
Install the valve lifters to the proper position.

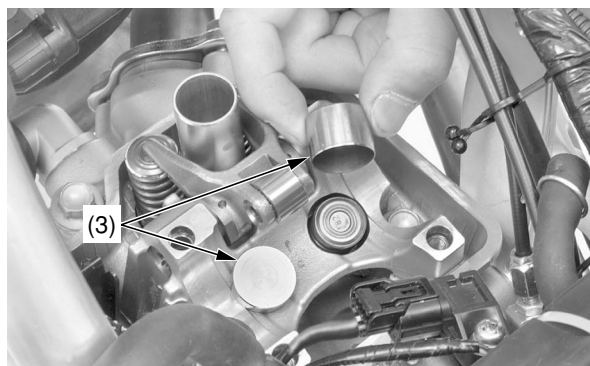


(3) valve lifters

3. Rotate the primary drive gear bolt (4) (crankshaft) clockwise and align the punch mark (5) with the "Δ" mark (6).

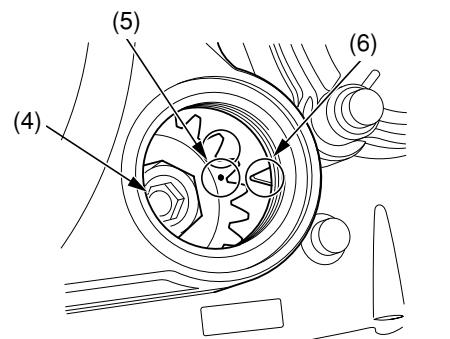


(4) primary drive gear bolt (5) punch mark (6) "Δ" mark

4. Apply molybdenum oil solution to the camshaft journals and cam lobes. Place the camshaft (7) with the intake cam lobes (8) facing up and align the timing marks (9) on the cam sprocket (10) with the surface of the cylinder head (11).
Install the cam chain (12) over the sprocket without rotating the camshaft.

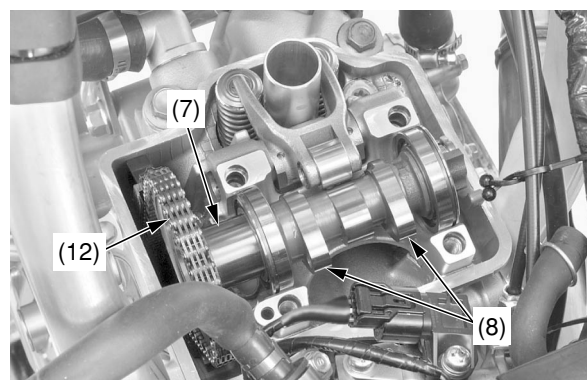


(7) cam shaft (8) intake cam lobes (12) cam chain

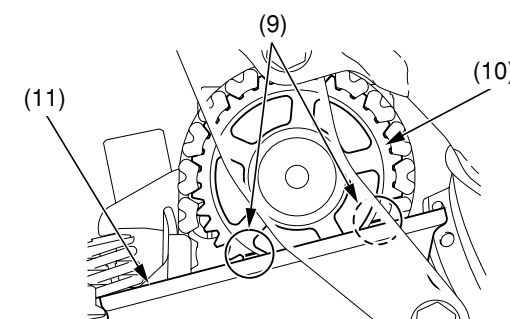

(9) timing marks (10) cam sprocket (11) surface of the cylinder head

5. Apply grease to the set rings (13) and install it onto the camshaft bearing grooves (15).

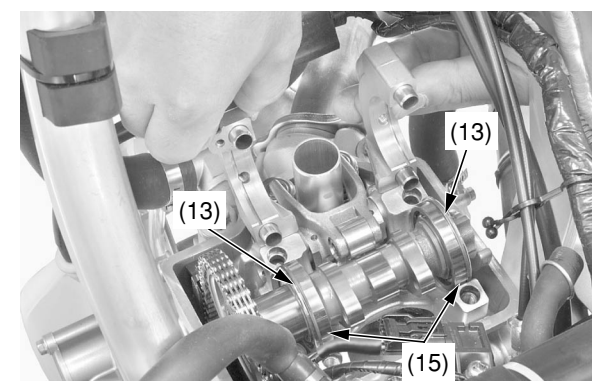


(13) set rings (15) camshaft bearing grooves

(cont'd)

Valve Clearance


Each camshaft holder has an identification mark (16).

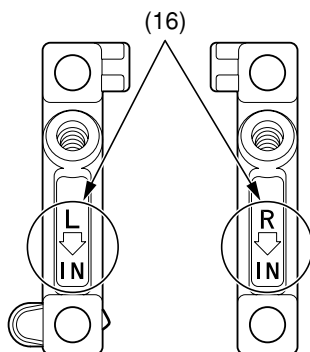

(16) identification marks


6. Install the camshaft holders (14) in their proper position by aligning the camshaft bearing grooves (15) with the set rings (13).
7. Apply oil to the camshaft holder bolt threads and seating surface.
Tighten the camshaft holder bolts A (17) and B (18) to the specified torque:
12 lbf·ft (16 N·m, 1.6 kgf·m)

Tighten the camshaft holder bolts in a criss-cross pattern in two or three steps.

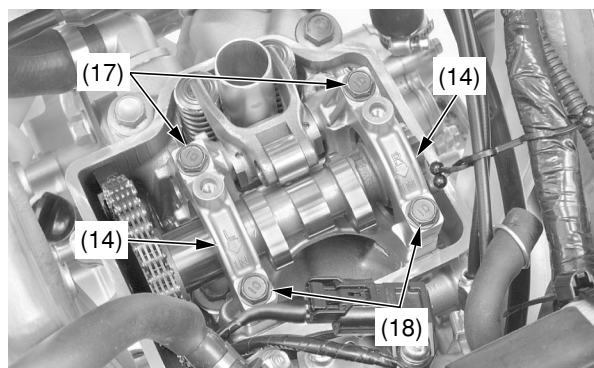


(14) camshaft holders
(17) camshaft holder bolts A
(18) camshaft holder bolts B

8. Remove the tensioner stopper (19) from the cam chain tensioner lifter.

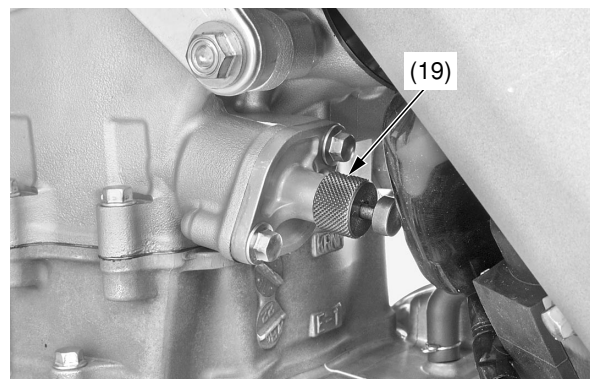

(19) tensioner stopper

9. Install a new sealing washer (20) and tighten the cam chain tensioner lifter cover bolt (21).

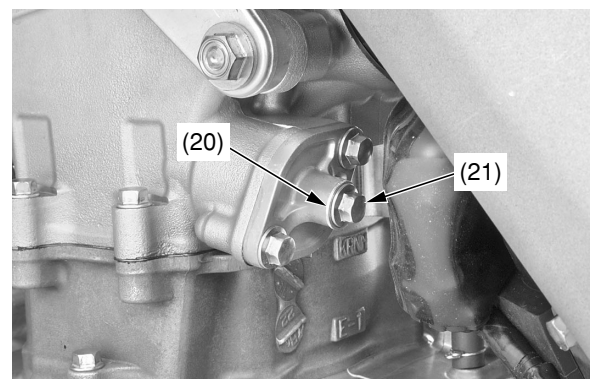


(20) sealing washer
(21) cam chain tensioner lifter cover bolt

10. Rotate the camshaft by rotating the crankshaft clockwise several times.
11. Insert the feeler gauge (22) between the intake valve lifter and cam.
If the feeler gauge cannot be inserted, the shim is caught between the valve lifter and the valve retainer. Remove the camshaft holders, place the shim correctly, and reinstall the camshaft holders.


Valve Clearances:

IN: 0.005 ± 0.001 in (0.12 ± 0.03 mm)
EX: 0.011 ± 0.001 in (0.28 ± 0.03 mm)

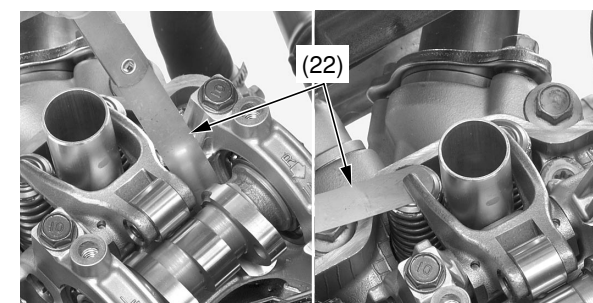

(22) feeler gauge


12. Install the spark plug (page 67).
13. Coat a new O-ring (23) with oil and install it onto the crankshaft hole cap (24).
Apply grease to the crankshaft hole cap threads.
Install and tighten the crankshaft hole cap to the specified torque:
11 lbf·ft (15 N·m, 1.5 kgf·m)

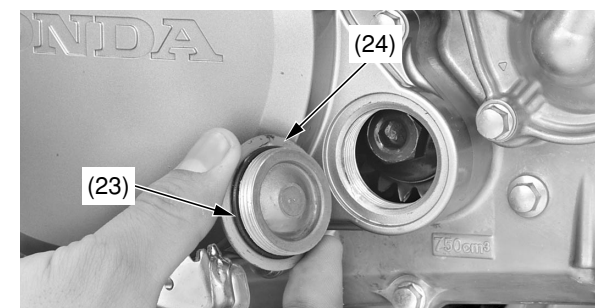

(23) O-ring (new)
(24) crankshaft hole cap


Cylinder Head Cover Installation

1. Check that the spark plug hole packing (1) is in good condition and replace it if necessary. Apply engine oil to the spark plug hole packing and install it to the cylinder head cover (2).
2. Check that the cylinder head cover packing (3) is in good condition and replace it if necessary. Install the cylinder head cover packing into the cylinder head cover groove.

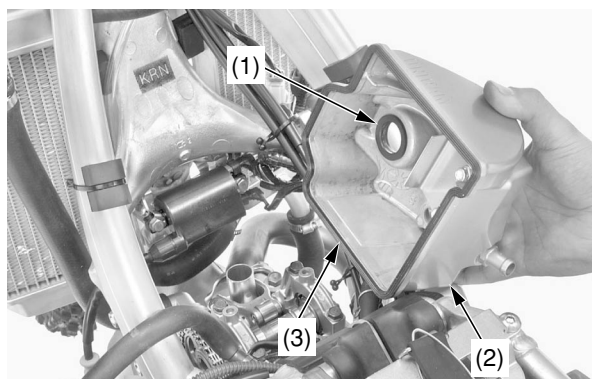


- (1) spark plug hole packing
(2) cylinder head cover
(3) cylinder head cover packing

3. Check the rubber seals (4) are in good condition, replace them if necessary. Install the rubber seals onto the cylinder head cover with the "UP" marks (5) facing up.

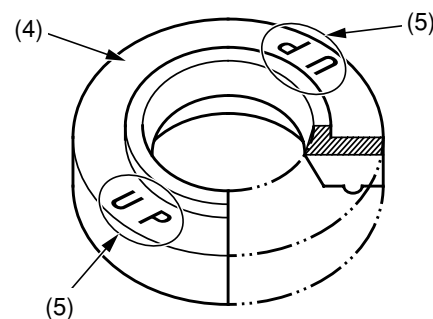


- (4) rubber seal
(5) "UP" marks

4. Install the cylinder head cover (2) and tighten the cylinder head cover bolts (6) to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

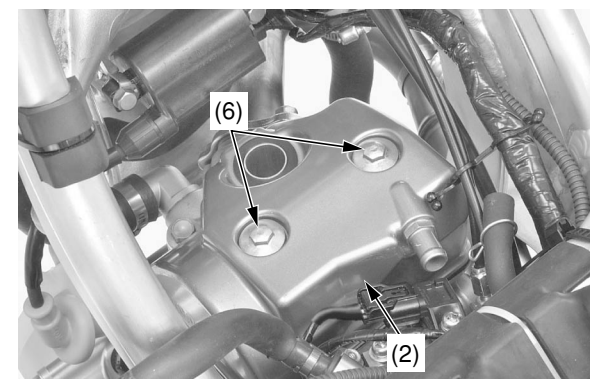

- (2) cylinder head cover
(6) cylinder head cover bolts

5. Connect the spark plug cap (7) and breather tube (8).

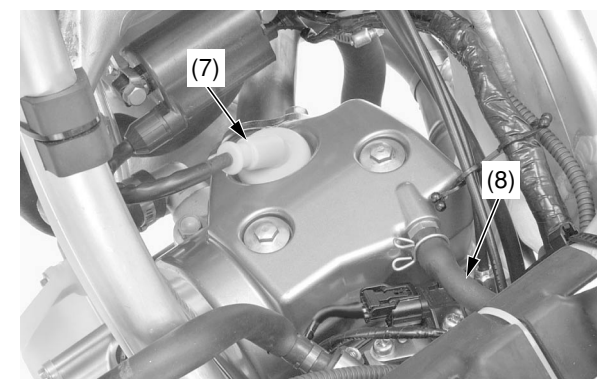

- (7) spark plug cap
(8) breather tube


6. Install the fuel tank and the seat (pages 33, 35).

Piston/Piston Rings/Piston Pin

Cylinder Head Removal


1. Clean the area above the engine before disassembly to prevent dirt falling into the engine.
2. Drain the radiator coolant after cooling the motorcycle (page 143).
3. Remove the seat and hang the fuel tank (pages 33, 34).
4. Remove the muffler (page 100) and subframe (page 36).
5. Remove the exhaust pipe (page 102).
6. Remove the spark plug (page 67).
7. Remove the cylinder head cover (page 68).
8. Set the piston at TDC on the compression stroke (page 68).
9. Remove the camshaft holder, camshaft, valve lifters and shims (page 70).

10. Disconnect the ECT sensor connector (1).

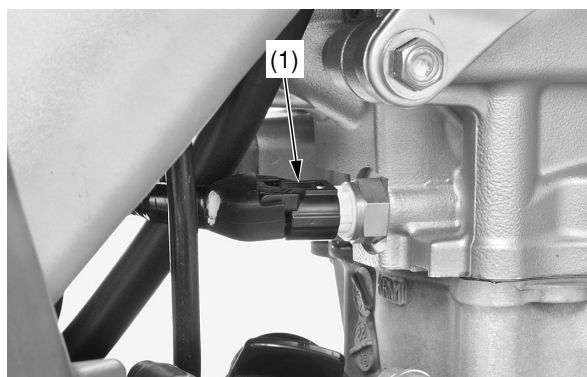


(1) ECT sensor connector

11. Loosen the radiator hose clamp screw (2) and disconnect the radiator hose (3).

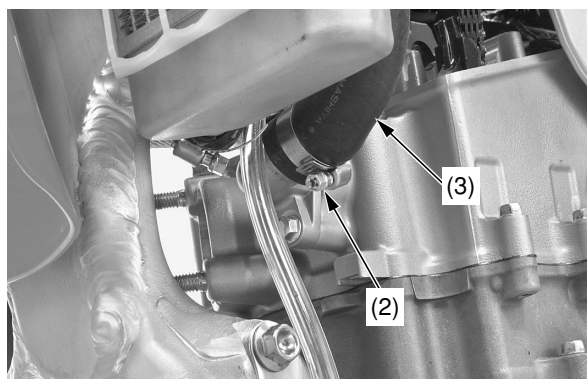

(2) radiator hose clamp screw
(3) radiator hose


12. Remove the shock absorber upper nut (4) and bolt (5).

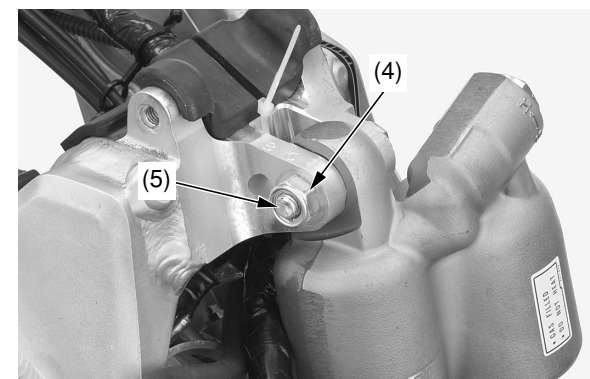

(4) shock absorber upper nut
(5) bolt

13. Loosen the insulator band screw (6) and pull the throttle body (7) out from the insulator (8).



Do not hang the throttle body and support it with a suitable strap.

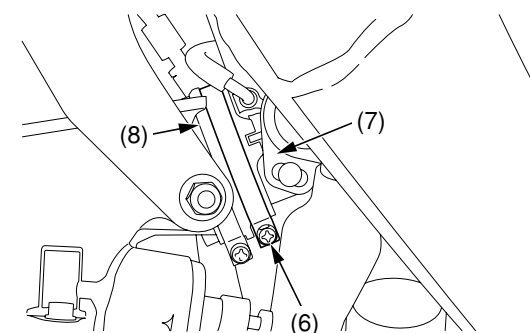

(6) insulator band screw
(7) throttle body
(8) insulator


Piston/Piston Rings/Piston Pin

14. Remove the cylinder head hanger bolts (9).
Remove the cylinder head hanger plate bolts (10), left cylinder head hanger plate (11) and right cylinder head hanger plate (12).

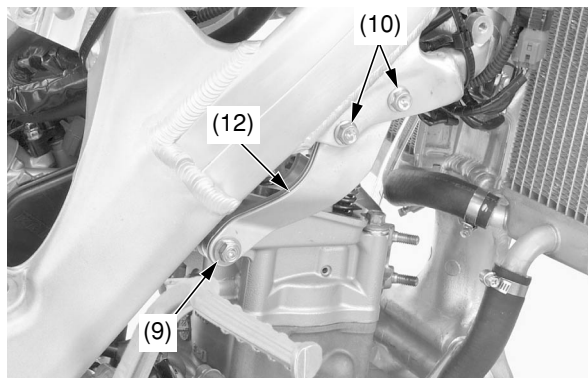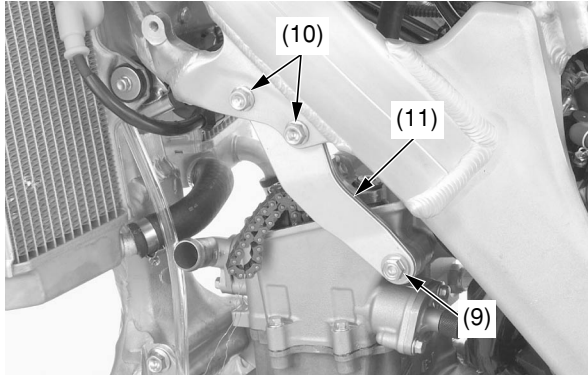

(9) cylinder head hanger bolts
(10) cylinder head hanger plate bolts
(11) left cylinder head hanger plate
(12) right cylinder head hanger plate

15. Remove the cylinder head bolts (13).
16. Loosen the cylinder bolt (14).

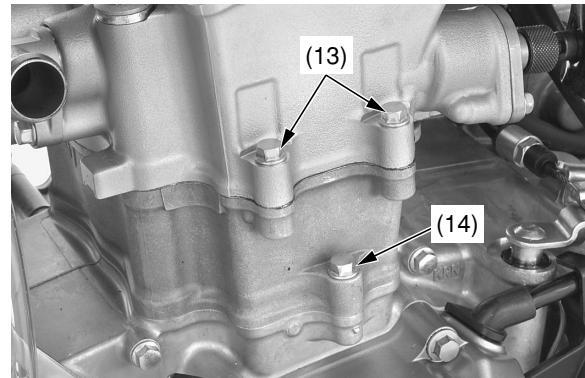


(13) cylinder head bolts
(14) cylinder bolt

17. Remove the cylinder head stud bolts/washers (15) and cylinder head (16).
Loosen the nuts in a crisscross pattern in two or three steps.

NOTICE

Do not let the nuts, washers, valve lifters, shims, and cam chain fall into the crankcase.

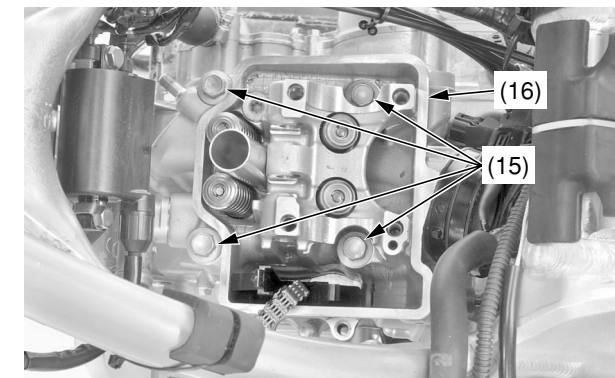

(15) cylinder head stud bolts/washers
(16) cylinder head


(cont'd)

Piston/Piston Rings/Piston Pin

18. Remove the dowel pins (17), cylinder head gasket (18) and cam chain guide (19).

NOTICE

Do not let the dowel pins and cam chain fall into the crankcase.

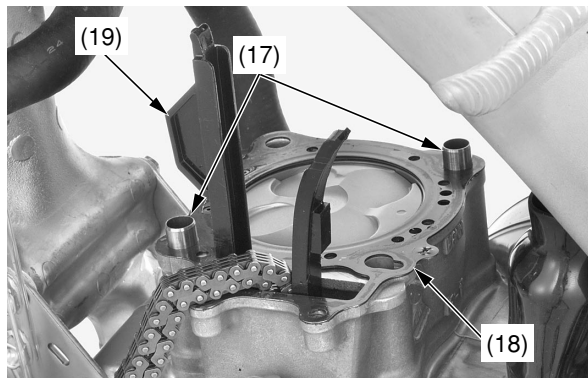

(17) dowel pins
(18) cylinder head gasket
(19) cam chain guide


Piston/Piston Rings/Piston Pin

Cylinder Removal

1. Remove the cylinder bolt (1) and cylinder (2).

NOTICE

*Do not let the cam chain fall into the crankcase.
Do not pry on or strike the cylinder.*

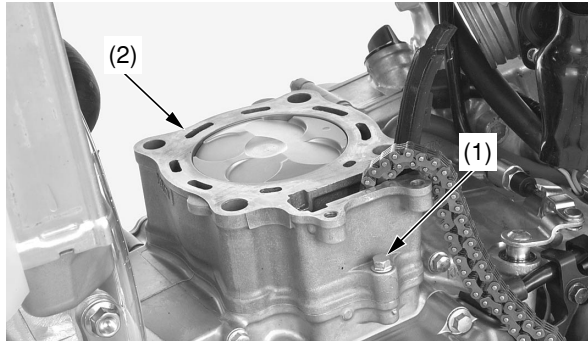


(1) cylinder bolt
(2) cylinder

2. Remove the dowel pins (3) and cylinder gasket (4).

NOTICE

Do not let the dowel pins fall into the crankcase.

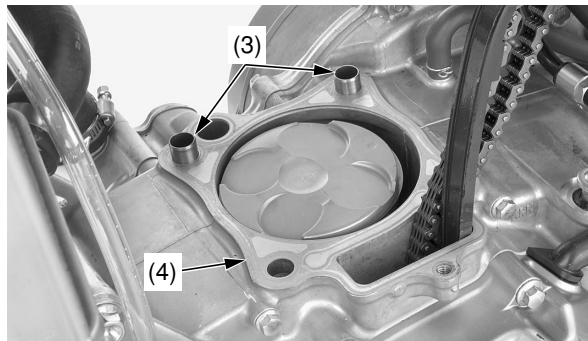


(3) dowel pins
(4) cylinder gasket

Piston Removal

1. Place clean shop towels in the crankcase to keep the piston pin clips or other parts from falling into the crankcase.
2. Remove the piston pin clips (1) using a pair of needle-nose pliers.
3. Press the piston pin (2) out of the piston (3), and remove the piston.

Under racing conditions, the piston and rings should be replaced every 6 races or about every 15.0 hours of running. Replace the piston pin every 6 races or about every 15.0 hours of running.

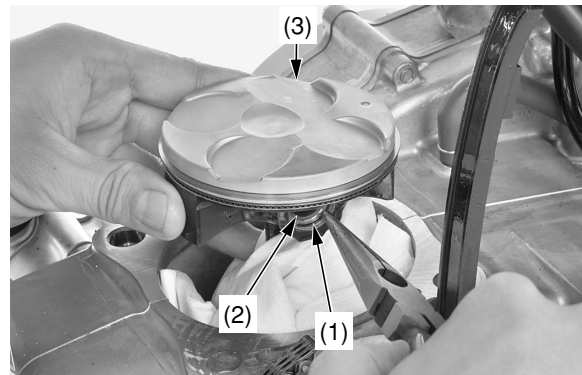


(1) piston pin clip
(2) piston pin
(3) piston

Piston Ring Removal

Spread each piston ring (1) and remove by lifting it up at a point just opposite the gap.

NOTICE

Do not damage the piston ring by spreading the ends too far.

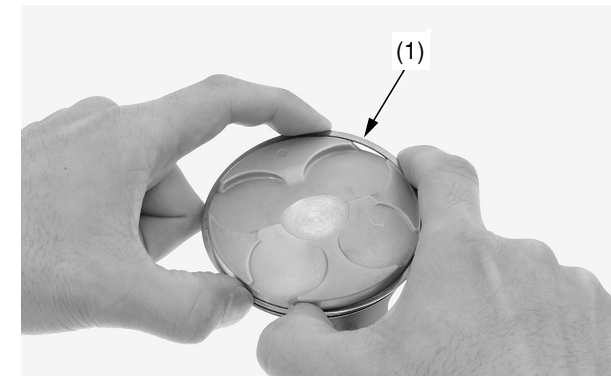

(1) piston ring

Piston/Piston Rings/Piston Pin

Piston/Piston Pin/Piston Ring Inspection

We recommend you consult the Service Manual or your dealer for correct Service Limit measurements.

Piston Ring Installation



1. Clean the piston ring thoroughly.
2. Apply engine oil to the piston rings and install them.

NOTICE

Do not damage the piston ring by spreading the ends too far.

Do not damage the piston during piston ring installation.

- To install the oil ring, install the spacer first, then install the side rails.
 - Install the top ring on the piston with the marking side facing up.
3. After installing the rings they should rotate freely, without sticking.
Space the ring end gaps 180 degrees apart between the top ring and the upper side rail.
Space the ring end gaps 90 degrees apart between the upper side rail, spacer, and the lower side rail.

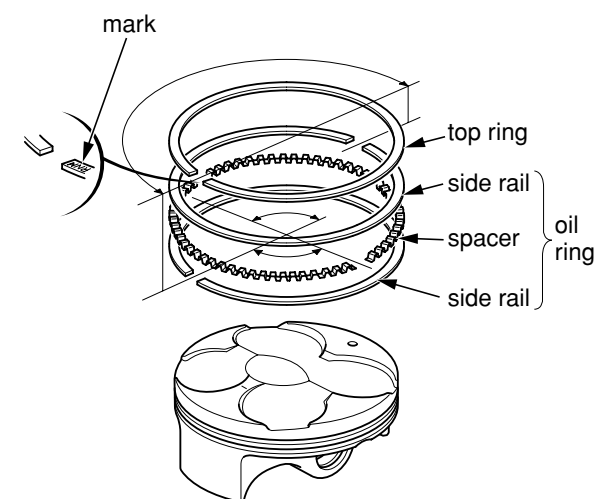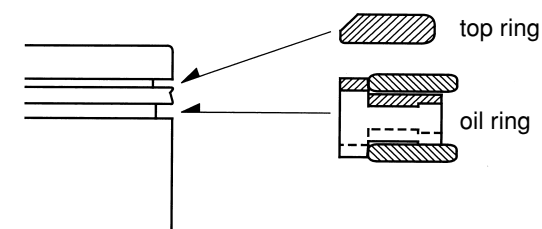




Piston/Piston Rings/Piston Pin

Piston Installation

1. Place clean shop towels over the crankcase opening to keep the piston pin clips from falling into the crankcase.
2. Apply molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease containing more than 3% molybdenum disulfide additive) to the inner surface of the connecting rod small end.
3. Install the piston (1) with the "○" mark (2) and/or the large valve recess (3) facing the intake side of the engine.
4. Apply engine oil to the piston pin (4) and inner surface of the piston pin hole. Install the piston pin and new piston pin clips (5).

NOTICE

*Use new piston pin clips. Never reuse old piston pin clips.
Do not let the piston pin clips fall into the crankcase.
Do not align the piston pin clip end gap with the piston cut-out (6).*

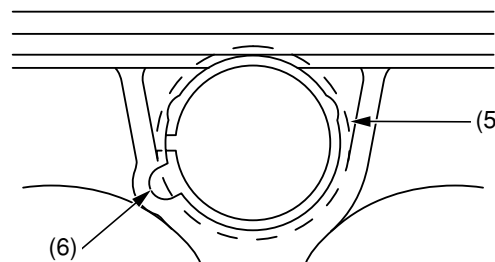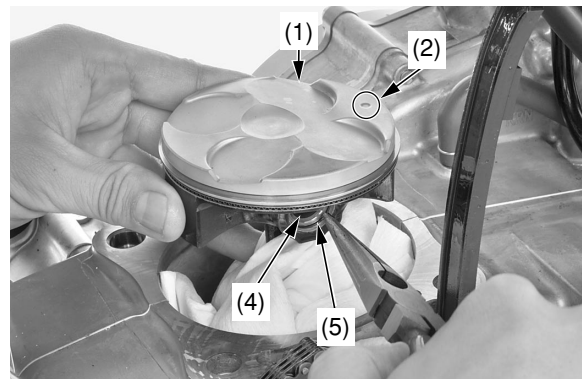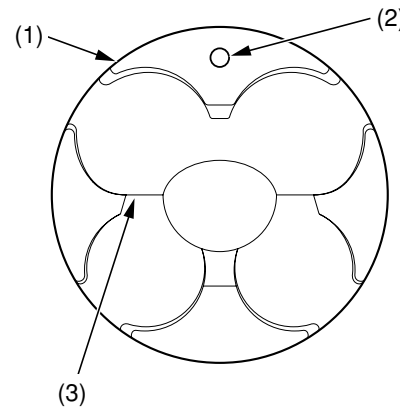


- | | |
|------------------------|---------------------|
| (1) piston | (4) piston pin |
| (2) "○" mark | (5) piston pin clip |
| (3) large valve recess | (6) piston cut-out |

Cylinder Installation

1. Place clean shop towels over the crankcase opening to prevent dust or dirt from entering the engine.
2. Clean off any gasket material from the gasket surface of the crankcase.
3. Remove the shop towel. Do not let any gasket debris fall into the crankcase.
4. Install the dowel pins (1) and a new cylinder gasket (2).

NOTICE

Do not let the dowel pins fall into the crankcase.

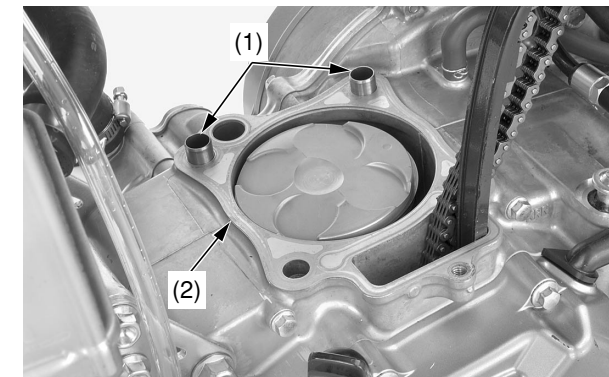

- (1) dowel pins
(2) cylinder gasket

5. Clean any gasket material off the cylinder.


(cont'd)

Piston/Piston Rings/Piston Pin

6. Apply clean engine oil to the cylinder wall, piston outer surface and piston rings. Route the cam chain (3) through the cylinder (4). Install the cylinder over the piston rings by hand while compressing the piston rings (5).

NOTICE


Do not damage the piston rings and cylinder walls.

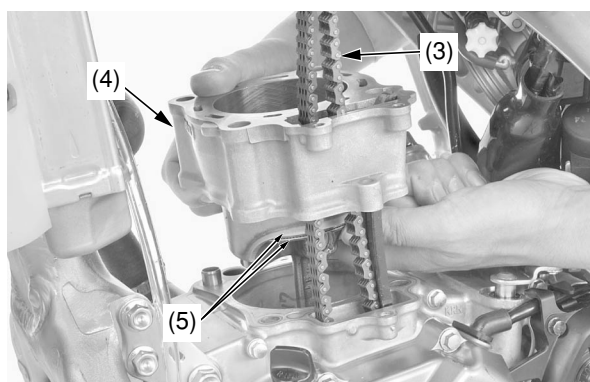

(3) cam chain
(4) cylinder

(5) piston rings

7. Install the cam chain guide (6) and fit the cam chain guide tabs (7) in the cylinder cut-outs (8). Push the guide until it bottoms in the crankcase guide hole.

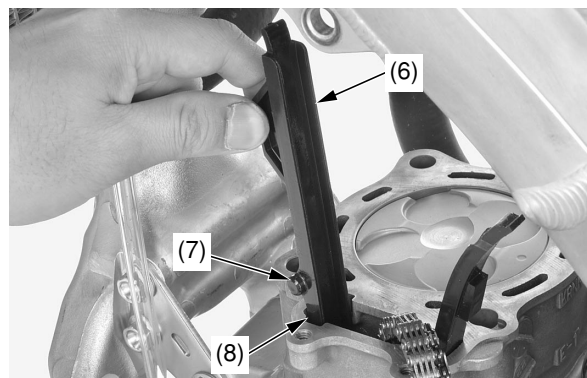


(6) cam chain guide
(7) cam chain guide tabs
(8) cylinder cut-outs

Cylinder Head Installation

1. Install the dowel pins (1) and a new cylinder head gasket (2).

NOTICE

Do not let the dowel pins fall into the crankcase.

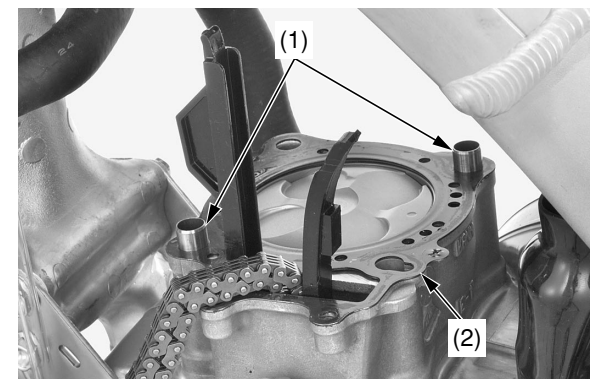

(1) dowel pins
(2) cylinder head gasket

Piston/Piston Rings/Piston Pin

2. Route the cam chain through the cylinder head (3).
Install the cylinder head.


NOTICE

Do not damage mating surfaces when installing the cylinder head.

3. Apply engine oil to the cylinder head stud bolt threads.
Install the washers and cylinder head stud bolts (4).
Tighten the cylinder head stud bolts in a crisscross pattern in two or three steps to the specified torque:
33 lbf·ft (45 N·m, 4.6 kgf·m)


NOTICE

Do not let the washers and nuts fall into the crankcase.

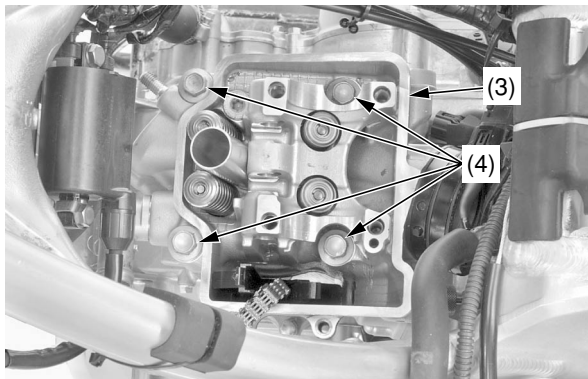



(3) cylinder head
(4) cylinder head stud bolts/washers

4. Install the cylinder bolt (5) and cylinder head bolts (6) and tighten them to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

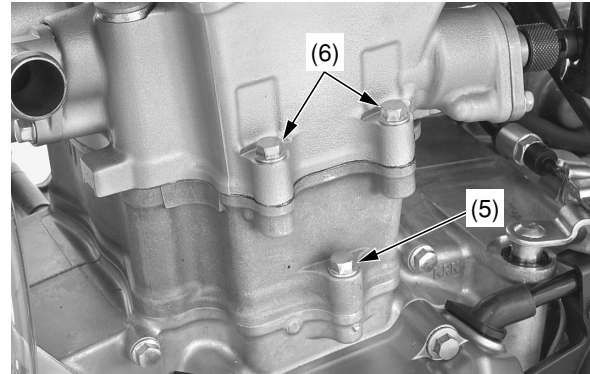

(5) cylinder bolt
(6) cylinder head bolts

5. Install the left cylinder head hanger plate (7) and right cylinder head hanger plate (8), then loosely install the cylinder head hanger plate bolts (9) and cylinder head hanger bolts (10). Tighten the cylinder head hanger bolts and cylinder head hanger plate bolts to the specified torque:
cylinder head hanger bolts:
40 lbf·ft (54 N·m, 5.5 kgf·m)
cylinder head hanger plate bolts:
24 lbf·ft (33 N·m, 3.4 kgf·m)

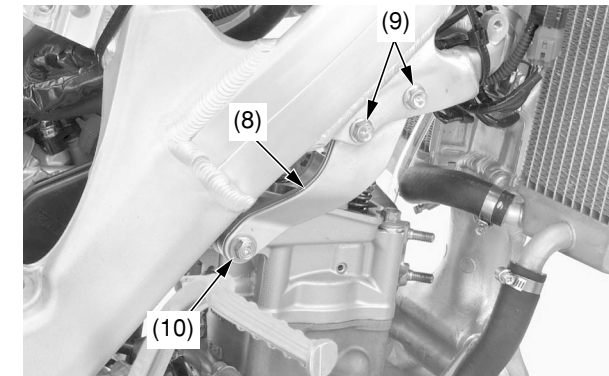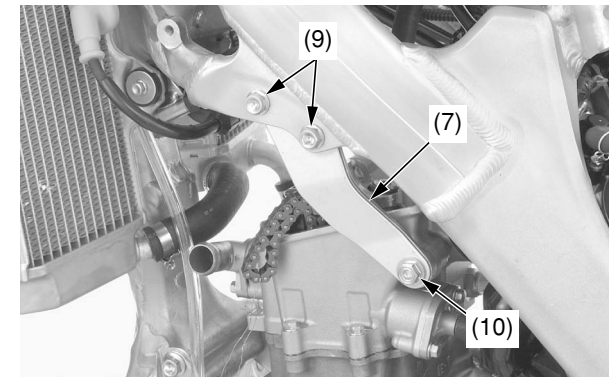


(7) left cylinder head hanger plate
(8) right cylinder head hanger plate
(9) cylinder head hanger plate bolts
(10) cylinder head hanger bolts

(cont'd)


Piston/Piston Rings/Piston Pin

6. Install the throttle body (11) to the insulator (12) by aligning the tab of the throttle body with the groove of the insulator and tighten the insulator band screw (13) so the distance between the band ends is 0.43 ± 0.04 in (11.0 ± 1.0 mm).

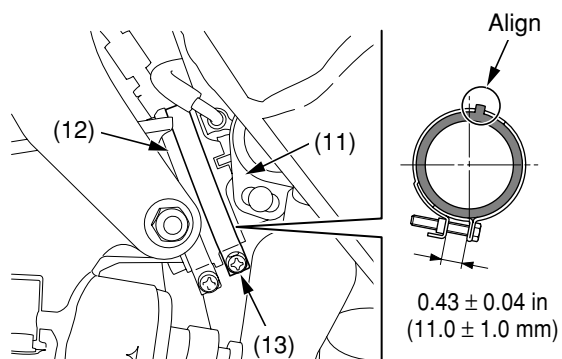


(11) throttle body (12) insulator (13) insulator band screw

7. Set the rear shock absorber (14) and install the rear shock absorber upper bolt (15) and nut (16).
Tighten the rear shock absorber upper nut to the specified torque:
32 lbf·ft (44 N·m, 4.5 kgf·m)

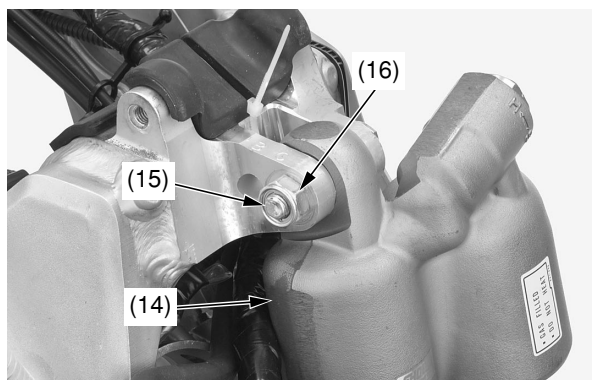


(14) rear shock absorber (15) rear shock absorber upper bolt (16) nut

8. Connect the radiator hose (17) to the water hose joint (18) of the cylinder head.

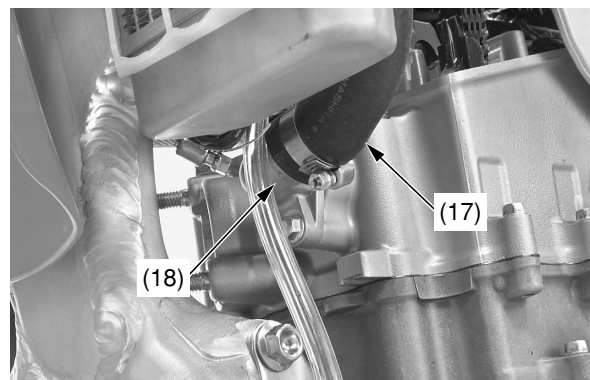


(17) radiator hose (18) water hose joint

9. Tighten the radiator hose clamp screw (19) as illustrated below.

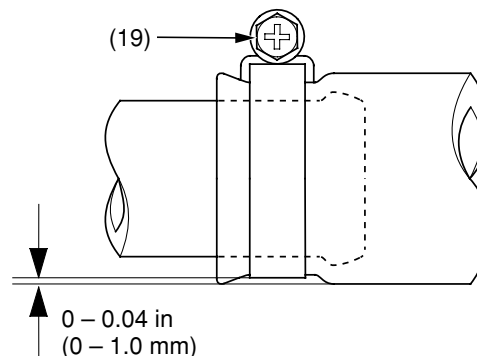

(19) radiator hose clamp screw

10. Connect the ECT sensor connector (20).

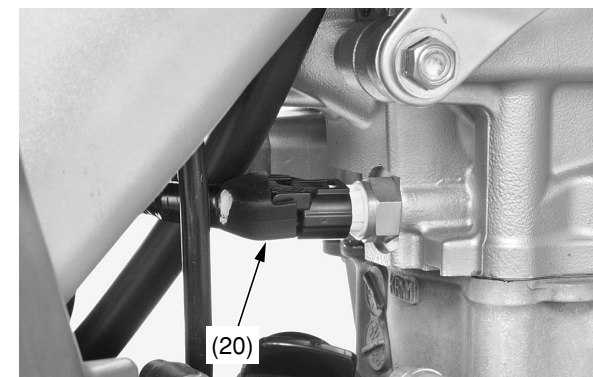

(20) ECT sensor connector

11. Install the shims, valve lifters, camshaft and camshaft holder (page 73).
12. Install the crankshaft hole cap (page 74).
13. Install the cylinder head cover (page 75).
14. Install the spark plug (page 67).
15. Install the exhaust pipe (page 102).
16. Install the subframe (page 37) and muffler (page 101).
17. Install the fuel tank and seat (pages 33, 35).
18. Fill and bleed the cooling system (page 143).
Check for the following:
– compression leaks
– abnormal engine noise
– secondary air leaks
– coolant leaks
– oil leaks

Suspension

Refer to *Safety Precautions* on page 23.


Loose, worn, or damaged suspension components may adversely affect the handling and stability of your CRF. If any suspension components appear worn or damaged, see your dealer for further inspection. Your dealer is qualified to determine whether or not replacement parts or repairs are needed.

Front Suspension Inspection

- When your CRF is new, break it in for approximately 1 hour to ensure that the suspension has worked in (page 19).
- After break-in, test run your CRF with the front suspension at the standard setting before attempting any adjustments.
- For optimum fork performance, we recommend that you disassemble and clean the fork after riding your CRF for 3 hours. See page 112 for fork disassembly.
- Replace the fork oil every 3 races or 7.5 hours of running. See page 87 for oil capacity adjustment after changing the fork oil.
- Replace the damper fork oil every 9 races or 22.5 hours of running. See page 115 for damper fork oil level adjustment after changing the fork oil.
- Use HP Fork Oil, SS-19 or an equivalent which contains special additives to assure maximum performance of your CRF's front suspension.
- Periodically check and clean all front suspension parts to assure top performance. Check the dust seals for dust, dirt, and foreign materials. Check the oil for any contamination.


- Refer to *Suspension Adjustment Guidelines* (page 130). Make all rebound and compression damping adjustments in one-click increments. (Adjusting two or more clicks at a time may cause you to pass over the best adjustment.) Test ride after each adjustment.
- If you become confused about adjustment settings, return to the standard position and start over.
- If the fork is still too stiff/soft after adjusting compression damping, determine which portion of the travel is still too stiff/soft. This is an important step that will help you solve suspension problems.

1. Make sure that the fork protectors (1) and dust seals (2) are clean and not packed with mud and dirt.
2. Check for signs of oil leakage. Damaged or leaking fork seals should be replaced before your CRF is ridden.

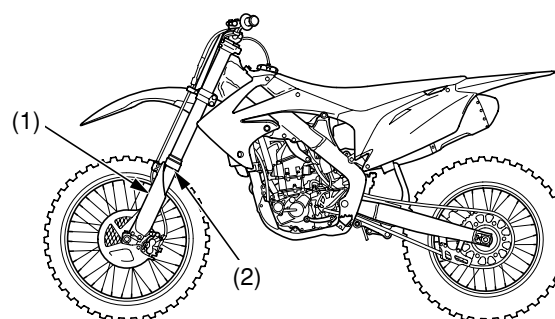


(1) fork protector (2) dust seal

3. Inspect the wear rings (3) for wear or damage. Replace the wear ring if it is 0.06 in (1.5 mm) or flat with the outer tube (4). When replacing the wear ring, remove the fork leg (page 112). Install the wear ring with its end gap (5) facing rearward.

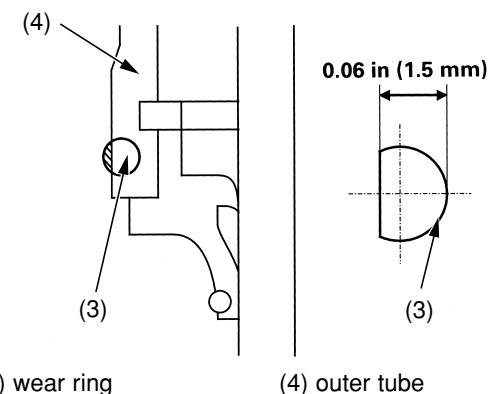


(3) wear ring (4) outer tube

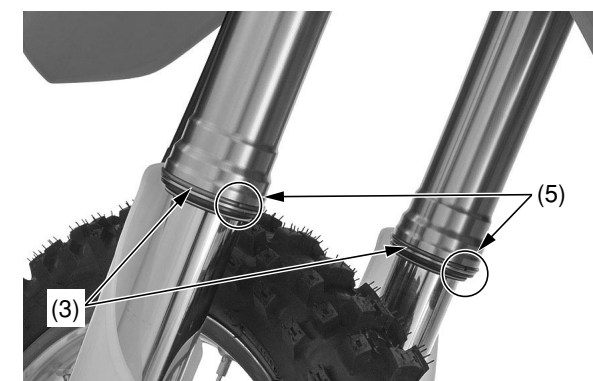

(3) wear rings (5) end gaps

4. Make a quick check of fork operation by locking the front brake and pushing down on the handlebar several times.

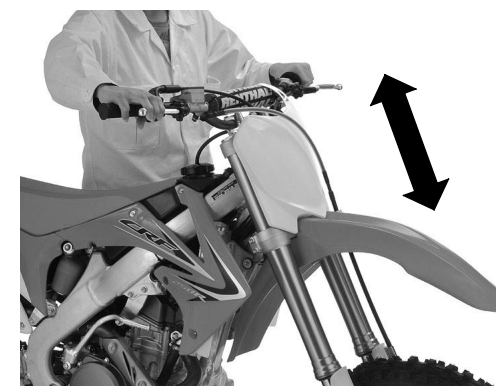

Suspension

Rear Suspension Inspection

The swingarm is controlled by one hydraulic shock absorber with an aluminum reservoir for oil and nitrogen gas pressure. The gas pressure in the reservoir is contained within a rubber bladder.

The shock absorber's spring pre-load and damping adjustments (compression and rebound) should be adjusted for the rider's weight and track conditions (page 129).


Do not attempt to disassemble, service, or dispose of the damper; see your dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

- When your CRF is new, break it in for approximately one hour with the standard suspension settings before attempting to adjust the rear suspension.
- Make all compression and rebound damping adjustments in the specified increment or turns described in page 126. Test ride after each adjustment.
- If the rear suspension is too stiff/soft, adjust it by turning all the compression and rebound adjusters according to the procedures described in page 126. After adjusting the adjusters simultaneously, suspension may be fine-tuned by turning one of the compression and rebound damping adjusters in one click or in 1/12 turn increments.
(Adjusting two or more increments or turns at a time may cause you to pass over the best adjustment.)
- If you have a problem finding an acceptable adjustment, return to the standard position and begin again.

1. Bounce the rear of the motorcycle up and down and check for smooth suspension action.



2. Remove the subframe (page 36).
3. Check for a broken or collapsed spring.
4. Check the rear shock absorber (1) for a bent shaft or oil leaks.

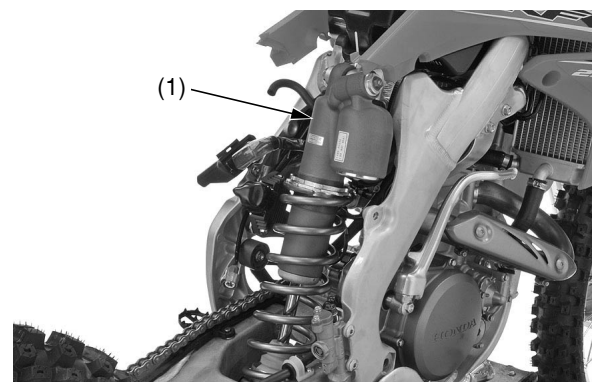

(1) rear shock absorber

5. Push the rear wheel sideways to check for worn or loose swingarm bearings. There should be no movement. If there is, have the bearings replaced by your dealer.

Suspension


Recommended Fork Oil

suggested oil	HP Fork Oil, SS-19
---------------	--------------------

Fork Oil Change


Refer to *Front Suspension Disassembly* on page 112.

- Record the rebound damping adjuster position and turn the adjuster counterclockwise until it stops.
 - Hold the outer tube (1), then remove the fork damper (2) from the outer tube using a lock nut wrench (3). Gently slide the outer tube down onto the axle holder (4).
- Lock nut wrench 07WMA-KZ30100

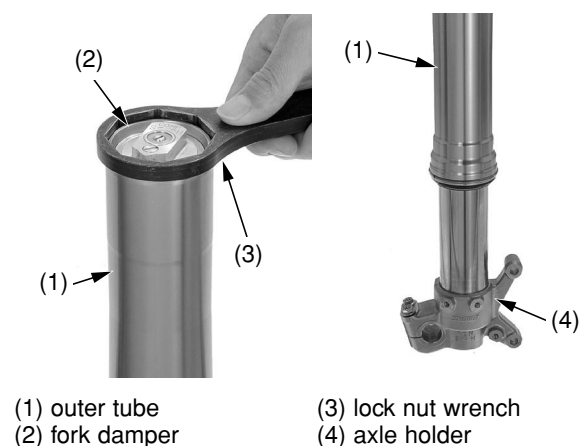


NOTICE


The outer tube (1) can drop on the slider (5) and damage the fork dust seal (6). To avoid damage, hold both the outer tube and slider when removing the fork damper.

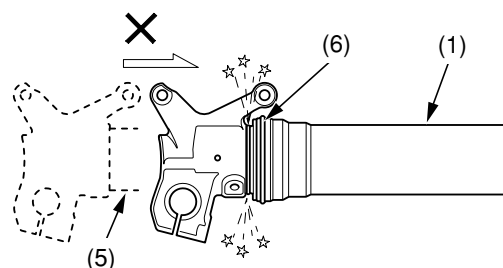

- Drain the fork oil from the outer tube (1). Drain the fork oil from the oil hole (7) of the fork damper.

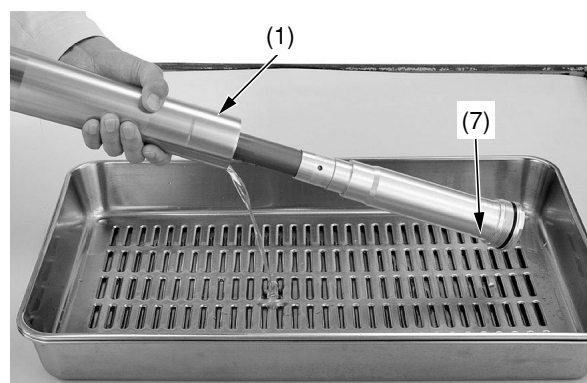

- Drain the fork oil by turning the outer tube (1) upside down. (About 0.4 US oz (12 cm³) of fork oil will be left in the outer tube when it is left inverted for about 20 minutes at 20 °C/68°F.)

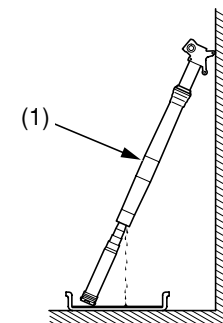

(1) outer tube


Pour the drained oil into a suitable container and dispose of it in an approved manner (page 144).

NOTICE

Improper disposal of drained oil is harmful to the environment.

Amount of fork oil left in the fork (within damper and spring) unit: cm³


minute °C/°F	5	10	20	35	55	85	145
30/86	16.5	14.1	12.7	11.8	11	10.1	8.6
20/68	17.4	15	13.7	12.6	11.5	10.5	9.1
10/50	18.9	16.5	14.8	13.7	12.5	11.4	9.8
0/32	20	18.4	15.9	14.5	13.7	13	11.7

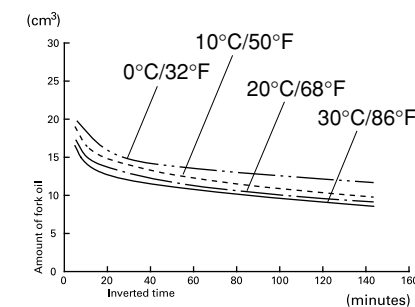

(cont'd)

Suspension


5. Pour the recommended fork oil into the outer tube (1).

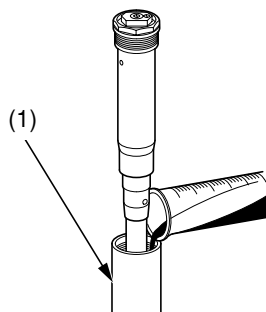

(1) outer tube


Fork Oil Capacity:

Standard 25.12 lbf/in (4.4 N/mm) Fork Spring

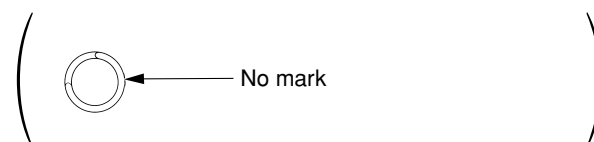


Standard oil capacity	12.6 US oz (372 cm ³)	
Maximum oil capacity	12.9 US oz (380 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.0 US oz (296 cm ³)	Slightly softer as it nears full compression.

Optional Softer 23.98 lbf/in (4.2 N/mm) Fork Spring

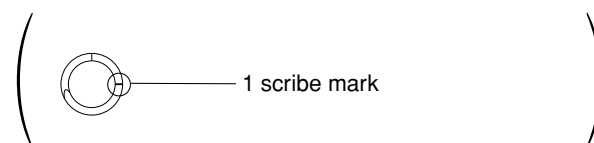

Standard oil capacity	12.8 US oz (377 cm ³)	
Maximum oil capacity	13.0 US oz (385 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.2 US oz (301 cm ³)	Slightly softer as it nears full compression.

Optional Stiffer 26.20 lbf/in (4.59 N/mm) Fork Spring

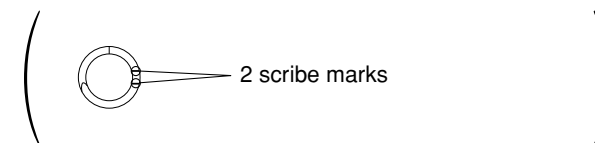


Standard oil capacity	12.7 US oz (375 cm ³)	
Maximum oil capacity	12.9 US oz (382 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.1 US oz (299 cm ³)	Slightly softer as it nears full compression.

Be sure the oil capacity is the same in both fork legs.

Suspension

6. Check that the O-ring (8) on the fork damper (2) is in good condition. Apply the recommended fork oil to the O-ring.

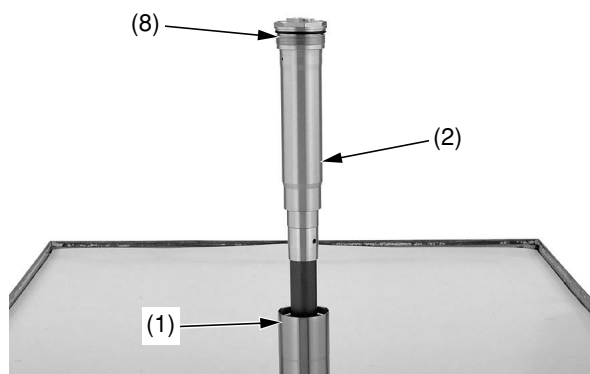

(1) outer tube
(2) fork damper
(8) O-ring

7. Temporarily install the fork damper to the outer tube (1).
After installing the fork leg (page 112) tighten the fork damper to the specified torque:
Actual:
25 lbf·ft (34 N·m, 3.5 kgf·m)
Torque wrench scale reading:
23 lbf·ft (31 N·m, 3.2 kgf·m), using a 20 in (500 mm) long torque wrench.

When using the lock nut wrench, use a 20 in (500 mm) long deflecting beam type torque wrench. The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the fork damper.

Brakes


Refer to *Safety Precautions* on page 23.

Both the front and rear brakes are the hydraulic disc type. As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the braking response of the front brake lever or rear pedal feels unusual, check the brake pads. If the brake pads are not worn beyond the recommended limit (page 93), there is probably air in the brake system. Refer to an official Honda Service Manual or see your dealer to have the air bled from the system.

Front Brake Lever Adjustment

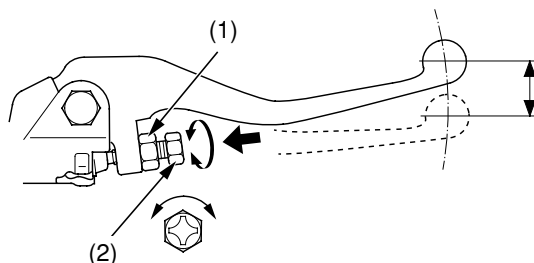


(1) lock nut
(2) adjuster

1. Loosen the lock nut (1).
2. To position the brake lever farther away from the handgrip, turn the adjuster (2) clockwise. To position the brake lever closer to the handgrip, turn the adjuster counterclockwise.
3. While holding the adjuster, tighten the lock nut to the specified torque:
4.4 lbf·ft (5.9 N·m, 0.6 kgf·m)
4. Apply silicone grease to the contacting faces of the adjuster.


Rear Brake Pedal Height

The brake pedal height should be approximately level with the right footpeg.

1. Loosen the lock nut (1) and turn the adjusting bolt (2) in direction (+) to raise the rear brake pedal (3) or in direction (–) to lower it.
2. Tighten the lock nut to the specified torque at the desired pedal height.
4.4 lbf·ft (5.9 N·m, 0.6 kgf·m)

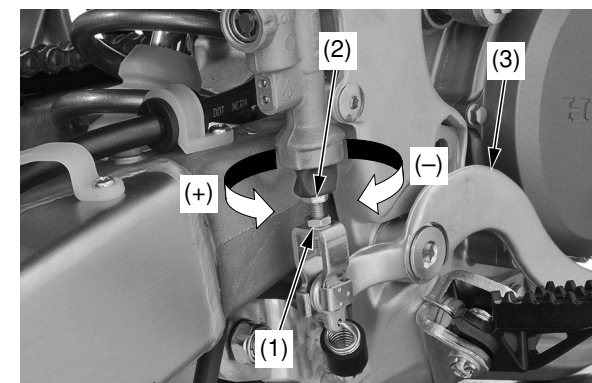

(1) lock nut
(2) adjusting bolt
(3) rear brake pedal
(+) raise the pedal height
(–) lower the pedal height

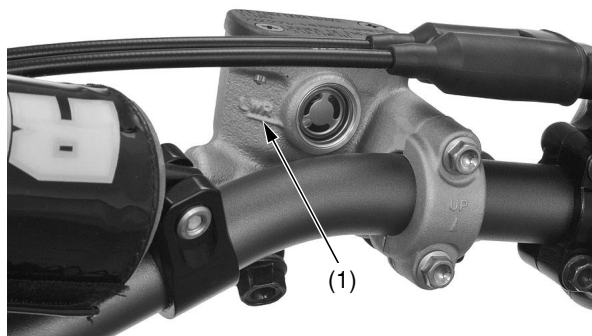Fluid Level InspectionFront Brake Fluid Level Check

(1) LWR mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LWR mark (1). If the level is at or below the LWR mark, check the brake pads for wear (page 93).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the pulling distance for the front brake lever feels excessive, there is probably air in the brake system and it must be bled.


Refer to an official Honda Service Manual or see your dealer for brake bleeding.

Honda recommends using Honda DOT 4 brake fluid from a sealed container, or an equivalent.

Other Checks:

Make sure there are no fluid leaks.

Check for deterioration or cracks in the hoses and fittings.

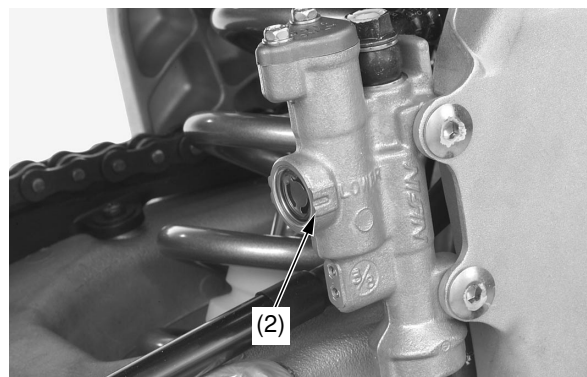Rear Brake Fluid Level Check

(2) LOWER level mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER level mark (2). If the level is at or below the LOWER level mark, check the brake pads for wear (page 93).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the travel for the rear brake pedal feels excessive, there is probably air in the brake system and it must be bled. Refer to an official Honda Service Manual or see your dealer for brake bleeding.

Honda recommends using Honda DOT 4 brake fluid from a sealed container, or an equivalent.

Other Checks:

Make sure there are no fluid leaks.

Check for deterioration or cracks in the hoses and fittings.


Brakes

Adding Front Brake Fluid

NOTICE

Spilled brake fluid will severely damage the painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the reservoir is horizontal first.

- Always use fresh DOT4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid as they may not be compatible.
- The recommended brake fluid is Pro Honda DOT 4 brake fluid or an equivalent.

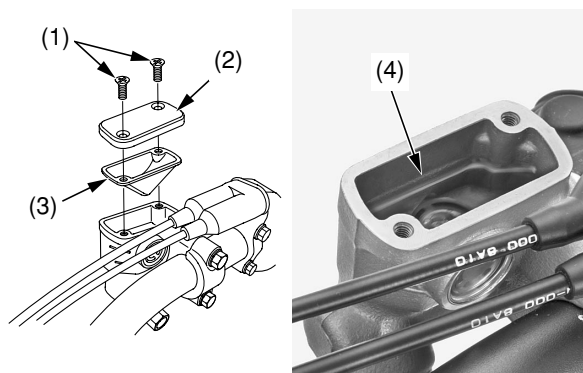

- (1) screws
(2) reservoir cap
(3) diaphragm
(4) upper level mark


1. Remove the screws (1), reservoir cap (2) and diaphragm (3).
2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (4). Do not overfill.
3. Reinstall the diaphragm and reservoir cap.
4. Tighten the screws to the specified torque: 0.7 lbf·ft (1.0 N·m, 0.1 kgf·m)

Adding Rear Brake Fluid

NOTICE

Spilled brake fluid will severely damage the painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the reservoir is horizontal first.

- Always use fresh DOT4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid as they may not be compatible.
- The recommended brake fluid is Pro Honda DOT 4 brake fluid or an equivalent.

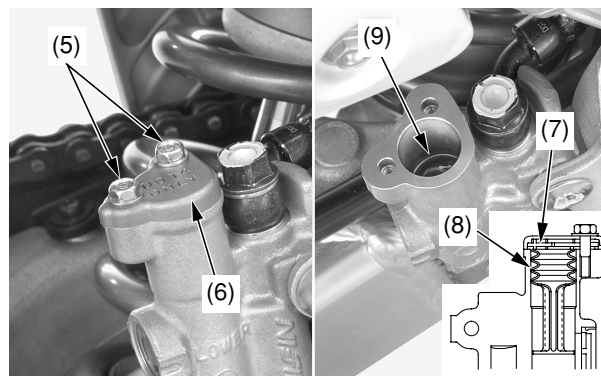

- (5) bolts
(6) reservoir cap
(7) set plate
(8) diaphragm
(9) upper level mark

1. Remove the bolts (5) reservoir cap (6), set plate (7) and diaphragm (8).
2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (9). Do not overfill.
3. Set the diaphragm as shown.
4. Reinstall the set plate and reservoir cap.
5. Tighten the bolts to the specified torque: 0.7 lbf·ft (1.0 N·m, 0.1 kgf·m)


Brakes

Brake Pad Wear

Brake pad wear depends on the severity of usage and track conditions. (Generally, the pads will wear faster on wet and dirty tracks) Inspect the pads at each regular maintenance interval (page 25).

Front Brake Pads


Inspect the brake pads (2) through the front wheel to determine the pad wear. If either pad is worn anywhere to a thickness of 0.04 in (1 mm), both pads must be replaced.

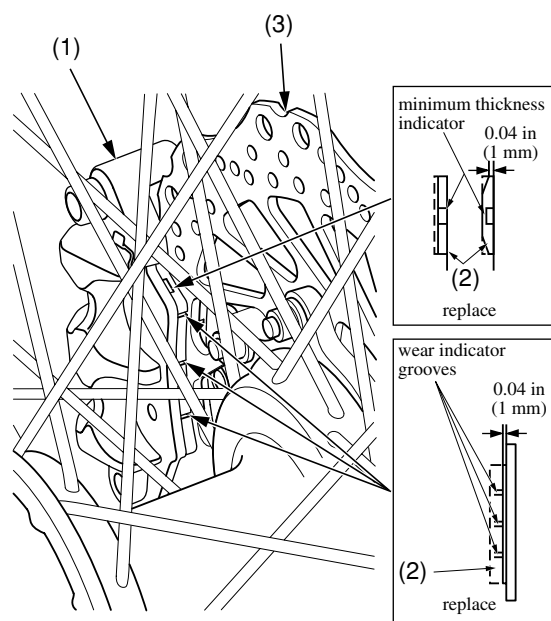

(1) front brake caliper
(2) brake pads
(3) brake disc

Rear Brake Pads

Inspect the brake pads (5) from the rear side of the caliper to determine the pad wear. If either pad is worn anywhere to a thickness of 0.04 in (1 mm), both pads must be replaced.

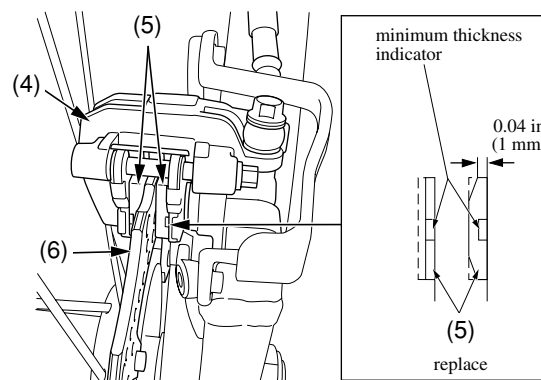

(4) rear brake caliper
(5) brake pads
(6) brake disc

Other Inspections

Check that the brake lever and pedal assemblies are positioned properly and the securing bolts are tight.

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.


Wheels

Refer to *Safety Precautions* on page 23.

Keeping the wheels true (round) and maintaining correct spoke tension is critical to safe motorcycle operation. During the first few rides, spokes will loosen more rapidly due to the initial seating of the parts. Excessively loose spokes may result in instability at high speeds and the possible loss of control. It's also important that the rim locks are secure to prevent tire slippage.

It is not necessary to remove the wheels to perform the recommended service in the Maintenance Schedule (page 25). However, information for wheel removal is provided for emergency situations.

Wheel Rims & Spokes

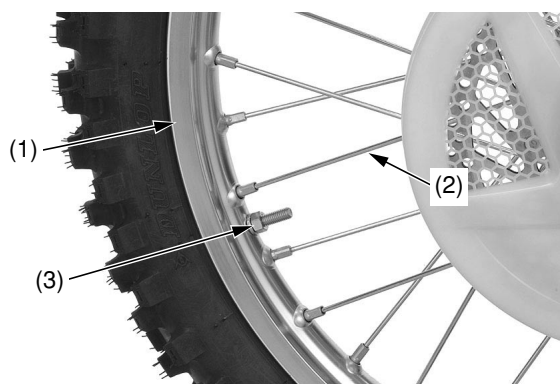

(1) wheel rim
(2) spoke
(3) rim lock

1. Inspect the wheel rims (1) and spokes (2) for damage.

2. Tighten, any loose spokes and rim locks (3) to the specified torque:
Front Spoke :
2.7 lbf·ft (3.7 N·m, 0.4 kgf·m)
Rear Spoke :
2.7 lbf·ft (3.7 N·m, 0.4 kgf·m)
Rim Lock : 9 lbf·ft (12 N·m, 1.2 kgf·m)
3. Check wheel rim runout. If runout is noticeable, see the Honda Service Manual for inspection instructions.

Axles & Wheel Bearings

See the Honda Service Manual for inspection information:

1. Check the axle shaft for runout.
2. Check the condition of the wheel bearings.

Tires & Tubes

Refer to *Safety Precautions* on page 23.

To safely operate your CRF the tires must be the proper type (off-road) and size, in good condition with adequate tread, and correctly inflated.

⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

The following pages give detailed information on how and when to check your air pressure, how to inspect your tires for wear and damage, and our recommendations on tire repair and replacement.

Air Pressure

Properly inflated tires provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tires wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Underinflated tires can also cause wheel damage on hard terrain. Overinflated tires make your CRF ride harshly, are more prone to damage from surface hazards, and wear unevenly.

Make sure the valve stem caps are secure. If necessary, install new caps.

Always check air pressure when your tires are “cold.” If you check air pressure when your tires are “warm” — even if your CRF has only been ridden for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold pressures, the tires will be underinflated.

The correct “cold” tire pressures are:

Front	15 psi (100 kPa, 1.0 kgf/cm ²)
Rear	15 psi (100 kPa, 1.0 kgf/cm ²)

If you decide to adjust tire pressures for a particular riding condition, make changes a little at a time.

Inspection

Take time to inspect your tires and wheels before you ride.

- Inspect carefully for bumps or bulges in the side of the tire or the tread. Replace any tire that has a bump or bulge.
- Look closely for cuts, slits, or cracks in the tires. Replace a tire if you can see fabric or cord.
- Check for rocks or other objects embedded in the tire or tread. Remove any objects.
- Check the position of both valve stems. A tilted valve stem indicates the tube is slipping inside the tire or the tire is slipping on the rim.

Tube Replacement

If a tube is punctured or damaged, you should replace it as soon as possible. A repaired tube may not have the same reliability as a new one, and it may fail while you are riding.

Use a replacement tube equivalent to the original.

Tires & Tubes

Tire Replacement

The tires that came on your CRF were designed to provide a good combination of handling, braking, durability, and comfort across a broad range of riding conditions.

⚠ WARNING

Installing improper tires on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

Front	80/100 – 21 51M	
	DUNLOP	MX51F
Rear	100/90 – 19 57M	
	DUNLOP	MX51
Type	bias-ply, tube	

- When replacing, use the original equipment tires or equivalent tires of the same size, construction, speed rating, and load range as the originals.
- Replace the tube any time you replace a tire. The old tube will probably be stretched and, if installed in a new tire, could fail.

Drive Chain

Refer to *Safety Precautions* on page 23.


The service life of the chain depends on proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain or sprockets.

When the motorcycle is ridden on unusually dusty or muddy tracks, more frequent maintenance will be necessary.

Before servicing your drive chain, turn the engine OFF and check that your transmission is in neutral.

Inspection

1. Turn the engine off, raise the rear wheel off the ground by placing an optional workstand or equivalent support under the engine and shift the transmission into neutral.
2. Check the drive chain slack (1) in the upper drive chain run midway between the drive (2) and driven sprockets (3). Drive chain slack should allow the following vertical movement by hand:
1 – 1 3/8 in (25 – 35 mm)

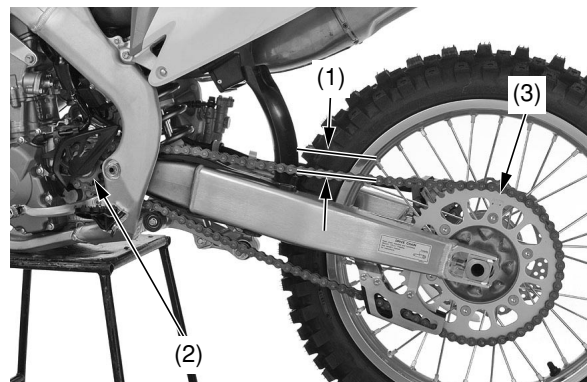

(1) drive chain slack
(2) drive sprocket

(3) driven sprocket

3. Check drive chain slack at several points along the chain. The slack should remain constant. If it isn't, some links may be kinked and binding. Lubricating the chain will often eliminate binding and kinking.

NOTICE


Excessive chain slack may allow the drive chain to damage the engine cases.

4. Inspect the drive chain for:
 - damaged rollers
 - loose pins
 - dry or rusted links
 - kinked or binding links
 - excessive wear

Replace the drive chain (page 99) if it has damaged rollers, loose pins, or kinks that cannot be free. Lubricate the drive chain (page 98) if it appears dry or shows signs of rust. Lubricate any kinked or binding links and work them free. Adjust chain slack if needed (page 98).


Drive Chain Sliders

1. Check the chain slider (1) for wear. Replace it if below the service limit.
SERVICE LIMIT:
upper side: 0.2 in (5 mm)
lower side: 0.10 in (2.5 mm)

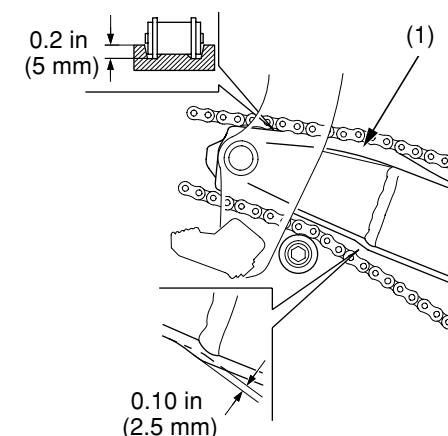

(1) chain slider

2. Check the chain guide slider (2) for wear. Replace the guide slider if it is worn to the bottom of the wear limit (3).

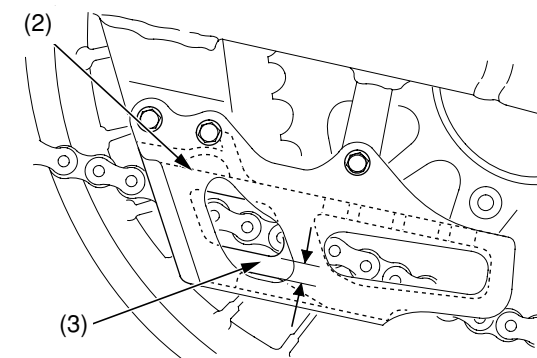

(2) chain guide slider

(3) wear limit

Drive Chain

Drive Chain Rollers

1. Check the upper drive chain roller (1) and lower drive chain roller (2) for wear or damage.
2. Measure the diameter of the drive chain rollers and replace them if below the service limit.

Service Limit:

Upper roller: 1.5 in (39 mm)

Lower roller: 1.2 in (31 mm)


Replace the roller if necessary as follows.

Install the upper drive chain roller (Green) with the “→” mark (3) facing toward the frame and lower drive chain roller (Black) as shown.

Tighten the drive chain roller bolt and nut to the specified torque:

Upper roller bolt: 9 lbf·ft (12 N·m, 1.2 kgf·m)

Lower roller nut: 9 lbf·ft (12 N·m, 1.2 kgf·m)

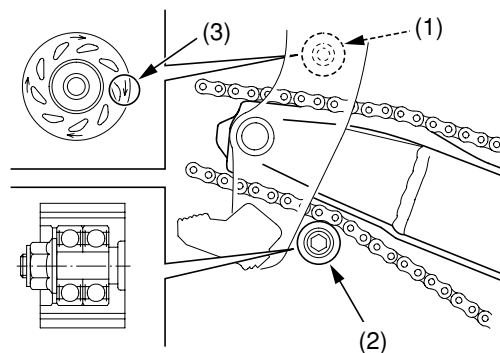


(1) upper drive chain roller

(2) lower drive chain roller

(3) “→” mark

Adjustment

1. Loosen the rear axle nut (1).
2. Loosen both lock nuts (2) and turn the adjusting bolts (3) counterclockwise to decrease slack or clockwise to increase slack. Align the index marks (4) of the axle plates (5) with the same reference marks (6) on both sides of the swingarm.

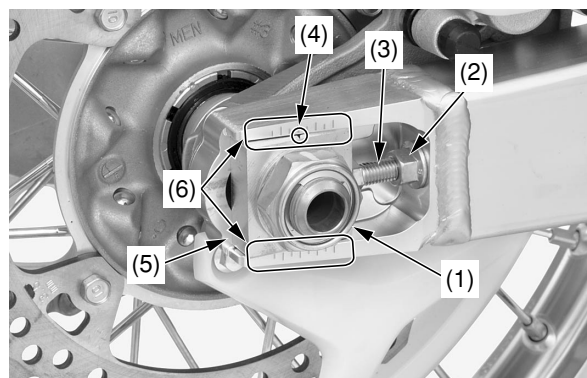

(1) rear axle nut

(2) lock nut

(3) adjusting bolt

(4) index mark

(5) axle plate


(6) reference mark

3. Tighten the rear axle nut to the specified torque:
94 lbf·ft (128 N·m, 13.1 kgf·m)
4. Recheck chain slack and adjust as necessary.
5. Loosen the adjusting bolt counterclockwise lightly until it touches the axle plate. Then, while holding the adjusting bolt with a wrench, tighten the lock nut to the specified torque:
20 lbf·ft (27 N·m, 2.8 kgf·m)

Lubrication

Commercially prepared drive chain lubricants may be purchased at most motorcycle shops and should be used in preference to motor oil. Pro Honda HP Chain Lube or an equivalent is recommended.

Saturate each chain joint so that the lubricant penetrates the space between adjacent surfaces of the link plates and rollers.

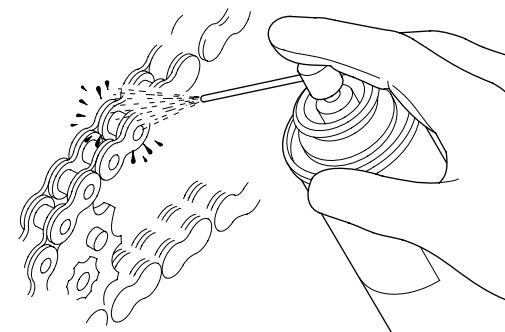


Drive Chain

Removal, Cleaning & Replacement

For maximum service life, the drive chain should be cleaned, lubricated, and adjusted before each outing.


1. Remove the master link retaining clip (1) with pliers. Do not bend or twist the clip. Remove the master link (2). Remove the drive chain.

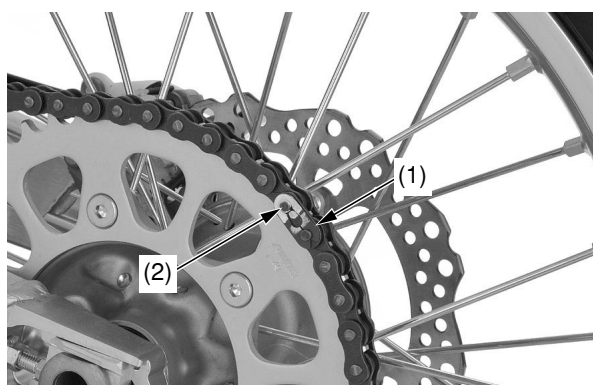

(1) retaining clip (2) master link

2. Clean the drive chain in high flash-point solvent and allow it to dry.
3. Inspect the drive chain for possible wear or damage. Replace the drive chain if it has damaged rollers, loose fitting links, or otherwise appears unserviceable.
Replacement chain:
Size/link: DID520DMA4-116RB
RK520TXZ-116RJ

4. Inspect the sprocket teeth for wear or damage. We recommend replacing the sprocket whenever a new chain is installed. Both chain and sprockets must be in good condition, or the new replacement chain or sprocket(s) will wear rapidly. Excessively worn sprocket teeth have a hooked, worn appearance. Replace any sprocket which is damaged or excessively worn.

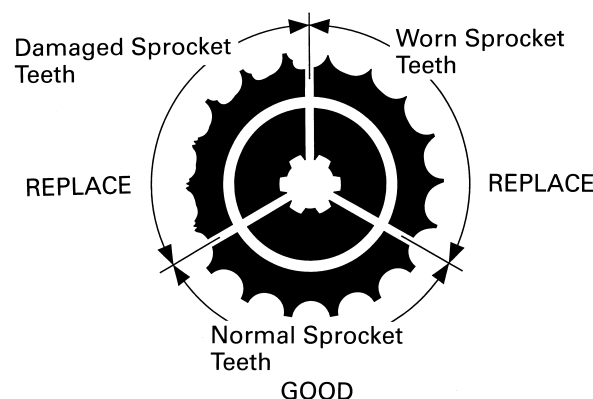


NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

5. Measure a section of the drive chain to determine whether the chain is worn beyond its service limit. Put the transmission in gear, and then turn the rear wheel forward until the lower section of the chain is pulled taut. With the chain held taut and any kinked joints straightened, measure the distance between a span of 17 pins, from pin center to pin center. If the measurement exceeds the service limit, replace the chain. After the chain is measured, shift the transmission into neutral again before proceeding with inspection and service.

Service limit: 10.20 in (259.0 mm)

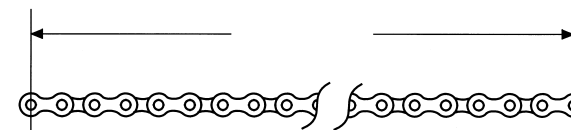

MEASURE A SPAN OF 17 PINS (16 PITCHES)

6. Lubricate the drive chain.
7. Pass the chain over the sprockets and join the ends of the chain with the master link. For ease of assembly, hold the chain ends against adjacent rear sprocket teeth while inserting the master link. Install the master link retaining clip so that the closed end of the clip will face the direction of forward wheel rotation.
8. Recheck chain slack and adjust as necessary.

More About Drive Chain

- The master link is the most critical element of drive chain security. Master links are reusable, as long as they remain in excellent condition. We recommend installing a new master link retaining clip when the drive chain is reassembled.
- You may find it easier to install a new chain by connecting it to the old chain with a master link and pulling the old chain to position the new chain on the sprockets.

Exhaust Pipe/Muffler

Exhaust Pipe/Muffler Inspection


Check the mounting bolts and exhaust pipe joint nuts for tightness.

Check the exhaust pipe and muffler for cracks or deformation.

A damaged exhaust pipe and muffler may reduce engine performance.


Muffler Removal

1. Remove the seat mounting bolt (1), side cover bolt (2) and right side cover (3).

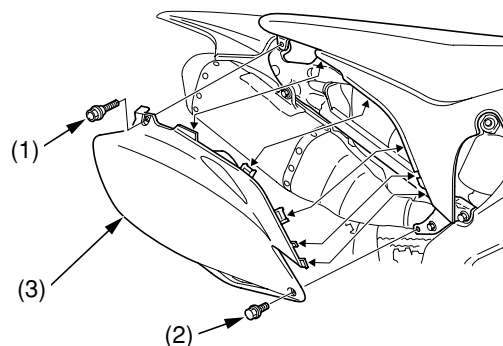


- (1) seat mounting bolt (3) right side cover
(2) side cover bolt

2. Loosen the muffler clamp bolt (4).

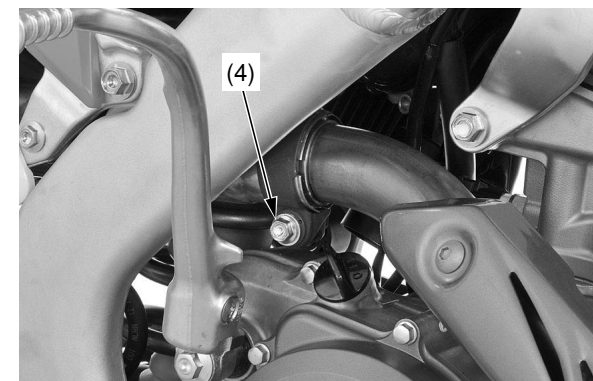

- (4) muffler clamp bolt

3. Remove the muffler mounting A bolt (5), muffler mounting B bolt (6), washer A (7), washer B (8) and muffler (9).

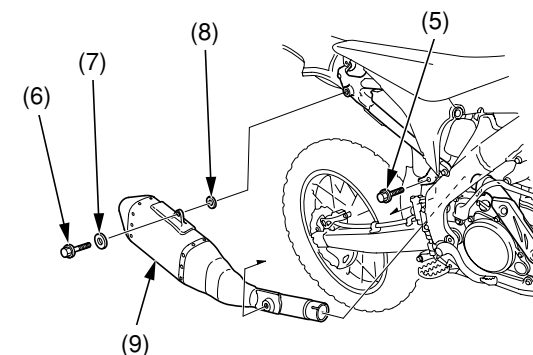


- (5) muffler mounting A bolt (8) washer B
(6) muffler mounting B bolt (9) muffler
(7) washer A

Exhaust Pipe/Muffler


Muffler Installation

1. Remove the old gasket from exhaust pipe (1).
2. Install the muffler clamp (2) and a new gasket (3) to the exhaust pipe.

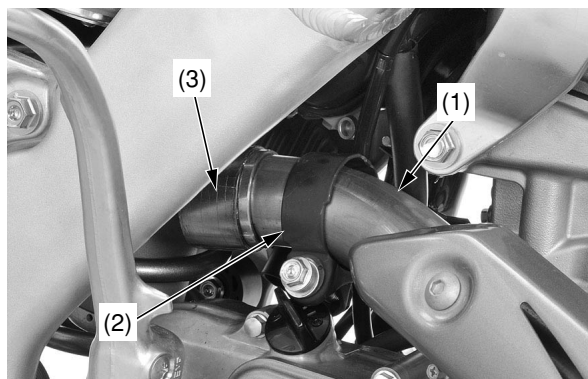


(1) exhaust pipe
(2) muffler clamp
(3) gasket (new)

3. Install the muffler (4).
4. Install the muffler clamp (2) by aligning the tab (5) of the muffler clamp with the cutout (6) of the muffler.

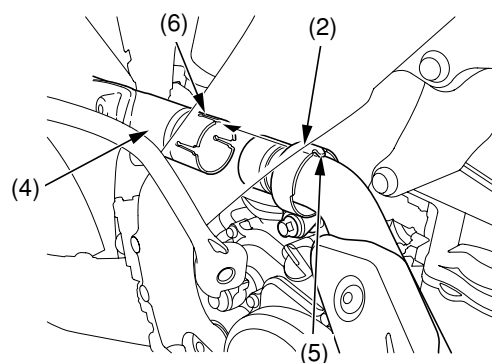


(2) muffler clamp
(4) muffler
(5) tab
(6) cutout

5. Install the washer A (7) washer B (8), muffler mounting B bolt (9) and muffler mounting A bolt (10).

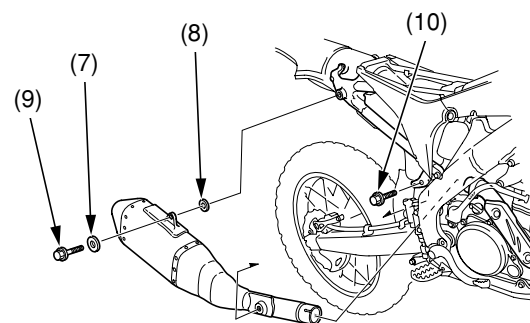

(7) washer (A)
(8) washer (B)
(9) muffler mounting B bolt
(10) muffler mounting A bolt

6. Tighten the muffler clamp bolt (11) to the specified torque:
15 lbf·ft (21 N·m, 2.1 kgf·m)

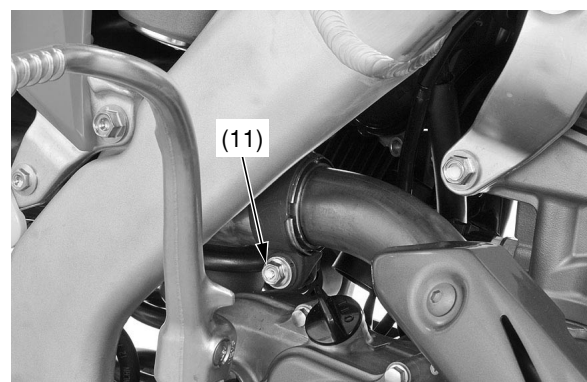

(11) muffler clamp bolt

7. Tighten the muffler mounting B bolt (9) and muffler mounting A bolt (10) to the specified torque:
19 lbf·ft (26 N·m, 2.7 kgf·m)




(9) muffler mounting B bolt
(10) muffler mounting A bolt

(cont'd)

Exhaust Pipe/Muffler

8. Install the right side cover (12) and bolt (13).
9. Install the seat mounting bolt (14) and tighten it to the specified torque:
19 lbf·ft (26 N·m, 2.7 kgf·m)
Tighten the bolt (12) to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

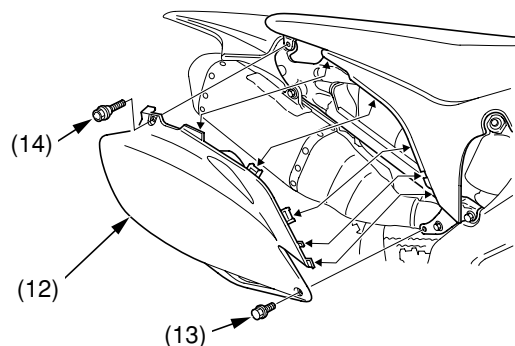


(12) right side cover
(13) bolt

(14) seat mounting bolt

Exhaust Pipe Removal


1. Remove the muffler (page 100).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

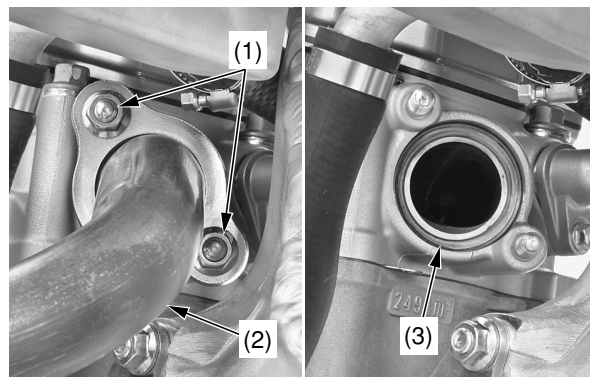

(1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3).

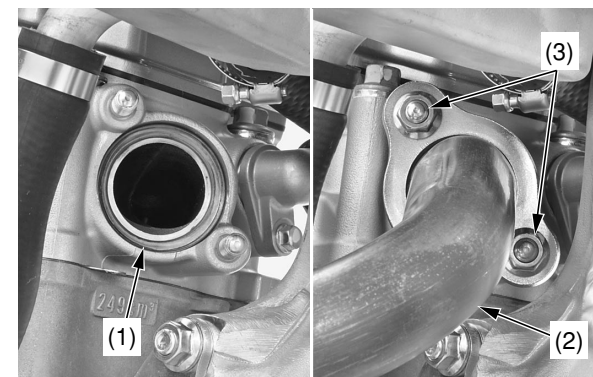

(1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the muffler (page 101) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the muffler clamp bolt, muffler mounting A bolt and B bolt (page 101).
6. Installation can be done in the reverse order of removal.

Steering Damper


Refer to *Safety Precaution* on page 23.

Loose, worn or damaged steering damper components may adversely affect the handling and stability of your CRF. If any steering damper components appear worn or damaged, see your dealer for further inspection. Your dealer is qualified to determine whether or not replacement parts are needed. Do not attempt to disassemble the steering damper; see your dealer. The instructions found in this owner's manual are limited to adjustment and service of the steering damper assembly only.

Steering Damper Operation Inspection


- When your CRF is new, break it in for approximately 1 hour to ensure that the steering damper is broken (page 19).
- After break-in, test run your CRF with the steering damper at the standard setting before making any adjustments.
- Check the spherical bearings and dust seal for dust, dirt, and foreign materials.
- Make all damping adjustments in one-click increments. (Adjusting two or more clicks at a time may cause you to pass over the best adjustment.) Test ride after each adjustment.
- If you have a problem finding an acceptable adjustment, return to the standard position and begin again.

1. Unlock the number plate tab (1) from the handlebar pad. Remove the bolts (2) and number plate (3).

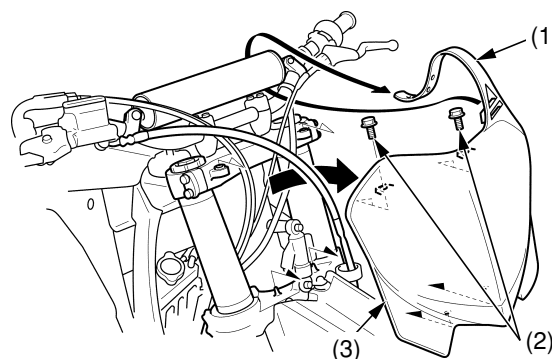

- (1) number plate tab
(2) bolts
(3) number plate

2. Check the steering damper (4) for deformation or oil leaks. Check the damper rod (5) for bending or damage. Replace the damper case or damper rod if there is any abnormality. Refer to the Honda Service Manual or see your Honda dealer for steering damper disassembly. Check the torque of the steering damper mounting bolts (6): 15 lbf·ft (20 N·m, 2.0 kgf·m).

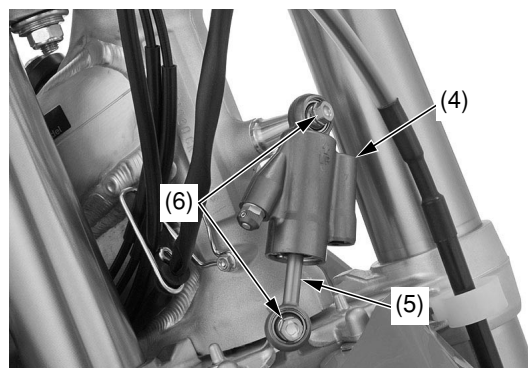


- (4) steering damper
(5) damper rod
(6) steering damper mounting bolts

3. With your CRF on a box or an optional workstand (front wheel elevated), check that the steering moves smoothly from side-to-side.



4. Install the number plate (3) by aligning its holes (7) with the tabs (8) on the steering stem. Install and tighten the bolts (2) securely. Route the number plate tab (1) around the handlebar pad (9) as shown.

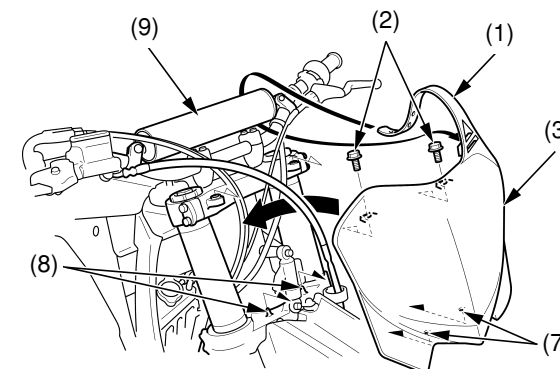


- (1) number plate tab
(2) bolts
(3) number plate
(7) holes
(8) tabs
(9) handlebar pad

Steering Damper

Removal

1. Remove the number plate (page 103).
2. Remove the steering damper mounting bolts (1), collar (2) and steering damper (3).

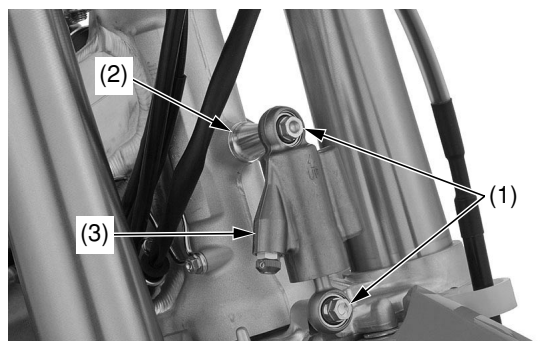


- (1) steering damper mounting bolts
(2) collar
(3) steering damper

Inspection

1. Check the damper rod (1) operation.
The damper rod is fully extended and compressed by hand. Release the damper rod, then check that it extends to its maximum length.


If the damper rod does not extend its maximum length, disassemble and inspect for steering damper.
Refer to the Honda Service Manual or see your dealer.

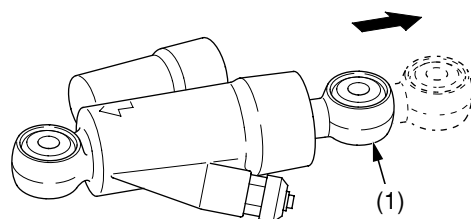

- (1) damper rod

2. Check the condition of the spherical bearings (2).
Move the spherical bearing with your finger. The spherical bearing should move smoothly and quietly.


Replace the spherical bearing if it does not move smoothly and quietly.
Refer to the Honda Service Manual or see your dealer.

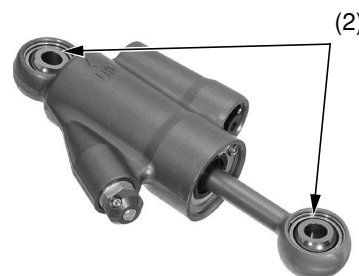

- (2) spherical bearings

Installation

1. Clean and apply a locking agent to the steering damper mounting bolt threads.
2. Install the steering damper (1) with its "UP" mark (2) facing up and forward. Turn the damper rod and its stopper ring (3) facing toward the front side.
3. Install the collar (4) and steering damper mounting bolts (5).
Be sure to install the collar with its wide flange side facing toward the steering head pipe side.
4. Tighten the steering damper mounting bolts to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)

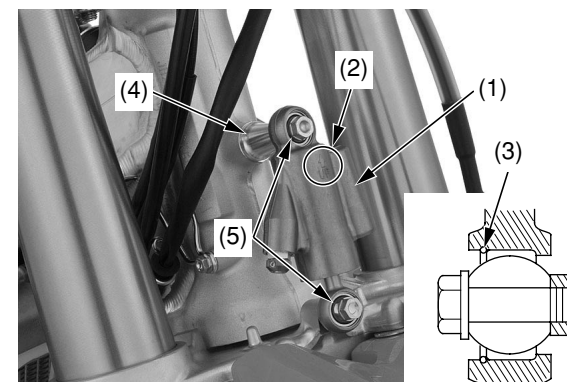

- (1) steering damper
(2) "UP" mark
(3) stopper ring
(4) collar
(5) steering damper mounting bolts

5. Place your CRF on the workstand or equivalent support with the front wheel off the ground.
Check that the steering moves smoothly from side-to-side.



6. Install the number plate (page 103).

Additional Maintenance Procedures


Refer to *Safety Precautions* on page 23.

Steering Head Bearings Inspection

1. With your CRF on a box or workstand (front wheel elevated), turn the handlebar to the right and left to check for roughness in the steering head bearings.




2. Stand in front of your CRF, grab the fork (at the axle), look at the steering head, and push the fork in and out (toward the engine) to check for play in the steering head bearings. If any roughness or play is felt, but you do not see any movement in the steering head, the fork bushings may be worn. Refer to the Honda Service Manual for replacement or adjustment procedures, or see your dealer.

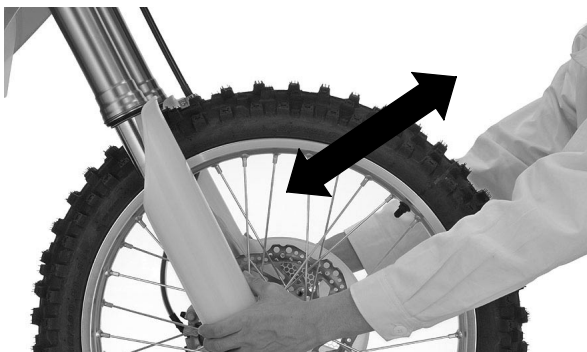

Handlebar Inspection

1. Remove the handlebar pad.
2. Check the handlebar (1) for bends or cracks.
3. Check that the handlebar has not moved from its proper position. Make sure the end of the handlebar holders (2) is aligned with the paint mark (3) on right or left side.
4. Check the torque of the handlebar upper holder bolts (4):
16 lbf·ft (22 N·m, 2.2 kgf·m)
Tighten the front bolts first.

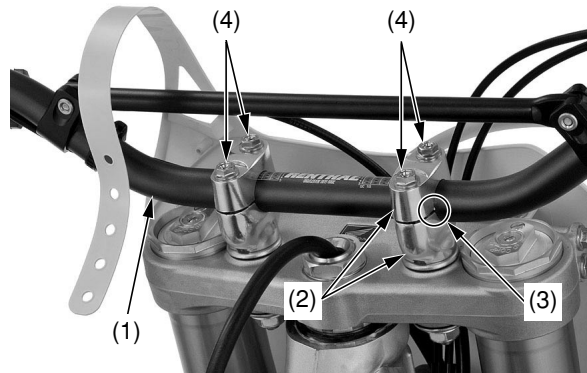

- (1) handlebar
(2) handlebar holders
(3) paint mark
(4) handlebar upper holder bolts

Control Cables

Periodically, disconnect the throttle, clutch and hot start cables at their upper ends. Thoroughly lubricate the cable pivot points with a commercially-available cable lubricant. If the clutch lever, hot start lever and throttle operation is not smooth, replace the cable. Be sure the throttle returns freely and automatically from fully open to fully closed in all steering positions.


Additional Maintenance Procedures

Nuts, Bolts, Fasteners

Check and tighten nuts, bolts, and fasteners before every outing.


	Item	Torque		
		lbf•ft	N•m	kgf•m
	ENGINE			
1	Cylinder head cover bolts	7	10	1.0
2	Exhaust pipe joint nuts	15	21	2.1
3	Water pump cover bolts	7	10	1.0
4	Crankshaft hole cap	11	15	1.5
5	Transmission oil check bolt	9	12	1.2
6	Clutch cover bolts	7	10	1.0
7	Coolant drain bolt	7	10	1.0
8	Engine oil drain bolt	12	16	1.6
9	Cylinder bolt	7	10	1.0
10	Oil filter cover bolts	9	12	1.2
11	Cylinder head bolts	7	10	1.0
12	Drive sprocket bolt	23	31	3.2
13	Transmission oil drain bolt	12	16	1.6
14	Cylinder head stud bolts	33	45	4.6

RIGHT SIDE

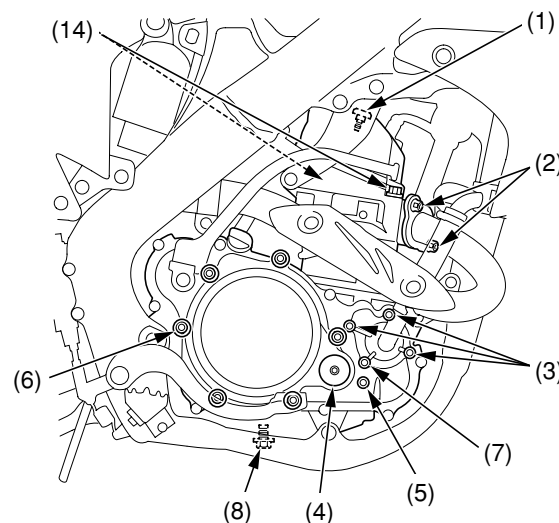

- (1) cylinder head cover bolts
- (2) exhaust pipe joint nuts
- (3) water pump cover bolts
- (4) crankshaft hole cap
- (5) transmission oil check bolt
- (6) clutch cover bolts
- (7) coolant drain bolt
- (8) engine oil drainbolt

LEFT SIDE

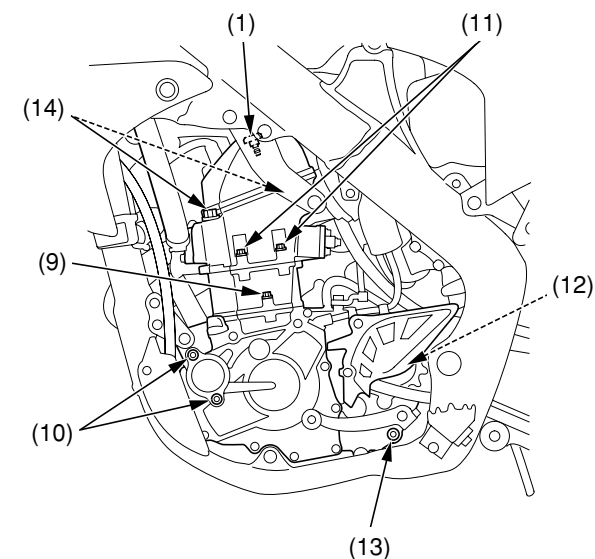

- (9) cylinder bolt
- (10) oil filter cover bolts
- (11) cylinder head bolts
- (12) drive sprocket bolt
- (13) transmission oil drain bolt
- (14) cylinder head stud bolts

Appearance Care

Refer to *Safety Precautions* on page 23.

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values his motorcycle. A clean CRF is also easier to inspect and service.


While you're cleaning, be sure to look for damage, wear, and gasoline or oil leaks.

General Recommendations

- To clean your CRF you may use:
 - water
 - a mild, neutral detergent and water
 - a mild spray and wipe cleaner/polisher
 - a mild spray and rinse cleaner/degreaser and water
- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your CRF or discolor the seat and decals.
- If your CRF is still warm from recent operation, give the engine and exhaust system time to cool off.
- We recommend the use of a garden hose to wash your CRF. High pressure washers, (like those at coin-operated car washes) can damage certain parts of your CRF. The force of water under extreme pressure can penetrate the dust seals of the suspension pivot points and steering head bearings-driving dirt inside and needed lubrication out.

If you use a high pressure washer, avoid spraying the following areas:

wheel hubs
muffler outlet
under seat
engine stop button
brake master cylinders
under fuel tank
drive chain
throttle body
steering head bearings
suspension pivot points

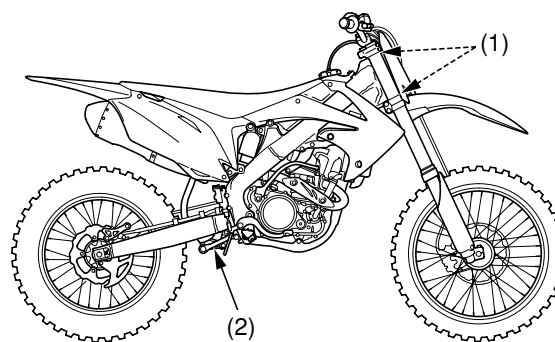

- (1) steering head bearings
(2) suspension pivot points

NOTICE

High pressure water (or air) can damage certain parts of your CRF.

You may use Pro Honda Hondabrite, a multi-surface cleaner/degreaser, to remove both dirt and petroleum-based grime from paint, alloy, plastic, and rubber surfaces. Wet any heavy deposits with water first. Then spray on the Pro Honda Hondabrite and rinse with a garden hose at full pressure. Stubborn deposits may require a quick wipe with a sponge.

Washing Your Motorcycle with a Mild Detergent

1. Rinse your CRF thoroughly with cool water to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your CRF with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.

NOTICE

Do not use steel wool to clean the frame as it could damage or discolor the frame surface. Muffler stain remover (Scotch Brite Hand Pad #7447-maroon) is for removing stains on the non-coated aluminum frame only.

4. After washing, rinse your CRF thoroughly with plenty of clean water to remove any residue.
5. Dry your CRF with a chamois or a soft towel.
6. Lubricate the drive chain to prevent rusting.
7. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.
8. As a precaution, ride at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.

Appearance Care

Condensation Control

Some condensation can form within the transmission cavity as well. This is natural and just one more reason you should change the engine and transmission oil often.

After Cleaning Lubrication

There are some things you should do just after washing your CRF to help prevent rust and corrosion.

Once your CRF is clean and dry, you should protect any bare steel from rusting by applying a light coating of a rust-inhibitor. Lubricate the drive chain and drive sprocket after removing and thoroughly cleaning in solvent. Be sure the chain is wiped clean and is dry before applying the chain lube.

Follow the suggestions given in the pages of this manual for lubricating items such as the brake and clutch lever pivot points and footpeg pivot pins.

Aluminum Frame Maintenance

Aluminum corrodes when it comes in contact with dust, mud and road salt.

To remove stains, use Scotch Brite Hand Pad #7447 (maroon) or an equivalent. Wet the pad and polish the surface using strokes parallel to the length of the frame.

Clean the frame using a wet sponge and a mild detergent, then rinse well with clean water. Dry the frame with a soft clean cloth, using strokes parallel to the length of the frame.

NOTICE

Do not use steel wool to clean the frame as it could damage or discolor the frame surface. Muffler stain remover (Scotch Brite Hand Pad #7447-maroon) is for removing stains on the non-coated aluminum frame only.

Exhaust Pipe Maintenance

The exhaust pipe is stainless steel, but may become stained by oil or mud.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with a chamois or a soft towel. If necessary, remove heat stains by using a commercially available fine texture compound. Then rinse by the same manner as removing mud or dust.

Adjustments for Competition

This section tells you how to fine tune your CRF for maximum competition performance.

Initial suspension adjustments should be performed after a minimum of two hours of easy break-in time.

Optional front and rear suspension springs are available in both stiffer and softer than standard rates, in order to tailor your CRF specifically for your weight, riding style and course conditions.

Follow the instructions given in the rear suspension sag setting section of *Rear Suspension Adjustments* to determine if your combined rider and sprung machine weight (rider fully dressed for competition and machine coolant, oil and fuel levels ready for competition) requires an optional stiffer or softer rear spring. The need for either optional rear spring may need to be balanced by installing the optional fork springs of a similar rate.


Front Suspension Adjustments	110
Rear Suspension Adjustments	125
Suspension Adjustments for Track Conditions	129
Suspension Adjustment Guidelines	130
Tuning Tips	133
Steering Damper Adjustment	134
Steering Damper Adjustment Guidelines	135
Chassis Adjustments	136
Gearing	137
Tire Selection for Track Conditions	138
Personal Fit Adjustments	139

Front Suspension Adjustments

The front suspension can be adjusted for the rider's weight and riding conditions by using one or more of the following methods:

- **Oil volume** — The effects of higher or lower fork oil capacity are only felt during the final 3.9 in (100 mm) of fork travel.
- **Compression damping** — Turning the compression damping adjuster (1) adjusts how quickly the fork compresses.
- **Rebound damping** — Turning the rebound damping adjuster (2) adjusts how quickly the fork extends.
- **Fork springs** — Optional springs are available in softer and stiffer types than the standard rate. (page 156)

The inverted fork on your CRF features sealed damper cartridges with dual (separate air and oil) chambers to prevent aeration. The design also isolates the oil in each fork tube/slider, which may contain air bubbles and/or metal particles, from the sealed cartridge to provide more consistent damping.

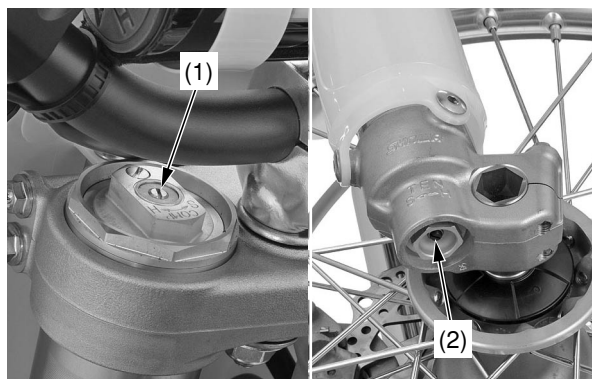


(1) compression damping adjuster
(2) rebound damping adjuster

Front Suspension Air Pressure

Air is an unstable gas which builds up pressure as it is worked (such as in a fork). Air pressure acts as a progressive spring and affects the entire range of fork travel. This means the fork action on your CRF will get stiffer during a race. For this reason, release built-up air pressure in the fork legs between motos. Be sure the fork is fully extended with the front tire off the ground when you release the pressure.

The standard air pressure is 0 psi (0 kPa, 0 kgf/cm²). You may relieve accumulated air pressure in the fork legs by using the pressure release screws. The front wheel should be off the ground before you release the pressure. The air pressure should be adjusted according to the altitude and outside temperature.

1. Place a workstand under the engine, so that the front wheel is off the ground.
Do not adjust air pressure with the front wheel on the ground as this will give false pressure readings.
2. Remove the pressure release screw (1).
3. Check that the O-rings (2) is in good condition.
4. Install and tighten the pressure release screw to the specified torque:
1.0 lbf·ft (1.3 N·m, 0.1 kgf·m)

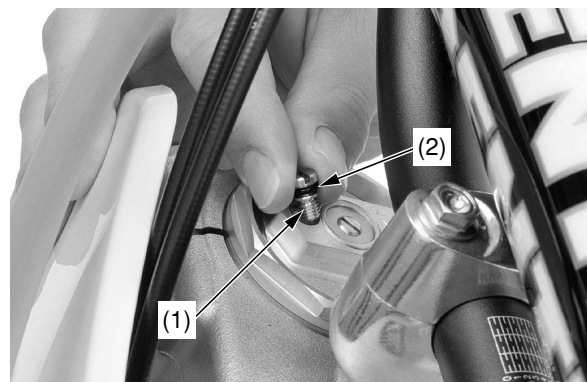

(1) pressure release screw (2) O-rings

Front Suspension Damping

Compression Damping Adjustment

This adjustment affects how quickly the fork compresses. The fork compression damping adjuster has 16 positions or more. Turning the compression damping adjuster screw (1) one full turn changes the adjuster 4 positions. To adjust the adjuster to the standard position, proceed as follows:

Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard position. The adjuster is set in the standard position when the adjuster is turned counterclockwise 7 clicks. Make sure that both fork legs are adjusted to the same position.

Rebound Damping Adjustment

The fork rebound damping adjuster has 16 positions or more. Turning the rebound damping adjuster screw (2) one full turn clockwise advances the adjuster 4 positions. To adjust the rebound damping to the standard setting, proceed as follows:

Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard position. The adjuster is set in the standard position when the adjuster is turned counterclockwise 11 clicks. Make sure that both fork legs are adjusted to the same position.


Front Suspension Adjustments

Both compression and rebound damping can be increased by turning the adjuster clockwise.

NOTICE

Always start with full hard when adjusting damping.

Do not turn the adjuster screw more than the given positions or the adjuster may be damaged. Be sure that the compression and rebound adjusters are firmly located in a detent, and not between positions.

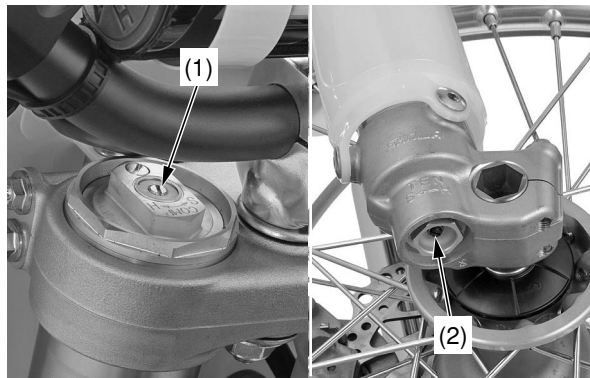

(1) compression damping adjuster screw

(2) rebound damping adjuster screw


Fork Springs

The fork springs in CRF's are about right for riders weighing between 170 lb (77 kg) and 200 lb (91 kg) (less riding gear). So if you're a heavier rider, you have to go up on the oil capacity or get a stiffer spring. Do not use less oil than the minimum specified for each spring or there will be a loss of rebound damping control near full extension. If the fork is too hard on big bumps, turn the damping adjuster counterclockwise 1-click and lower the oil capacity in increments of 0.2 US oz (5 cm³) in both fork legs until the desired performance is obtained. Do not, however, lower the oil capacity below the minimum oil capacity.

Minimum oil capacity:

Standard spring: 10.0 US oz (296 cm³)
 Softer spring: 10.2 US oz (301 cm³)
 Stiffer spring: 10.1 US oz (299 cm³)


When adjusting oil capacity, bear in mind that the air in the fork will increase in pressure while riding; therefore, the higher the oil capacity, the higher the eventual pressure of any air in the fork.

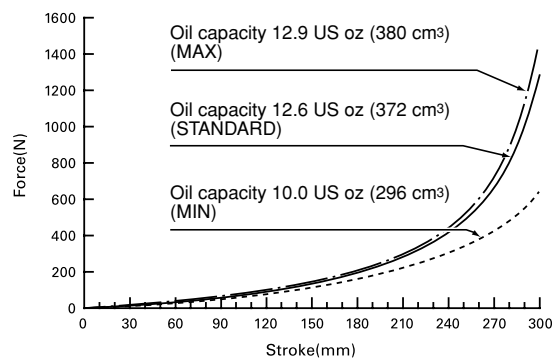

Front Suspension Adjustments

Front Suspension Disassembly

- If your CRF is brand-new, put enough part-throttle break-in time (about 1 hour) on it to ensure that the suspension has worked in.
- For optimum performance, and extended fork life, the fork should be completely disassembled and cleaned after the first 3 hours of riding. See an official Honda Service Manual or your dealer for this service.
- When disassembling the fork, turn the compression (1) and rebound (2) damping adjusters counterclockwise to the softest position to prevent damaging the adjustment needle (be sure to record the number of turns from the starting position).

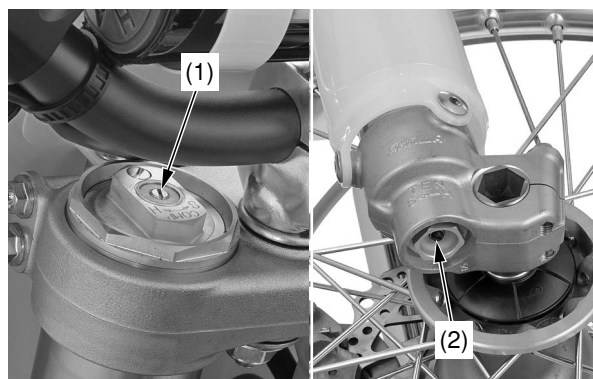

(1) compression damping adjuster (2) rebound damping adjuster

1. Remove the number plate (page 103).
2. Place your CRF on an optional workstand or equivalent support with the front wheel off the ground.
3. Remove the handlebar lower holder nuts, washers, mounting rubbers (3) and handlebar (4).

NOTICE

Keep the master cylinder upright to prevent air from entering system.




(3) handlebar lower holder nuts, washers and mounting rubbers
(4) handlebar

4. Loosen the fork bridge upper pinch bolts (5).
 5. Loosen the fork damper (6) using a lock nut wrench (7), but do not remove them yet.
- Lock nut wrench 07WMA-KZ30100


NOTICE

Do not use an adjustable wrench to loosen the fork damper: it may damage them.

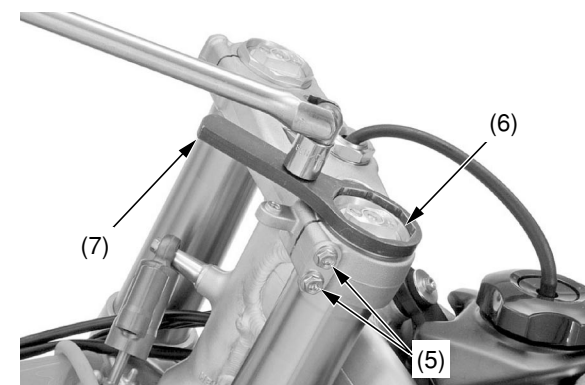

(5) fork bridge upper pinch bolts
(6) fork damper
(7) lock nut wrench


6. Remove the disc cover socket bolt (8).

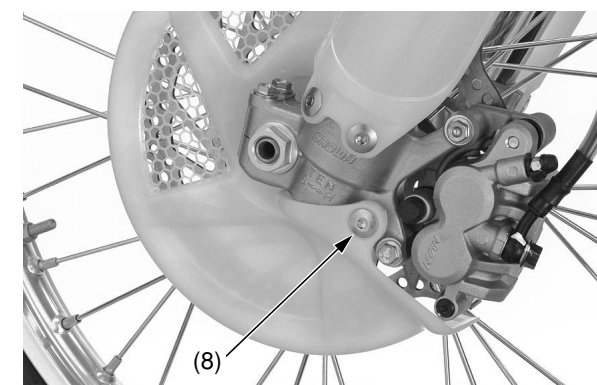

(8) disc cover socket bolt


Front Suspension Adjustments

7. Remove the front axle nut (9) and loosen the axle pinch bolts (10) on both forks. Pull the front axle shaft (11) out of the wheel hub and remove the front wheel with disc cover/collar.

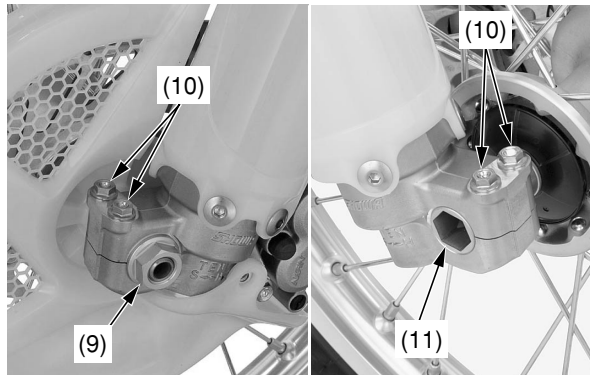


(9) front axle nut
(10) axle pinch bolts
(11) front axle shaft

8. Remove the brake hose clamp bolts (12), stay A (13) and stay B (14).
9. Remove the brake caliper mounting bolts (15) and brake caliper (16).
- Do not support the brake caliper by the brake hose.
 - Do not operate the brake lever after the front wheel is removed. To do so will cause difficulty in fitting the brake disc between the brake pads.

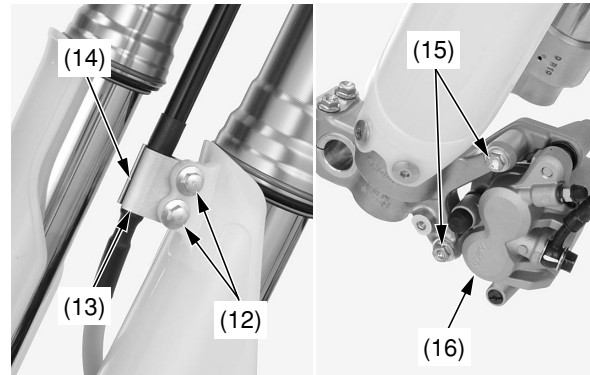


(12) brake hose clamp bolts
(13) stay A
(14) stay B
(15) brake caliper mounting bolts
(16) brake caliper

10. Remove the fork protector socket bolts (17) and fork protectors (18).

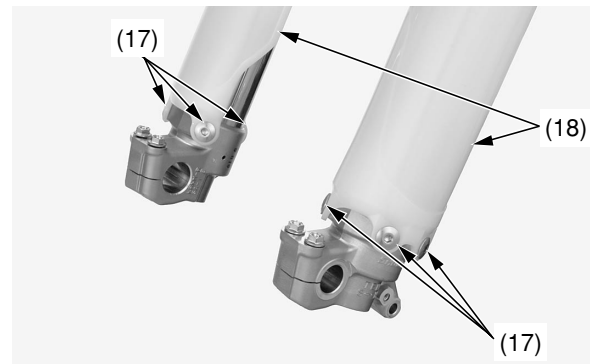


(17) fork protector socket bolts
(18) fork protectors

11. Loosen the fork bridge lower pinch bolts (19), then pull the fork legs down and out.

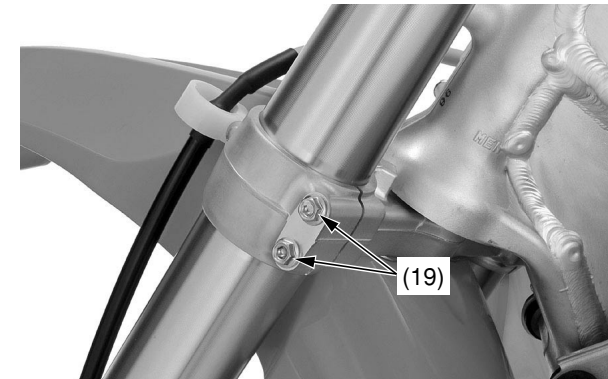

(19) fork bridge lower pinch bolts

12. Clean the fork assembly, especially the sliding surface (20) of the slider and fork dust seal (21).
13. Measure the length (22) between the axle holder and outer tube and record it before disassembling the fork.

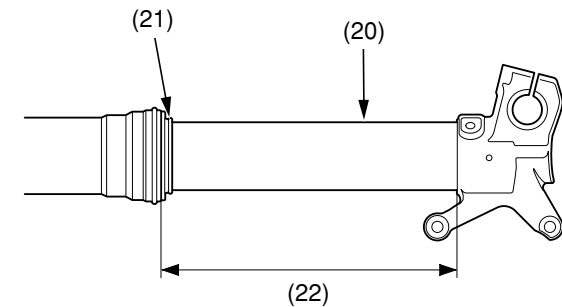


(20) sliding surface
(21) fork dust seal

(22) length

(cont'd)

Front Suspension Adjustments

14. Hold the outer tube, then remove the fork damper (6) from the outer tube using a lock nut wrench (7). Gently slide the outer tube down onto the lower end (axle holder) (23).

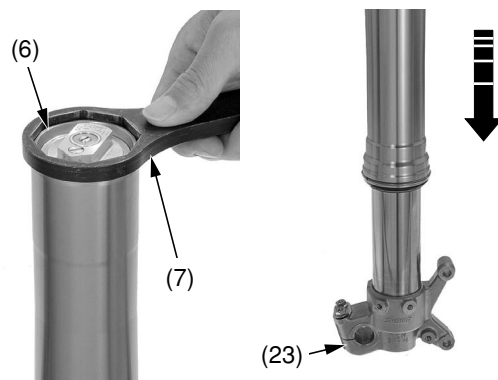


(6) fork damper
(7) lock nut wrench

(23) axle holder

NOTICE


The outer tube (24) can drop on the slider (25) and damage the fork dust seal (21). To avoid damage, hold both the outer tube and slider when removing the fork damper.

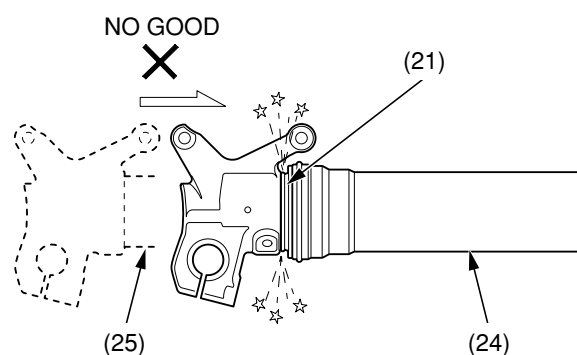

(21) fork dust seal
(24) outer tube

(25) slider

15. Drain the fork oil from the outer tube/slider (26) and oil holes (27) of the fork damper.

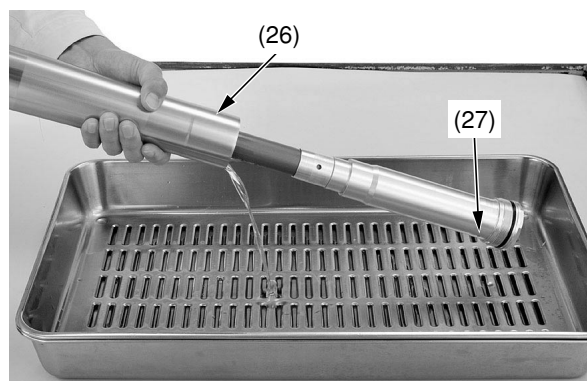

(26) outer tube/slider


(27) oil holes

16. Place the lower end (axle holder) (23) of the slider in a vise with a piece of wood or soft jaws to avoid damage.

NOTICE

Over-tightening the vise can damage the axle holder.


17. Remove the fork center bolt (28).

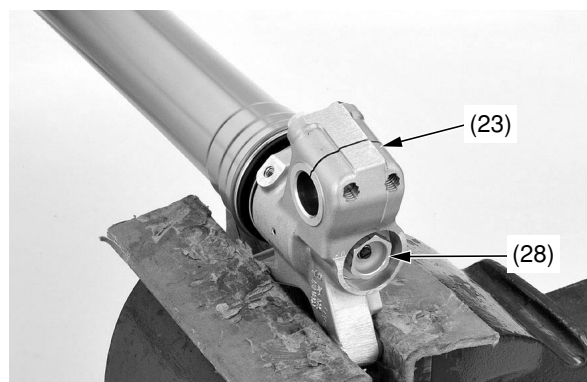

(23) axle holder

(28) fork center bolt

18. Make the mechanic's stopper tool out of a thin piece of steel (0.08 in (2.0 mm) thick) as shown if you do not have a special tool.

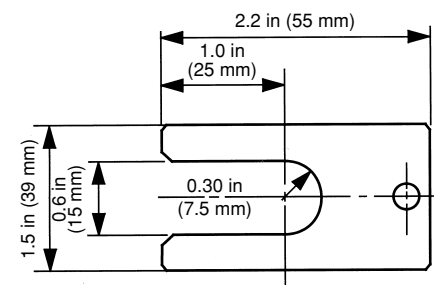

19. Push the fork center bolt (28) out from the axle holder (23) of the slider by pushing the fork damper. While the fork center bolt is pushed out, install the piston base (29) or a mechanic's stopper tool between the axle holder and fork center bolt lock nut (30).


• Piston base 07958-2500001

20. Hold the fork center bolt lock nut and remove the fork center bolt from the fork damper.

NOTICE

Do not remove the lock nut from the fork damper piston rod. If the lock nut is removed, the piston rod will fall in the fork damper and you may not reassemble the fork damper.

Front Suspension Adjustments

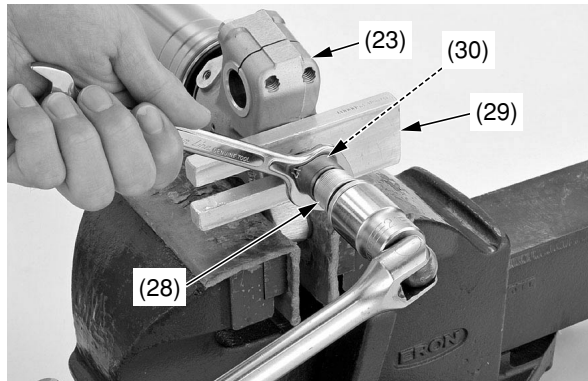


(23) axle holder
(28) fork center bolt
(29) piston base
(30) fork center bolt lock nut

21. Remove the push rod (31) from the fork damper.
22. Remove the piston base (29) or mechanic's stopper tool between the axle holder (23) and fork center bolt lock nut (30) while pushing the fork damper.

NOTICE

Be careful not to damage the lock nut and fork center bolt hole.

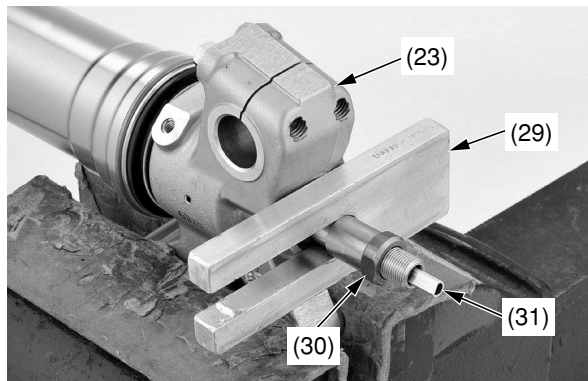


(23) axle holder
(29) piston base
(30) fork center bolt lock nut
(31) push rod


23. Remove the fork damper assembly (32) from the fork assembly (33).
Remove the fork from the vise.
Remove the fork spring (34), spring retainer (35) and collar/washer (36) from the fork assembly. Remove the O-ring (37).

NOTICE

Do not attempt to separate the fork assembly and drop the axle holder out from the outer tube, which can damage the guide bushings (38). To avoid damage, hold both the outer tube and silder.

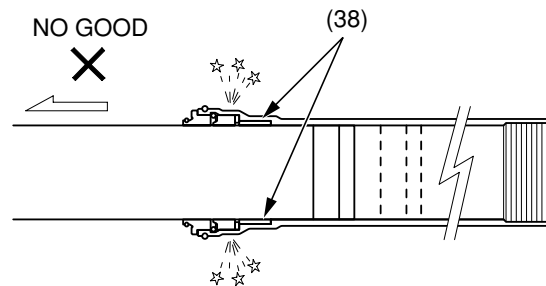

(38) guide bushings

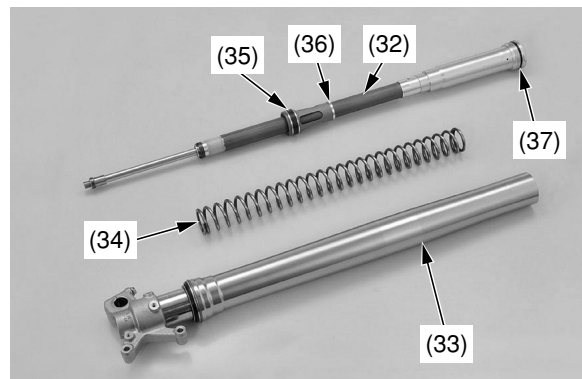

(32) fork damper assembly
(33) fork assembly
(34) fork spring
(35) spring retainer
(36) collar/washer
(37) O-ring

Damper Oil Change


1. Place the fork damper (1) in a vise with a piece of wood or soft jaws to avoid damage.

NOTICE

Over-tighten the vise can damage the fork damper.

2. Loosen the fork cap assembly (2) while holding the fork damper (1) using the lock nut wrench (3)

• Lock nut wrench 07WMA-KZ30100

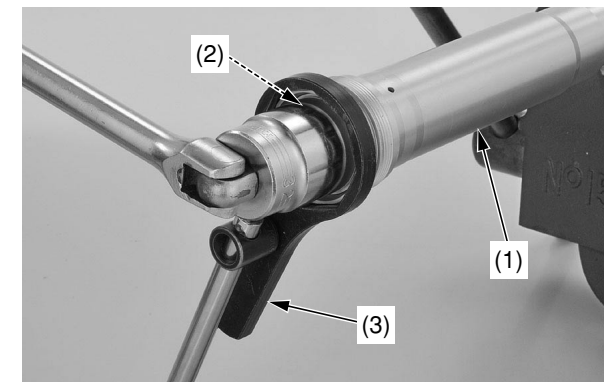

(1) fork damper
(2) fork cap assembly
(3) lock nut wrench

(cont'd)

Front Suspension Adjustments

3. Remove the fork cap assembly (2) from the fork damper threads and then pop it out by pumping the fork damper piston rod (4) slowly.
4. Remove the fork cap assembly (2).

Be careful not to damage the fork cap bushings. Do not disassemble the fork cap assembly. Replace the fork cap as an assembly if it is damaged.



(2) fork cap assembly (4) fork damper piston rod

5. Empty the fork oil from the fork damper oil/spring chamber (5) by pumping the damper rod several times.




(5) fork damper oil/spring chamber

6. Clean the fork cap and fork damper threads (6).




(6) fork cap and fork damper threads

7. Extend the fork damper piston rod to maximum length. Pour the recommended fork oil into the fork damper (1).
Recommended Oil:
HP Fork Oil, SS-19
Recommended Amount:
8.3 US oz (245 cm³)

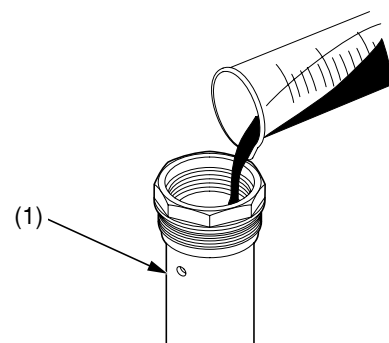


(1) fork damper

8. Pump the fork damper piston rod (4) slowly several times to bleed the air from the fork damper (1).

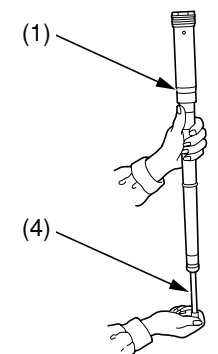

(1) fork damper (4) fork damper piston rod

9. Apply fork oil to the fork cap bushings (7), new O-rings (8) and piston ring (9) on the fork cap assembly (2).

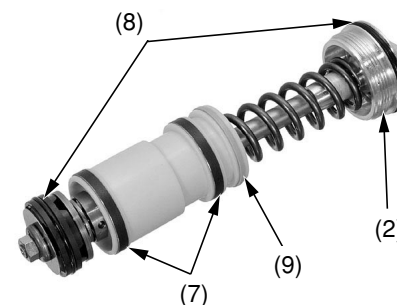


(2) fork cap assembly (7) fork cap bushings (8) O-rings (9) piston ring

Front Suspension Adjustments

10. Extend the fork damper piston rod (4) to maximum length, holding it, install the fork cap assembly (2) to the fork damper (1) with vertical position.


Be careful not to damage the fork cap piston ring. If it is difficult to install the fork cap assembly, the fork damper oil level might be higher than standard oil level.

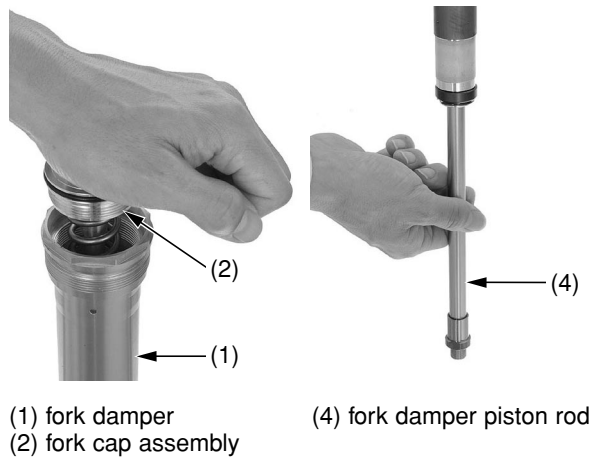


11. Place the fork damper (1) in a vise with a piece of wood or soft jaws to avoid damage. Tighten the fork cap assembly (2) while holding the cutout of the fork damper using the lock nut wrench (3) to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)
• Lock nut wrench 07WMA-KZ30100

NOTICE

Over-tightening the vise can damage the fork damper.

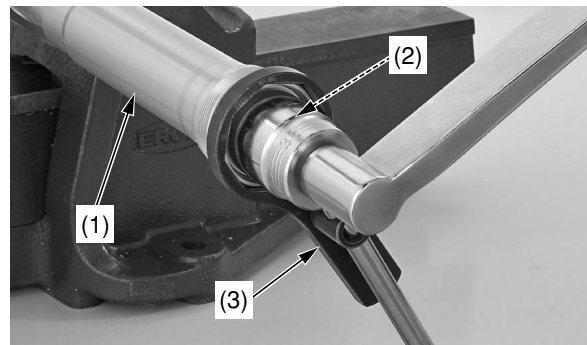


12. Completely screw in the fork center bolt lock nut (10) to the fork damper piston rod (4).

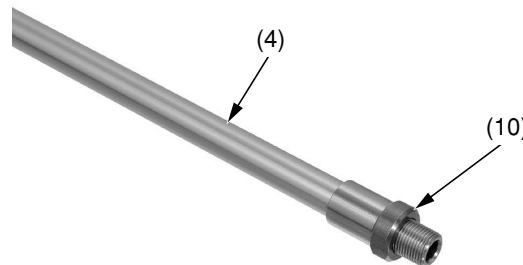

13. Check the fork damper piston rod sliding surface for damage.
14. Cover the fork damper piston rod end with shop towel (11) to prevent fork damage. Cover the oil holes with shop towel (11) to prevent blow out of fork oil. Blow the extra oil off from the fork damper oil chamber (5) by pumping the fork damper piston rod to full stroke.

NOTICE

Be careful not to bend or damage the fork damper piston rod when the piston rod is stroked.

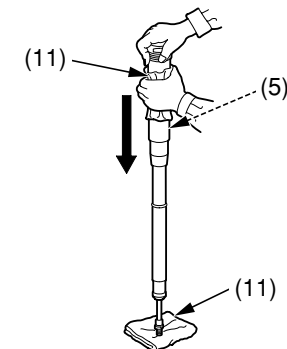


(cont'd)

Front Suspension Adjustments

15. Drain the extra oil from the oil holes (12) of the fork damper oil chamber (5).

By doing this procedure, about 0.2 US oz (5 cm³) of fork fluid will be drained from the damper spring chamber through the oil hole and cause 8.1 US oz (240 cm³) of fork fluid to be left in the fork damper spring chamber.

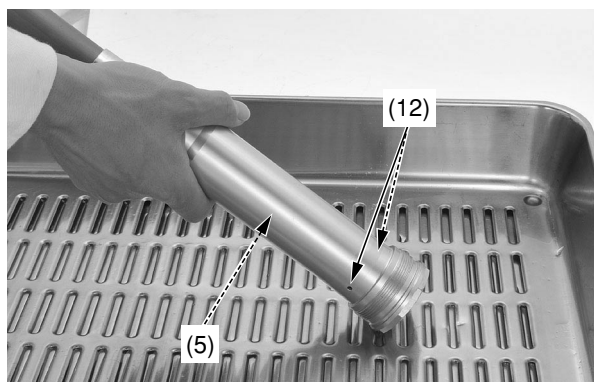

(5) fork damper oil chamber (12) oil holes


Pour the drained oil into a suitable container and dispose of it in an approved manner (page 144).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Fork Assembly

1. Drain the fork oil from the fork assembly (1) by placing it upside down.
(About 0.2 US oz (5.4 cm³) cc of fork oil will be left in the outer tube/slider when it is left inverted for about 20 minutes at 20°C/68°F)

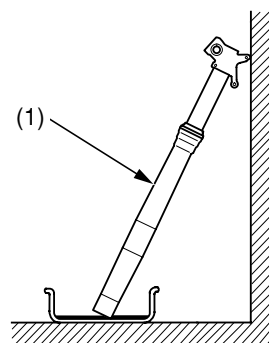

(1) fork assembly


To properly dispose of drained fluids, refer to *You & the Environment* (page 144).

NOTICE


Improper disposal of drained fluids is harmful to the environment.

Amount of fork oil left in the fork
(without damper and spring) unit: cm³

minute °C/°F	5	10	20	35	55	85	145
30/86	6.5	5.7	5.2	4.5	4.1	3.7	3.3
20/68	6.7	6.2	5.4	4.7	4.4	3.8	3.5
10/50	7.3	6.4	5.6	5	4.6	4.2	3.8
0/32	8.6	8.2	7.9	7.6	7.3	6.8	6

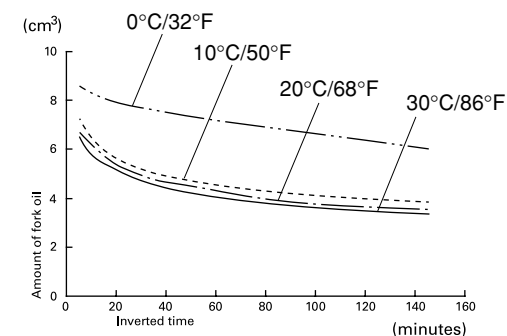

2. Tighten the fork center bolt lock nut (2) fully and measure the thread length (A) as shown.
Standard: 0.43 – 0.51 in (11 – 13 mm)
Wipe the oil completely off the fork damper.

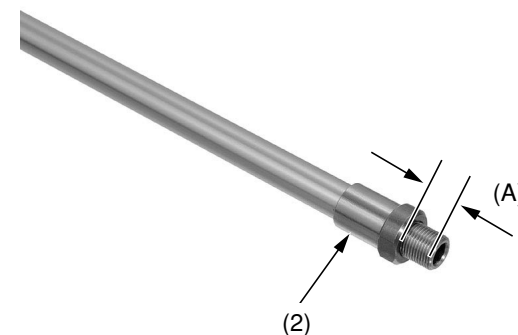


(2) fork center bolt lock nut

(A) thread length


Front Suspension Adjustments

3. Install the collar (3) to the C-ring (4) of the fork damper assembly (5) as shown. Install the washer (6) and spring retainer (7) to the fork damper assembly. Make sure the black side of the washer is seated on the collar side.

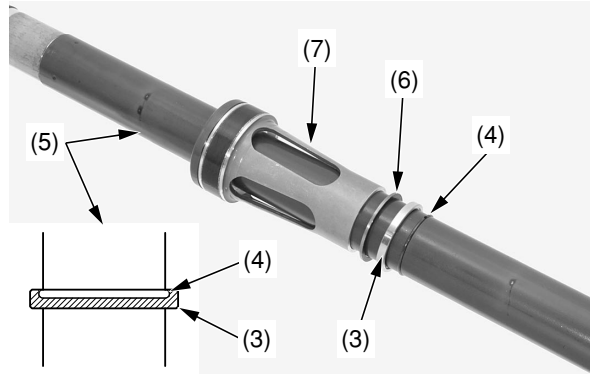

(3) collar
(4) C-ring
(5) fork damper assembly
(6) washer
(7) spring retainer

4. Blow out the oil completely off the fork spring (8) using compressed air. Install the fork spring to the fork damper assembly (5). Install the fork damper assembly to the fork assembly (1).

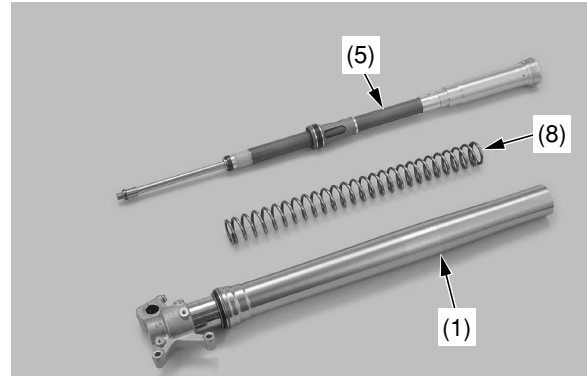

(1) fork assembly
(5) fork damper assembly
(8) fork spring

5. Place the lower end (axle holder) of the slider in a vise with a piece of wood or soft jaws to avoid to damage.

NOTICE

Over-tightening the vise can damage the axle holder.


6. Push out the fork damper piston rod from the axle holder of the slider by pushing the fork damper.

Apply pressure to the fork damper and insert the piston base (9) or mechanic's stopper tool between the axle holder and fork center bolt lock nut (2).

Measure the thread length again.

Standard: 0.43 – 0.51 in (11 – 13 mm)

7. Install the push rod (10) into the fork damper piston rod until it stops.
8. Apply fork oil to new O-ring (11) and install it to the fork center bolt (12). Install the fork center bolt to the fork damper piston rod. Tighten the fork center bolt fully by hand.

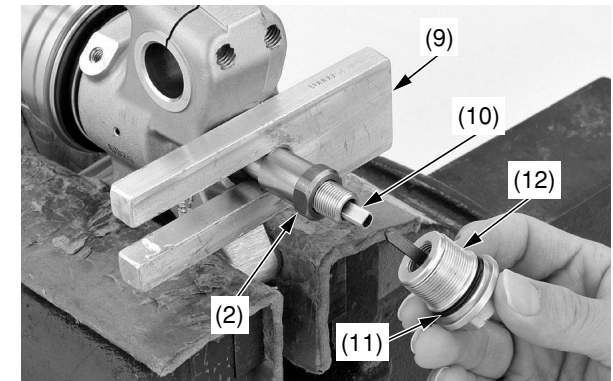


(2) fork center bolt lock nut
(9) piston base
(10) push rod
(11) O-ring (new)
(12) fork center bolt

(cont'd)

Front Suspension Adjustments


9. Measure the length of the fork center bolt lock nut (2) and fork center bolt (12) clearance.
Standard: 0.06 – 0.08 in (1.5 – 2.0 mm)

If the clearance is out of specification, check the fork center bolt lock nut and fork center bolt installation.

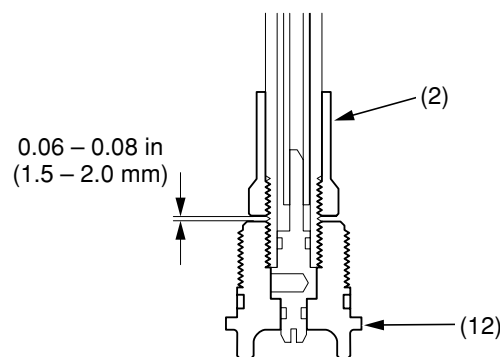


(2) fork center bolt lock nut (12) fork center bolt

10. Tighten the fork center bolt lock nut (2) to the fork center bolt (12) closely by hand. Tighten the fork center bolt lock nut to the specified torque:
16 lbf·ft (22 N·m, 2.2 kgf·m)

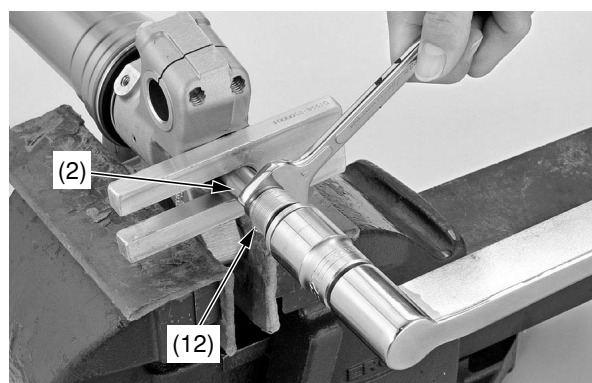

(2) fork center bolt lock nut
(12) fork center bolt


11. Remove the piston base or mechanic's stopper tool while pushing the fork damper. Apply locking agent to the fork center bolt threads.
Install the fork center bolt (12) to the axle holder and tighten it to the specified torque:
51 lbf·ft (69 N·m, 7.0 kgf·m)

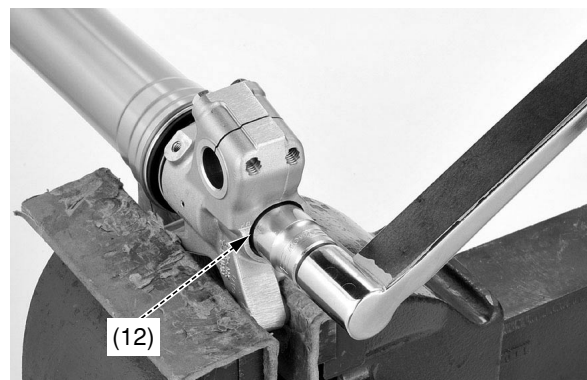

(12) fork center bolt

12. Measure the length between the axle holder and outer tube.
Standard: 12.5 ± 0.1 in (316.5 ± 2 mm)
13. Compare the length (13) at assembly and at disassembly. They should be the same length.


If the length at assembly is longer than at disassembly, check the fork center bolt and fork center bolt lock nut installation.

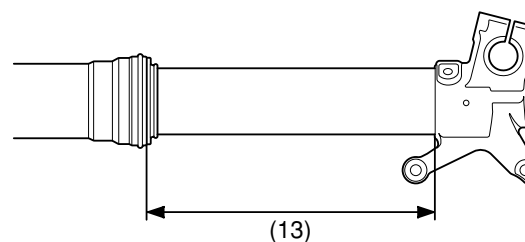

(13) length

14. Remove the fork damper from the fork.
15. Pour the recommended fork oil (14) into the fork assembly (1).

Recommended Oil: HP Fork Oil, SS-19

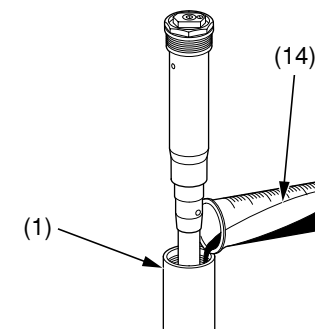


(1) fork assembly

(14) fork oil

Front Suspension Adjustments


Fork Oil Capacity:

Standard 25.12 lbf/in (4.4 N/mm) Fork Spring

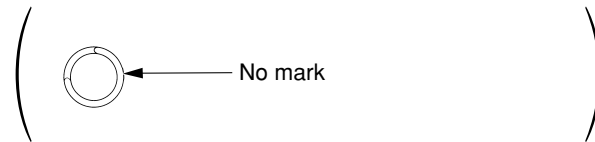


Standard oil capacity	12.6 US oz (372 cm ³)	
Maximum oil capacity	12.9 US oz (380 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.0 US oz (296 cm ³)	Slightly softer as it nears full compression.

Optional Softer 23.98 lbf/in (4.2 N/mm) Fork Spring

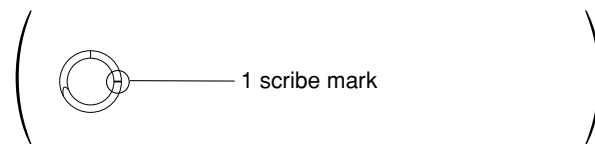

Standard oil capacity	12.8 US oz (377 cm ³)	
Maximum oil capacity	13.0 US oz (385 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.2 US oz (301 cm ³)	Slightly softer as it nears full compression.


Optional Stiffer 26.20 lbf/in (4.59 N/mm) Fork Spring

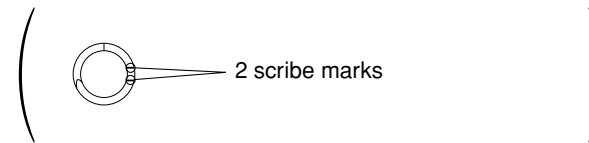

Standard oil capacity	12.7 US oz (375 cm ³)	
Maximum oil capacity	12.9 US oz (382 cm ³)	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.1 US oz (299 cm ³)	Slightly softer as it nears full compression.


Be sure the oil capacity is the same in both fork legs.

16. Install a new O-ring (15) on the fork damper assembly (4). Apply the recommended fork oil to the O-ring.
17. Pull up the fork assembly (1) slowly and install the fork damper assembly (5) into the outer tube.

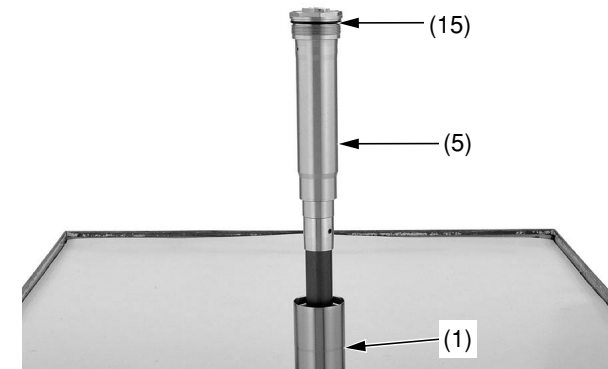

- (1) fork assembly (15) O-ring (new)
(5) fork damper assembly

18. Insert both fork legs into the fork clamps. Tighten the fork bridge lower pinch bolts (16) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)

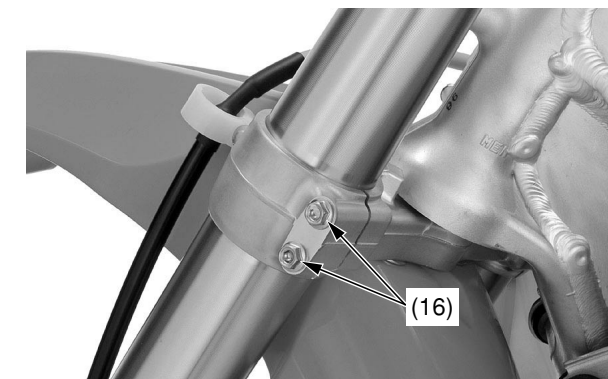

- (16) fork bridge lower pinch bolts

(cont'd)

Front Suspension Adjustments

19. Tighten the fork damper (17) to the specified torque using the lock nut wrench (18).

Actual:

25 lbf·ft (34 N·m, 3.5 kgf·m)

Torque wrench scale reading:

23 lbf·ft (31 N·m, 3.2 kgf·m), using a 20 in (500 mm) long deflecting beam type torque wrench.


- Lock nut wrench 07WMA-KZ30100

When using the lock nut wrench, use a 20 in (500 mm) long deflecting beam type torque wrench. The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the fork damper.



(17) fork damper (18) lock nut wrench

20. For ease of releasing air pressure after the forks are installed, loosen the fork bridge lower pinch bolts and position the outer tubes so that the fork air pressure release screws are in front of the compression damping adjusters. Align the top of the outer tube (19) with the top surface of the top bridge (20).

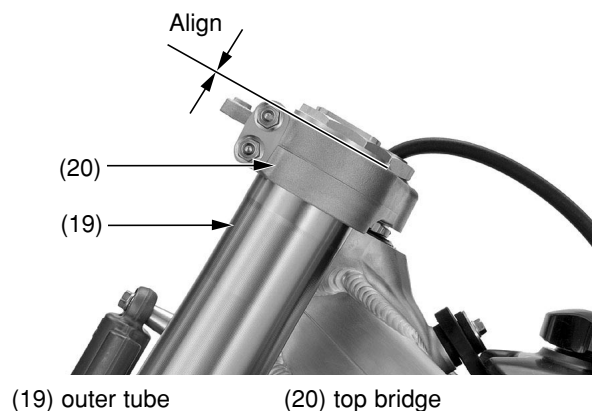


(19) outer tube (20) top bridge

21. Tighten the fork bridge lower pinch bolts (16) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)
22. Tighten the fork bridge upper pinch bolts (21) to the specified torque:
16 lbf·ft (22 N·m, 2.2 kgf·m)

NOTICE


Over-tightening the pinch bolts can deform the outer tubes. Deformed outer tubes must be replaced.

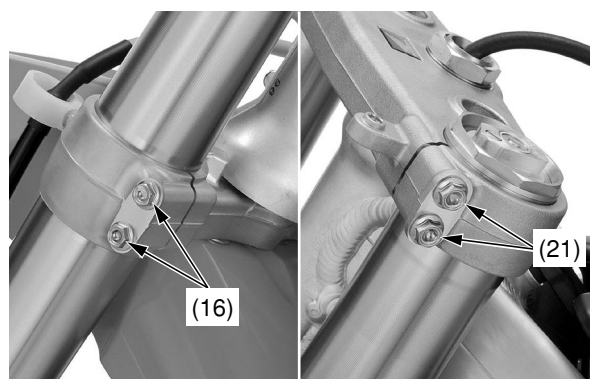

(16) fork bridge lower pinch bolts

(21) fork bridge upper pinch bolts

23. Clean the threads of the fork protector socket bolts (22) and axle holder thoroughly. Apply locking agent to the bolt threads. Install the fork protectors (23), fork protector bolts. Tighten the fork protector socket bolts to the specified torque:
5.2 lbf·ft (7 N·m, 0.7 kgf·m)

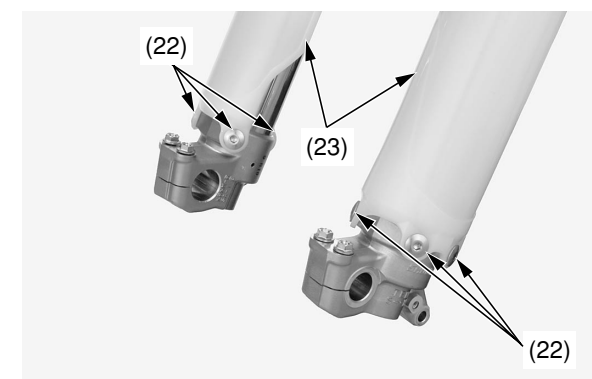


(22) fork protector socket bolts
(23) fork protectors

24. Align the brake caliper (24) and hose (25) with the left fork leg, making sure that the brake hose is not twisted. An improperly routed brake hose may rupture and cause a loss of braking efficiency.
25. Assemble the stay B (26), brake hose (25) and stay A (27). Install and tighten them to the left fork protector using the brake hose clamp bolts (28).


Front Suspension Adjustments

26. Clean the threads of the brake caliper mounting bolts (29) and brake caliper thoroughly.
Apply locking agent to the bolt threads.
Install the brake caliper (24) on the slider and tighten the brake caliper mounting bolts to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)

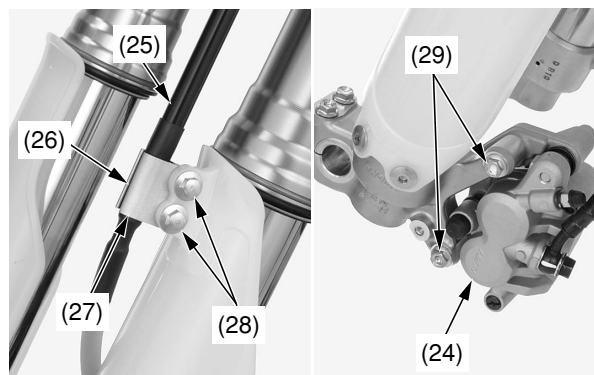


(24) brake caliper
(25) brake hose
(26) stay B
(27) stay A
(28) brake hose clamp bolts
(29) brake caliper mounting bolts

27. Clean the surfaces where the axle and axle clamps contact each other.
Apply grease to each dust seal lips of the front wheel.
Install the disc cover/collar (30) and right side collar (31) into the wheel hub.

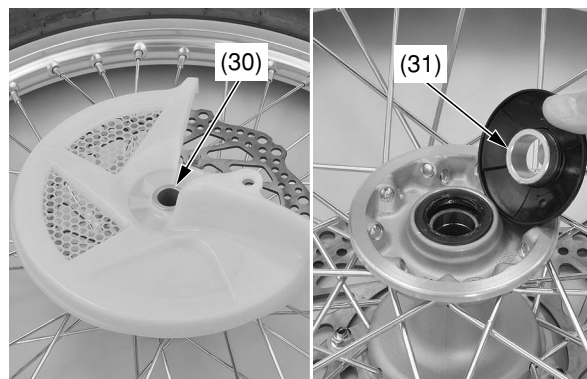

(30) disc cover/collar (31) right side collar

28. Install the front wheel between the fork legs while inserting the disc between the pads, being careful not to damage the pads.
29. Insert the front axle shaft through the forks and wheel hub from the right side. Make sure that the front axle shaft is seated firmly onto the left fork leg clamp inner surface. Tighten the front axle nut (32) to the specified torque:
65 lbf·ft (88 N·m, 9.0 kgf·m)
Tighten the left axle pinch bolts (33) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)

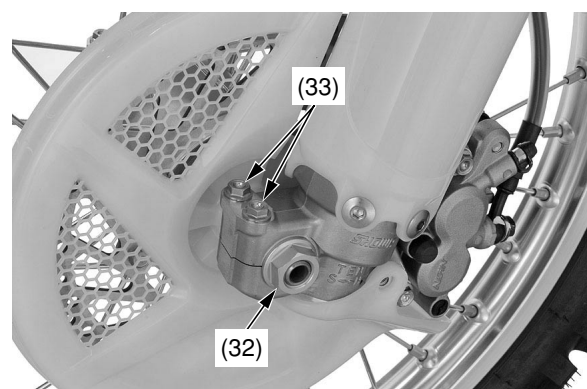

(32) front axle nut
(33) left axle pinch bolts

30. Install the handlebar (34), mounting rubbers, washers and handlebar lower holder nuts (35) and tighten the handlebar holder nuts to the specified torque:
32 lbf·ft (44 N·m, 4.5 kgf·m)




(34) handlebar
(35) mounting rubbers, washers and handlebar lower holder nuts

31. Install the number plate (page 103).


(cont'd)

Front Suspension Adjustments

32. With the front brake applied, pump the fork up and down several times to seat the axle and check front brake operation.

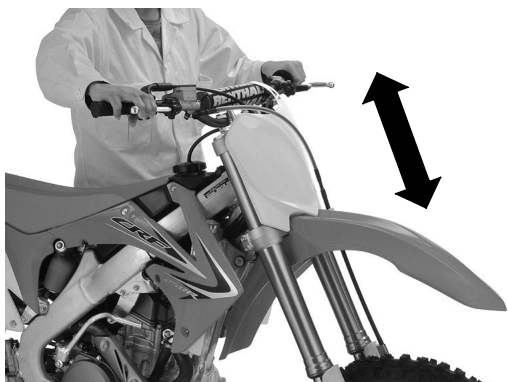

33. While keeping the forks parallel, alternately tighten the right axle pinch bolts (36) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)

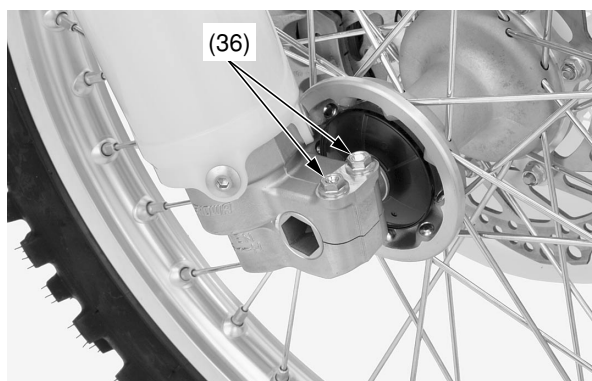


(36) right axle pinch bolts

NOTICE


To avoid damage when torquing the axle pinch bolts, be sure the axle is seated firmly onto the left fork leg clamp inner surface.

34. Install and tighten the disc cover socket bolt (37) to the specified torque:
10 lbf·ft (13 N·m, 1.3 kgf·m)

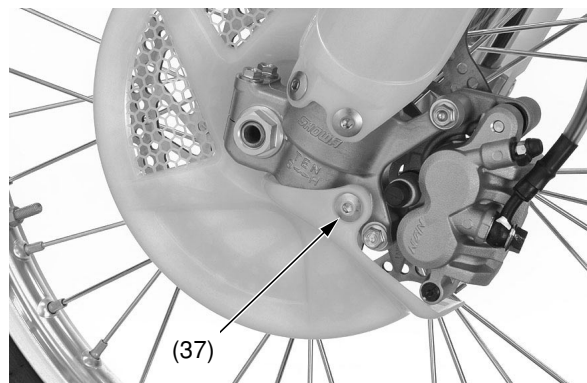

(37) disc cover socket bolt

35. Turn the rebound damping (38) and compression damping (39) adjuster screws back to their original settings.

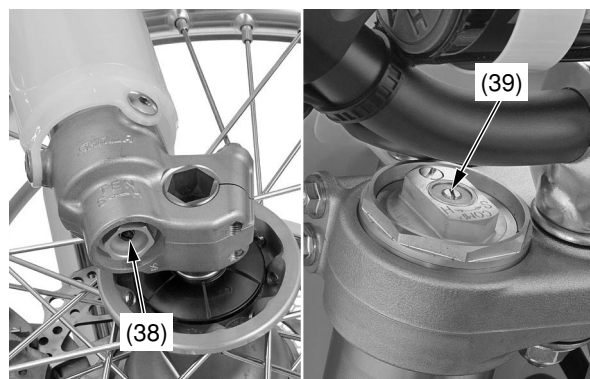

(38) rebound damping adjuster
(39) compression damping adjuster

Rear Suspension Adjustments

The rear suspension can be adjusted for the rider's weight and riding conditions by changing the spring pre-load and the rebound and compression damping.

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

Puncture or exposure to flame may also result in an explosion, causing serious injury. Service or disposal should only be done by your dealer or a qualified mechanic, equipped with the proper tools, safety equipment and the Honda Service Manual.

If your CRF is new, put enough part-throttle break-in time (about one hour) on it to ensure that the suspension has worked in.


Rear Suspension Spring Pre-Load

Pre-load should be adjusted when the engine is cold because it is necessary to remove the muffler (page 100).

An optional pin spanner is available for turning the lock nut and adjusting nut to adjust spring pre-load.

1. Place a workstand under the engine to raise the rear wheel off the ground.
2. Loosen the connecting tube clamp screw and remove the subframe's three mounting bolts, then remove the subframe. See page 36.

3. Check that the spring preload is adjusted to the standard length. Adjust as necessary by loosening the lock nut (1) and turning the adjusting nut (2).
Each complete turn of the adjusting nut changes the spring length by 0.06 in (1.5 mm).
4. After adjustment, hold the adjusting nut and tighten the shock spring lock nut to the specified torque:
32 lbf·ft (44 N·m, 4.5 kgf·m)

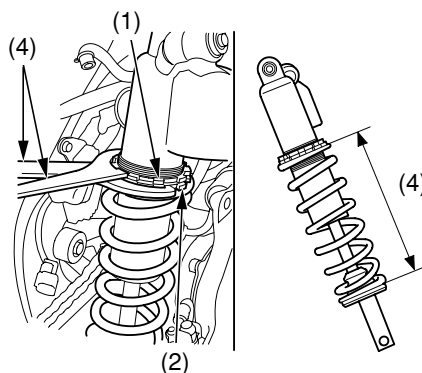

- (1) lock nut
(2) adjusting nut
(3) pin spanners
(4) spring length

To increase spring pre-load:

Loosen the lock nut with the optional pin spanners (3) and turn the adjusting nut to shorten the spring length (4). Do not shorten to less than:
9.9 in (251 mm)

To decrease spring pre-load:

Loosen the lock nut with the optional pin spanners (3) and turn the adjusting nut to increase the spring length (4). Do not increase to more than:
10.31 in (261.8 mm)

Each turn of the adjuster changes spring length and spring pre-load. One turn equals: spring length/spring pre-load:
0.06 in (1.5 mm)/17.20 lb (7.80 kg)

Pin spanners should be used for turning the lock nut and adjusting nut. See page 156 for optional pin spanners.

Spring pre-load length (Standard spring)
Standard: 10.27 in (260.8 mm)
Min. : 9.9 in (251 mm)

Spring pre-load length (Optional spring)
Min. (Softer, 285.5 lbf/in (50.0 N/mm)):
9.9 in (252 mm)
Min. (Stiffer, 307.7 lbf/in (53.9 N/mm)):
9.8 in (249 mm)

Rear Suspension Adjustments


Rear Suspension Damping

Compression Damping

Compression damping may be adjusted in two stages with separate adjusters.

The high speed damping adjuster (1) is effective when damping adjustment is desired for high speed operation. The low speed damping adjuster (2) should be used when damping adjustment is desired at relatively low speeds.

- Both the high and low speed damping can be increased by turning the appropriate adjuster clockwise.
- Adjust the high speed adjuster in 1/12 turn increments.

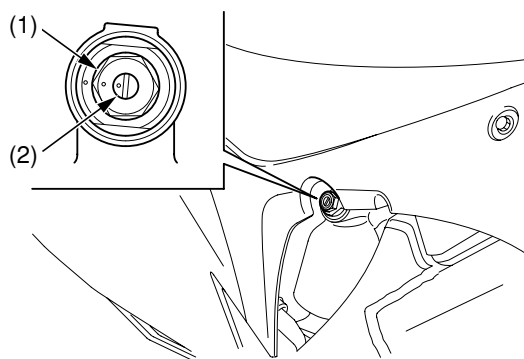

(1) high speed damping adjuster
(2) low speed damping adjuster

High Speed Damping:

The high speed damping can be adjusted by turning the hexagonal portion of the compression adjuster.

The high speed damping adjuster has 3 1/2 turn or more.

To adjust to the standard position:

1. Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 1 3/4 turns and the punch marks are aligned.

Low Speed Damping:

The low speed damping can be adjusted by turning the center screw of the compression adjuster.

The low speed adjuster has 13 positions or more. Turning the adjuster one full turn clockwise advances the adjuster 4 positions.

To adjust to the standard position:


1. Turn the adjuster clockwise until it will no longer turn (lightly seat). This is the full hard setting.
2. Turn the adjuster counterclockwise 8 clicks, and make sure that the punch marks are aligned.

Rebound Damping

The rebound damping adjuster (3) is located at the lower end of the shock absorber.

It has 17 positions or more. Turning the adjuster one full turn advances the adjuster 6 positions.

- Rebound damping can be increased by turning the adjuster clockwise.

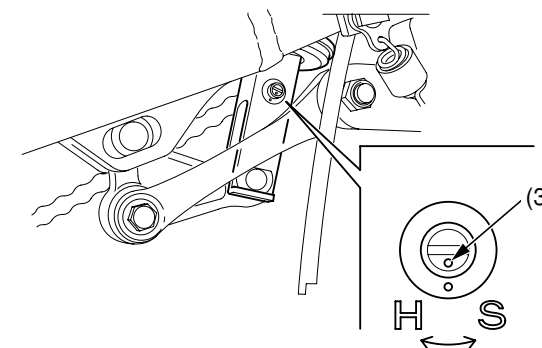

(3) rebound damping adjuster

To adjust to the standard position:

1. Turn the adjuster clockwise until it will no longer turn (lightly seat). This is the full hard position.
2. Turn the adjuster counterclockwise 10 clicks, and make sure that the punch marks on the adjuster and the shock absorber are aligned.

Rear Suspension Adjustments

Rear Suspension Race Sag

Setting the proper race sag (ride height) is very important for competition use.

Race sag refers to the amount of rear wheel travel used by your CRF at rest, ready to ride, with you on the seat. As a general rule of thumb, the race sag dimension should be about one-third of the maximum travel.

On your CRF, ride height is changed by adjusting the rear suspension spring pre-load.

Spring Pre-load & Race Sag Adjustment

The following adjustment procedure establishes the correct starting point for any suspension tuning — the proper rear suspension spring pre-load adjustment for your specific needs.

Your CRF should be at normal racing weight, including fuel, oil and coolant. You should be wearing all your normal protective apparel. You will need two helpers.


To calculate the proper adjustment, it is necessary to measure between two fixed points — from the center of the rear fender mounting bolt to the center of the chain adjuster lock nut as illustrated here — for three different situations:

unloaded: motorcycle on an optional workstand with rear suspension fully extended, no rider.

loaded with rider: motorcycle on ground, with rider.


loaded without rider: motorcycle on ground, without rider

1. Support your CRF on an optional workstand with the rear wheel off the ground.
2. Measure the *unloaded* dimension.

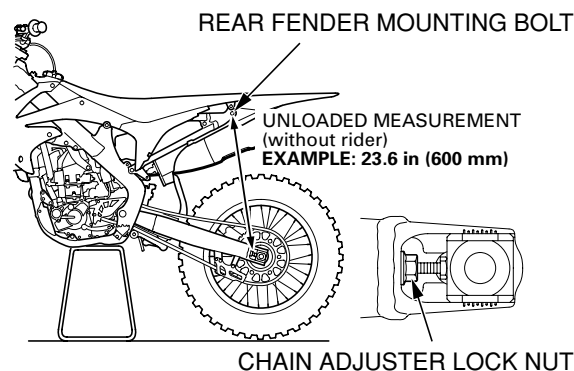

3. Measure the *loaded with rider* dimension. Remove the workstand. With two helpers available, sit as far forward as possible on your CRF's seat, wearing your riding apparel. Ask one helper to steady your CRF perfectly upright so you can put both feet on the pegs. Bounce your weight on the seat a couple of times to help the suspension overcome any situation and settle to a good reference point.

Ask the other helper to measure the *loaded with rider* dimension.

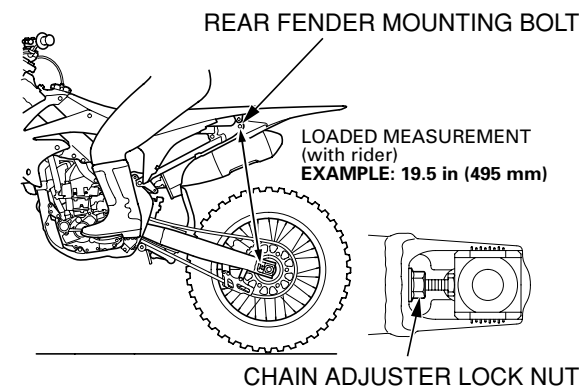

Example:

Unloaded	= 23.6 in (600 mm)
– Loaded	= 19.5 in (495 mm)
Race Sag	= 4.1 in (105 mm)

4. Calculate the *race sag* dimension.

To do this, subtract the *loaded with rider* dimension (step 3) from the *unloaded* dimension (step 2).

Standard Race Sag: 4.1 in (105 mm)

Adjust spring pre-load as necessary to obtain the desired handling results.


Decreasing the race sag dimension (example: 3.7 in, 95 mm) improves turning ability for tight terrain at the cost of slightly reduced straight line stability.

Increasing the race sag dimension (example: 4.5 in, 115 mm) may improve stability on faster terrain with less turns, but will reduce turning performance slightly and may upset the balance between the front and rear suspension, producing a harsher ride. This will happen if the adjustment shifts the effective wheel travel toward the more progressive end of its range.

(cont'd)

Rear Suspension Adjustments

5. Measure the *loaded without rider* dimension. Do this with your CRF set at the standard race sag.

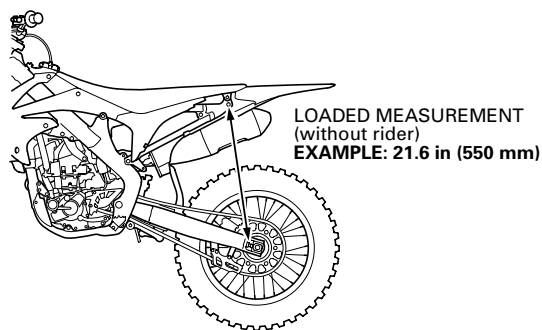

Example:

Unloaded	= 23.6 in (600 mm)
– Loaded	= 21.7 in (550 mm)
Sag	= 2.0 in (50 mm)

(Without Rider)

6. Calculate the *free sag* dimension. To do this, subtract the *loaded without rider* dimension (step 5) from the *unloaded* dimension (step 2). Free sag indicates the distance your rear suspension should sag from the weight of the sprung portion of your CRF. With the spring pre-load set to obtain the proper race sag, the rear suspension should sag 0.4 to 1.0 in (10 to 25 mm). If the rear of your CRF sags less than 0.4 in (10 mm) from its own weight, the spring is too stiff for your weight. It is not compressed enough, reduce the spring pre-load or replace the shock spring with a softer spring.

Spring Rates

If you are lighter or heavier than the average rider and cannot set the proper ride height without altering the correct spring pre-load, consider an aftermarket rear shock spring.

A spring that is too soft for your weight forces you to add excessive spring pre-load to get the right race sag and, as a result, the rear end of the motorcycle is raised. This can cause the rear wheel to unload too much in the air and top out as travel rebounds. The rear end may top out from light braking, or kick sideways over lips and square-edged terrain. It may even top-out when you dismount your CRF.

Because of the great absorption quality of the shock bumper rubber, it may be difficult for you to notice when your CRF's suspension is bottoming. Some riders may think the damping or perhaps the leverage ratio is too harsh. In reality, the problem is most likely insufficient spring pre-load or a spring that is too soft. Either situation prevents utilizing the full travel.

Keep in mind that a properly adjusted suspension system may bottom slightly every few minutes at full speed. Adjusting the suspension to avoid this occasional bottoming may cost more in overall suspension performance than it is worth.

A spring that is too stiff for your weight will not allow the rear tire to hook up under acceleration and will pass more bumps on to you.

Suspension Adjustments for Track Conditions

Soft Surface

On soft ground, sand, and especially mud, consider increasing compression damping front and rear.

Sand often requires a bit more rebound damping to minimize rear end kick. Although sand bumps are usually larger, there's more distance between them, giving the shock more time to recover.

You may want a little bit stiffer front suspension for sand tracks to help keep the front end up and improve straight-line stability.

In a muddy event, stiffer aftermarket springs front and rear may help, especially if you are heavier than the average rider. Your CRF may be undersprung because of the added weight of the clinging mud. This additional weight may compress the suspension too much and affect traction.

Hard Surface

For a fast, hard track with no large jumps, you can probably run the same spring as normal, but run softer damping both ways-compression and rebound. If you run softer rebound damping, the wheel will follow the rough ground and small bumps much better, and you will hook up better. With a lot of rebound damping, the wheel returns very slowly and doesn't contact the ground quickly enough after each bump. The result is a loss of traction and slower lap times.

Suspension Adjustment Guidelines

Follow the procedures described below to accurately adjust your CRF, using the methods described on pages 110 – 129. Remember to make all adjustments in one-click or 1/12 turn increments. Test ride after each adjustment.

Front Suspension Adjustment Adjustments for Type of Track

Hard-surfaced track	Begin with the standard setting. If the suspension is too stiff/soft, adjust according to the chart below.
Sand track	Adjust to a stiffer position. Example: – Turn the compression damping adjuster to a stiffer position. – Install the optional stiff spring. (Adjust compression damping to a softer position and rebound damping to a stiffer position at this time.)
Mud track	Adjust to a stiffer position because mud build-up increases your CRF's weight. Example: – Turn the compression damping adjuster to a stiffer setting. – Install the optional stiff spring.

Adjustments for Too Soft/Stiff Damping

	Symptom	Action
Soft suspension	Initial travel too soft: • Steering is too quick. • Front end darts while cornering or riding in a straight line.	– Test stiffer compression damping adjustments in one-click increments. – Test stiffer rebound damping in one-click increments.
	Middle travel too soft: • Front end dives when cornering.	If suspension isn't stiff in initial travel: – Test stiffer compression damping adjustments in one-click increments. If initial travel becomes stiff because of the above adjustment: – Reduce the rebound damping in one-click increments. – Test softer compression damping adjustments in one-click increments. If that doesn't solve the problem, install the optional stiff spring.
	Final travel too soft: • Bottoms on landings. • Bottoms on large bumps, especially downhill bumps.	If initial and middle travel aren't stiff: – Test stiffer compression damping adjustments in one-click increments. If initial and middle travel are stiff: – Install the optional stiff spring. If initial travel is stiff after installing the optional stiff spring: – Test softer compression damping adjustments in one-click increments. If initial travel is still soft after installing the optional stiff spring: – Test stiffer compression damping adjustments in one-click increments. If final travel is still soft after installing the optional stiff spring: – Increase the fork oil capacity in increments of 0.2 US oz (5 cm ³).
	Entire travel too soft: • Front end shakes. • Fork bottoms over any type of terrain.	– Install the optional stiff spring. – Test stiffer compression damping adjustments in one-click increments. – Increase rebound damping in one-click increments.

Suspension Adjustment Guidelines

	Symptom	Action
Stiff suspension	Initial travel too stiff: <ul style="list-style-type: none"> • Stiff on small bumps while riding at full throttle in a straight line. • Stiff on small cornering bumps. • Front end wanders while riding at full throttle in a straight line. 	<ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping adjustments in one-click increments. – Check for dirt in the dust seals. Check the fork oil for any contamination. <p>If the front end dives while cornering after the above adjustment: Reduce the rebound damping in one click increments. If that doesn't solve the problem, install the optional stiff spring.</p> <p>If the stiff spring makes the suspension too stiff over the full range of travel: test softer compression damping adjustments in one-click increments until the desired compression damping for initial travel is obtained.</p>
	Middle travel too stiff: <ul style="list-style-type: none"> • Stiff on bumps when cornering. • Front end wanders when cornering. • Stiff suspension on bumps, especially downhill bumps. • While braking, front end dives during initial travel, then feels stiff. 	<p>If initial travel isn't stiff:</p> <ul style="list-style-type: none"> – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) <p>If initial and middle travel is stiff:</p> <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments.
	Final travel too stiff: <ul style="list-style-type: none"> • Doesn't bottom on landings, but feels stiff. • Stiff on large bumps, especially downhill bumps. • Stiff on large bumps when cornering. 	<p>If initial and middle travel aren't stiff:</p> <ul style="list-style-type: none"> – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) <p>If final travel is still stiff after the above adjustment, or If initial and middle travel becomes stiff:</p> <ul style="list-style-type: none"> – Install the optional soft spring. – Test softer compression damping adjustments in one-click increments. <p>If the entire travel feels stiff after the above adjustment:</p> <ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments until the desired initial travel compression damping is obtained. – Lower the oil capacity by 0.2 US oz (5 cm³).
	Entire travel too stiff: <ul style="list-style-type: none"> • Stiff suspension on any type of terrain. 	<ul style="list-style-type: none"> – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments. – Lower the oil capacity by 0.2 US oz (5 cm³).

Suspension Adjustment Guidelines

Rear Suspension Adjustment Adjustments for Type of Track

Hard-surfaced track	Begin with the standard settings. If the suspension is too stiff/soft, adjust according to the chart below.
Sand track	Lower the rear end (to improve front wheel stability) by increasing Race Sag (reduce spring pre-load). Example: – Turn the compression damping adjuster and, especially, rebound damping adjuster to a stiffer setting. – Increase standard Race Sag (+0.2 to 0.4 in/5 to 10 mm).
Mud track	Adjust to a stiffer position because mud build-up increases your CRF's weight. Example: – Adjust the compression and rebound damping adjusters to stiffer settings. – Install the optional stiff spring. – Reduce standard Race Sag (–0.2 to 0.4 in/5 to 10 mm).

Symptoms and Adjustment

- Always begin with the standard settings.
- Turn the low speed compression and rebound adjusters in one-click increments, and the high speed compression adjuster in 1/12 turn increments at a time. Adjusting two or more clicks or turns at a time may cause you to pass over the best adjustment. Test ride after each adjustment.
- If, after setting, the suspension feels unusual, find the corresponding symptom in the table and test stiffer or softer compression and/or rebound damping adjustments until the correct settings are obtained as described.

	Symptom	Action
Stiff suspension	Suspension feels stiff on small bumps	1. Test softer low speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously.
	Suspension feels stiff on large bumps	1. Test softer high speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously.
	Entire travel too stiff	1. Test softer high and low speed compression adjustments and rebound adjustment simultaneously. 2. If it still feels stiff, replace the spring with a softer spring (optional) and begin with the standard settings to softer settings.
Soft suspension	Entire travel too soft	1. Test stiffer high and low speed compression adjustments simultaneously. 2. If it still feels soft, replace the spring with a stiffer spring (optional) and begin with the standard settings to stiffer setting.
	Rear end sways	1. Test stiffer high and low speed compression adjustments and rebound adjustment to stiffer settings simultaneously.
Suspension bottoms	Suspension bottoms at landing after jumping	1. Test stiffer high speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiffer spring (optional) if necessary.
	Suspension bottoms after landing	1. Test stiffer low speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiffer spring (optional) if necessary.
	Suspension bottoms after end of continuous bumps	1. Test softer rebound dumping adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments and softer rebound damping adjustment, and replace the spring with a stiffer spring (optional) if necessary.

Tuning Tips

An optional PGM-FI setting tool can change the ignition timing and amount of the fuel injection (page 157).

Be sure to observe the PGM-FI setting by checking the spark plug.

Spark Plug Reading

Refer to *Spark Plug* on page 67.

The following procedure is recommended. You may not get an accurate reading if you simply turn off the engine and pull the plug for inspection.

Use a new spark plug. Inspect the plug before installing it.

NOTICE

Using spark plugs with an improper heat range or incorrect reach can cause engine damage.

Ride for 10 – 15 minutes before taking a plug reading. A new plug will not color immediately.


Before removing the spark plug, clean the spark plug area thoroughly to prevent dirt from entering the cylinder.

To obtain an accurate reading of a new spark plug:

1. Accelerate at full throttle on a straight.
2. Depress and hold the engine stop button and pull the clutch lever in.
3. Coast to a stop.
4. Remove the spark plug.
5. Use a magnifying glass to inspect the spark plug. The porcelain insulator (1) around the center electrode (2) should appear clean and colorless with a gray ring around the center electrode where it exits the porcelain. Light gray or white color streaks the porcelain insulator and center electrode indicate lean air-fuel mixture. Wet or black sooty streaks on the porcelain indicate rich air-fuel mixture.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

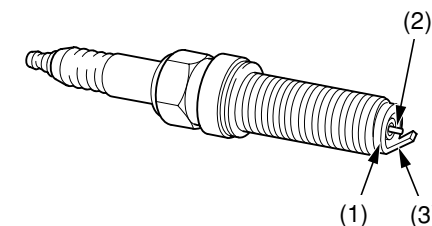

- (1) porcelain insulator (3) side electrode
(2) center electrode

Spark Plug Coloring Guidelines

Condition	Spark Plug Appearance	Mixture
Normal	Dark brown to light tan color with dry electrode	correct
Overheating (Lean)	Light gray or white color	lean
Wet (Rich)	Wet or sooty	rich

Remember that in addition to improper air-fuel mixture:

- A lean condition can be caused by air leaks in the inlet tract or exhaust system, the passage of too much air because of the use of the wrong air cleaner, use of a less-restrictive aftermarket exhaust system.
- A rich condition can be caused by a plugged or dirty air cleaner, use of a more-restrictive aftermarket exhaust system, or excessive oil on the air cleaner. Excessive smoking will occur.

Steering Damper Adjustment

The steering damper can be adjusted for riding conditions by using following method:

- **Damping** – Turning the steering damper adjuster adjusts how quickly the steering damper extends and retracts.

Steering Damper Adjustment

The steering damper adjuster (1) has 13 positions or more. Turning the adjuster one full turn clockwise advances the adjuster six positions. To adjust the adjuster to the standard setting, proceed as follows:

Turn the adjuster clockwise until it will no longer turn (lightly seats). This is the full hard position. The adjuster is set in the standard position when the adjuster is turned counterclockwise 9–12 clicks.

Damping can be increased by turning the adjuster clockwise.

NOTICE

Always start with full hard when adjusting damping.

Do not turn the adjuster more than the given positions or the adjuster may be damaged. Be sure that the damping adjuster is firmly located in a detent, and not between positions.



(1) steering damper adjuster

Steering Damper Adjustment Guidelines

Follow the procedures described below to accurately adjust your CRF, using the methods described on this page.

Symptoms and Adjustment

- Always begin with the standard settings.
- Turn the steering damper adjuster in one-click increments at a time. Adjusting two or more clicks at a time may cause you to pass over the best adjustment. Test ride after each adjustment.

Symptom	Action
Steering is wobbling on large bumps	Adjust the steering damper adjuster to stiffer setting.
Steering is wobbling at sand track	Adjust the steering damper adjuster to stiffer setting.
Steering is heavy when cornering	Adjust the steering damper adjuster to softer setting.

Chassis Adjustments

The following suggestions may improve a specific concern. Subtle changes in overall handling may also be noted.

Rear End

If you have a problem with rear wheel traction, raise the rear end of your CRF by increasing the rear suspension spring pre-load. Instead of running 4.1 in (105 mm) of sag, you can run 3.7 in (95 mm) so the rear of the motorcycle will sit a little higher. This should produce more traction because of the change to the swingarm and location of your CRF's center of gravity.

If you have a problem with the steering head shaking when you use the front brake hard or if your CRF wants to turn too quickly, lower the rear of the motorcycle by reducing the rear suspension spring pre-load. This will increase fork rake and trail and should improve stability in a straight line. The effective suspension travel will be transferred toward the firmer end of wheel travel.


Keep the race sag adjustment (page 127) in the 3.7 – 4.5 in (95 – 115 mm) range.

Fork Height/Angle

The position of the fork tubes in the clamps is not adjustable. Align the groove in the outer tube with the top surface of the upper fork clamp.

Standard Position

The standard position (1) align the top of the outer tube (2) (not the top of the fork cap) with the top surface of the upper fork clamp (3).

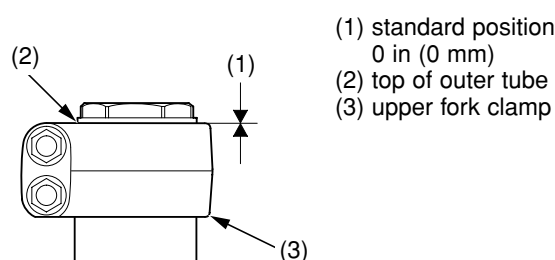


Wheelbase

Adjusting your CRF's wheelbase can offer subtle changes in overall handling. You may adjust wheelbase by adding or removing links on the drive chain. If you change the wheelbase, be sure to re-check race sag and adjust, if necessary.

In the past, a general rule was lengthen the wheelbase to add straight line stability, shorten the wheelbase to improve turning. However, we suggest you do not lengthen the wheelbase of your CRF unless you are racing on a track with more fast sections than normal.

As a general recommendation, keep the wheelbase as short as possible. This positions the wheels closer together, improves turning response, increases weighting (traction) on the rear wheel, and lightens weighting on the front wheel.

With your CRF, you will probably find that the standard setting or a shorter wheelbase will offer more overall benefits.

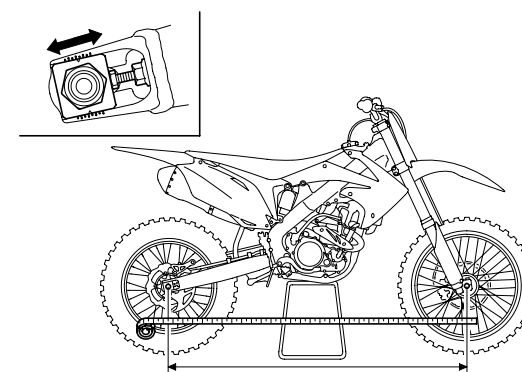

Gearing

You can “adjust” the power delivery of the standard engine to suit track conditions by changing gearing. This allows you to utilize a different portion of the engine’s power range at a given throttle setting. New gearing may provide the change you are looking for without the need to consider further modifications.

The portion of your engine’s power range you use can be adjusted by changing the final drive ratio with different sized rear sprockets. Gearing changes allow you to more closely match the type of terrain and the available traction. Normally, a change of one tooth on the rear sprocket will be sufficient.

There is a choice of both higher and lower final drive ratios with two optional aluminum driven sprockets. Like the optional springs, these sprockets are listed in the Optional Parts List section of this manual (page 156).

Unless you have the required mechanical knowhow, tools, and Honda Service Manual, sprocket changing should be done by your dealer.

Higher Gearing (less driven sprocket teeth)

- increases top speed in each gear (provided the engine will pull the higher gearing)
- reduces frequency of shifting (wider gear ratios)
- reduces engine rpm at a given throttle setting or ground speed (which may allow better rear wheel traction on slippery or loose terrain)

However:

- the engine may not pull the higher gearing
- the spacing between gears may be too wide
- engine rpm may be too low

Lower Gearing (more driven sprocket teeth)

- decrease top speed in each gear
- increases frequency of shifting (narrower gear ratios)
- increases engine rpm at a given throttle setting or ground speed (which may provide more power-to-the-ground on good traction surfaces)

However:

- spacing between gears may be too narrow
- engine rpm may be too high

Some tracks may be watered heavily prior to the first race, then lightly or not at all during the day. This results in a track surface that is slippery during the first few races, then changes from good to great and back to good, and possibly ends the day with a slick rock-hard consistency. Ideally, your gearing should be adjusted to suit all these conditions.

- Wet and slippery or sandy conditions: use a higher gear (less teeth) to keep engine rpm down, and avoid unwanted wheelspin. The engine may bog in certain corners so you’ll need to slip the clutch to compensate; downshifting may be too drastic a change in speed.
- Average conditions: use the standard sprocket.
- Hard (but not slippery) track conditions: use lower gearing (more teeth) to keep the engine rpm high where the engine produces the most power. This may require an extra upshift on certain sections or perhaps you can just rev it out a bit longer.

For tight tracks, consider lower gearing to avoid having to slip the clutch frequently. Repeated fanning or pulling of the clutch lever in a turn to raise engine rpm may eventually damage the clutch system.

A gearing change may help for riding in sand, where you want to keep the front end light so it can float from the peak of one sand whoop to the next. Generally, with higher gearing, it is easier to maintain that perfect attitude (maximum rear wheel traction and a light front end) because you remain in the powerband longer in each gear. The higher gearing allows you to steer more efficiently with throttle control and body English.

If you are riding a track with sections where you choose to over-rev the engine temporarily rather than shifting up, higher gearing might help.

Sometimes you have to sacrifice performance on one section of the track to gain a better overall time. Your goal is the fastest overall lap time, even if the trade-off is gearing that feels wrong in some sections.

If you decide to try a gearing change, have someone check your times with a stopwatch (before and after the change) to get an accurate appraisal of the gearing change. “Seat-of-the-pants” feelings can’t be trusted. Eliminating wheelspin with a gearing change can make you feel like you’re going slower when, in reality, you’ve decreased your time by increasing your speed with better traction.

These gearing recommendations should be evaluated by considering your ability, your riding style, and the track.

Tire Selection for Track Conditions

Choosing the correct tire tread pattern and rubber compound can affect your placing in competition. The tires on your CRF offer a “happy medium” for the variety of soil conditions the majority of riders are likely to encounter.

Experienced competitors often switch to tires developed for specific terrain conditions. If you do switch, stay with the factory recommended sizes. Other tires may affect handling or acceleration.

Be aware that tire sizes (width and aspect ratio) do vary from manufacturer to manufacturer or even among tires made by the same manufacturer. Variations in tires, especially the sidewall profile, can change the attitude of your CRF and its handling. Tire variations that raise or lower the rear of your CRF have a more significant effect on handling than variations in front tires which, generally, don’t vary as much. Often, you can see or feel the change in tire size. Another way to check is to measure the rolling circumference of the old and new tires. A higher profile tire will have a larger rolling circumference.

If you do switch to tires designed for special terrain use, remember they will be less acceptable in other circumstances. For example, an aggressive mud tire will give excellent grip on wet, loamy terrain, but less impressive grip on a hard surface.

If you choose a tire with a sticky compound for added traction, remember that it may transfer additional loads to the transmission because it grips so well, especially when riding in situations that normally place unusual demands on the transmission.

Complete consumer information can be obtained from the various tire manufacturer representatives and dealers.

Some general recommendations for specific terrain follow:

Hard, Slick Soil

Use tires with many relatively short knobs that are close together in order to obtain the largest possible contact patch on the surface. The rubber compound needs to be softer for hard ground in order to hook up, but not so soft that the knobs roll over easily and affect holding a straight line. These tires tend to wear more quickly than standard tires because of the combination of soft rubber and hard terrain.

Muddy Soil

Use a more open tread pattern to avoid clogging. For these conditions, the relatively long knobs will probably be made from a harder rubber compound to reduce any tendency to bend back under acceleration or wear quickly.

Loose, Sandy Soil

Use a tire that is similar in construction to those needed for tacky soil and mud, but with a few more knobs.


Personal Fit Adjustments

The following suggestions may make your ride both more comfortable and more responsive to your control input.

Control Positioning

- Position the control levers so that you can use them comfortably when seated and standing.
- Adjust the mounting bolt torque of the clutch and brake lever assemblies so that they can rotate on the handlebar in a fall. If an assembly does not rotate, it may bend or break a control lever. Make sure that the bolts are torqued securely enough to prevent slippage during normal operation.


Apply Pro Honda Hondalock or an equivalent to the threads of these bolts prior to adjustment to help ensure the correct torque is retained. Tighten the top bolts first.

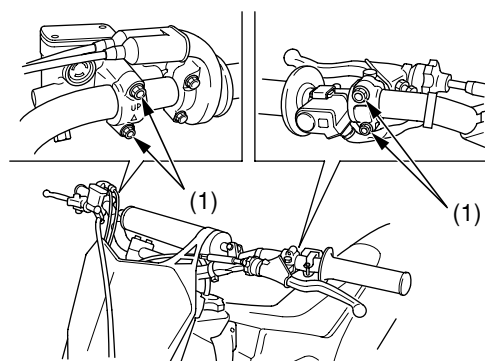

(1) control lever mounting bolts

As an alternative, consider wrapping the handlebar area under the control assemblies with teflon tape. Then tighten the assemblies to their normal torque. Upon impact, the fully-tightened assemblies should rotate on the teflon tape.


- Position the shift lever and brake pedal so they are close to your boot for rapid access, but not so close that either is depressed when sitting or standing comfortably on your CRF.

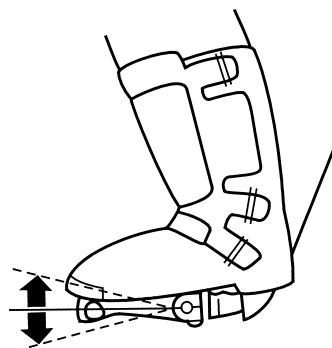

Handlebar Position, Width & Shape

- Position the handlebar so that both gripping the bar and operating the controls is comfortable while both seated and standing, while riding straight ahead and turning. Tighten the forward bolts first.
- The handlebar position may be moved rearward either 0.12 in (3 mm) (using optional handlebar lower holders) or 0.24 in (6 mm) (by rotating the standard holders 180 degrees). Refer to the Service Manual for installation instructions. Be sure to check control cable and wiring harness routing after the adjustment.

- Handlebar width can be trimmed with a hacksaw to better suit your particular shoulder width and riding preference. Think this through carefully and cut off just a small amount at a time from both sides equally. It is obviously much easier to make the handlebar narrower than it is to add material.

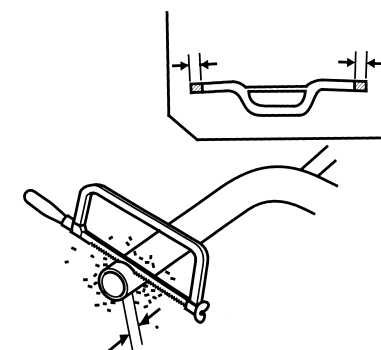

- Chamfer the edges to remove burrs and other irregularities or roughness after sawing the handlebar.
- An alternate handlebar shape, through varying rise or rearward sweep dimensions, will provide further adjustment to riding position and may better suit your particular body size or riding style. Each of the ergonomic dimensions of the machine were determined to suit the greatest possible number of riders based on an average size rider.

Tips


Here's helpful advice on how to transport and store your Honda, as well as three troubleshooting flow charts.

Transporting Your Motorcycle	142
Storing Your Honda.....	143
You & the Environment	144
Troubleshooting.....	145

Transporting Your Motorcycle

If you use a truck or motorcycle trailer to transport your Honda, we recommend that you follow these guidelines:

- Use a loading ramp.
- Make sure the fuel valve is off.
- Secure the motorcycle in an upright position, using motorcycle tie-down straps. Avoid using rope, which can loosen and allow the motorcycle to fall over.

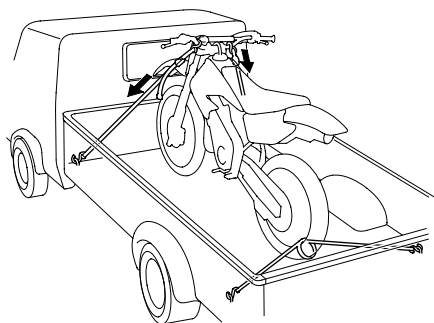

To secure your CRF, brace the front wheel against the front of the truck bed or trailer rail. Attach the lower ends of two straps to the tie-down hooks on your CRF. Attach the upper ends of the straps to the handlebar (one on the right side, the other on the left), close to the fork.

Check that the tie-down straps do not contact any control cables or electrical wiring.

Tighten both straps until the front suspension is compressed about half-way. Too much pressure is unnecessary and could damage the fork seals.

Use another tie-down strap to keep the rear of the motorcycle from moving.

We recommend that you do not transport your CRF on its side. This can damage the motorcycle, and leaking gasoline could be a hazard.


Storing Your Honda

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your Honda and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your CRF running again.

To reduce or prevent deterioration that can occur during storage, also follow the following procedures.

Preparation for Storage

1. Completely clean all parts of your CRF. If your CRF has been exposed to sea air or salt water, wash it down with fresh water and wipe dry.
2. Change the engine oil and filter (page 50).
3. Change the transmission oil (page 53).
4. Remove the radiator cap and coolant drain bolt and sealing washer (1) at the water pump cover (2) to drain coolant.
After the coolant has been completely drained, reinstall the drain bolt with a new sealing washer and radiator cap.
Tighten the drain bolt to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

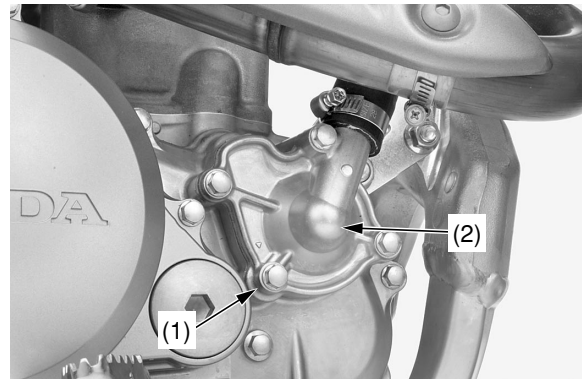

- (1) coolant drain bolt and washer
(2) water pump cover

5. Lubricate the drive chain.
6. Relieve the fuel pressure (page 41) and drain the fuel from the fuel tank into an approved gasoline container.
7. Inflate the tires to their recommended pressures.
8. Place your CRF on an optional workstand or equivalent to raise both tires off the ground.
9. Stuff a rag into the muffler outlet. Then tie a plastic bag over the end of the muffler to prevent moisture from entering.
10. Store your CRF in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
11. Cover your CRF with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

1. Uncover and clean your CRF.
Change the engine and transmission oil if more than 4 months have passed since the start of storage.
2. Uncover the end of the muffler and remove the rag from the muffler outlet.
3. Fill the fuel tank with the recommended fuel (page 40) and increase the fuel pressure (page 48).
4. Pour a fresh recommended coolant mixture (page 54) slowly into the radiator filler hole up to the filler neck.
Capacity:
1.16 US qt (1.10 ℓ)
after disassembly
1.09 US qt (1.03 ℓ)
after draining

Lean your CRF slightly right and left several times to bleed trapped air in the cooling system.
If the coolant level lowers, add coolant and repeat the above procedure.
Install the radiator cap securely.
5. Perform all maintenance checks (page 13).

You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature. When you show respect for the land, wildlife, and other people, you also help preserve the sport of off-road riding.

Following are tips on how you can be an environmentally responsible motorcycle owner.

- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your CRF. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.
- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, gasoline, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area and get instructions on how to dispose of nonrecyclable wastes.

NOTICE


Improper disposal of drained fluids is harmful to the environment.

Troubleshooting

The items that are serviceable using this Manual are followed by the page number reference in parenthesis. The items that require use of an official Honda Service Manual are followed by an asterisk (*).



ENGINE DOES NOT START OR IS HARD TO START

CHECK

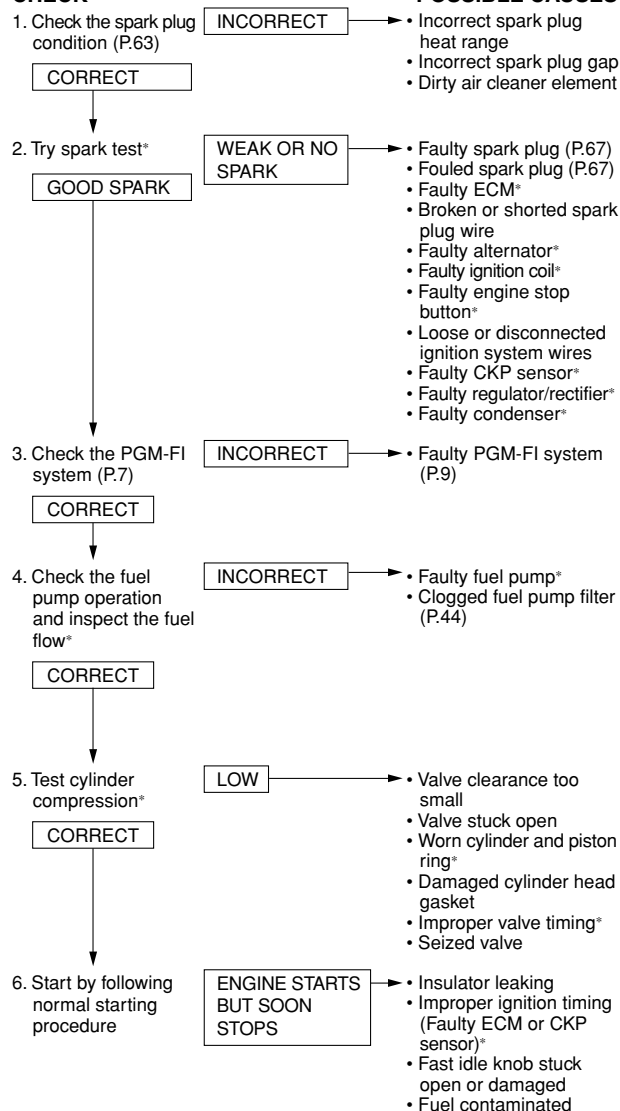

ENGINE LACKS POWER

CHECK

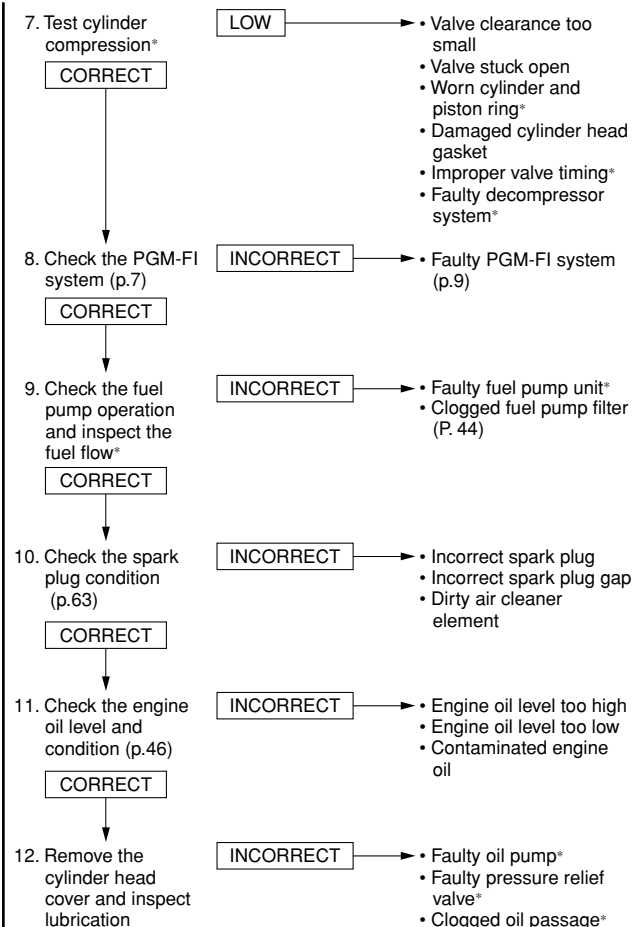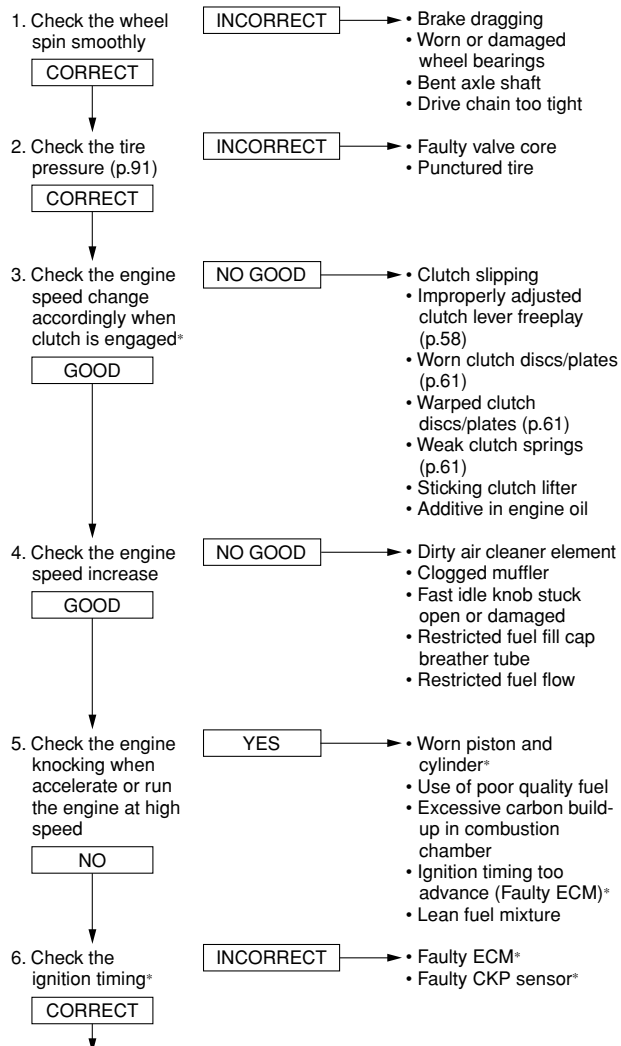

Troubleshooting

POOR PERFORMANCE AT LOW AND IDLE SPEED

CHECK

1. Check the spark plug condition (P.63)

INCORRECT

POSSIBLE CAUSES

- Incorrect spark plug heat range
- Incorrect spark plug gap
- Plug not serviced frequently enough

CORRECT

2. Check the ignition timing*

INCORRECT

- Faulty ECM*
- Faulty CKP sensor*

CORRECT

3. Check the PGM-FI system (P.7)

INCORRECT

- Faulty PGM-FI system (P.9)

CORRECT

4. Check the fuel pump operation and inspect the fuel flow*

INCORRECT

- Faulty fuel pump unit*
- Clogged fuel pump filter (P.44)

CORRECT

5. Check the insulator for leaks

INCORRECT

- Loose insulator
- Damaged insulator

CORRECT

6. Try spark test*

WEAK OR INTERMITTENT SPARK

- Faulty, carbon or wet fouled spark plug (P.67)
- Faulty ECM*
- Faulty alternator*
- Faulty ignition coil*
- Broken or shorted spark plug wire.
- Faulty CKP sensor*
- Loose or disconnected ignition system wires
- Faulty engine stop button*
- Faulty regulator/rectifier*
- Faulty condenser*

POOR PERFORMANCE AT HIGH SPEED

CHECK

1. Check the ignition timing*

INCORRECT

POSSIBLE CAUSES

- Faulty ECM*
- Faulty CKP sensor*

CORRECT

2. Remove the air cleaner (P.52)

DIRTY

- Not cleaned frequently enough

AIR CLEANER NOT DIRTY

3. Check the PGM-FI system (P.7)

INCORRECT

- Faulty PGM-FI system (P.9)

CORRECT

4. Check the fuel pump operation and inspect the fuel flow*

INCORRECT

- Faulty fuel pump unit*
- Clogged fuel pump filter (P.44)

CORRECT

5. Check the valve timing

INCORRECT

- Camshaft not installed properly (P.73)

CORRECT

6. Try spark test*

GOOD SPARK

WEAK OR INTERMITTENT SPARK

- Faulty, carbon or wet fouled spark plug (P.67)
- Faulty ECM*
- Faulty alternator*
- Faulty ignition coil*
- Broken or shorted spark plug wire.
- Faulty CKP sensor*
- Loose or disconnected ignition system wires
- Faulty engine stop button*
- Faulty regulator/rectifier*
- Faulty condenser*

7. Check the valve springs*

WEAR

- Faulty valve springs*

GOOD

8. Remove and inspect the cam lobe height*

WORN

- Faulty camshaft*

CORRECT

POOR HANDLING

Steering is heavy

- Steering stem adjusting nut too tight*
- Damaged steering head bearings
- Faulty HPSPD*

Either wheel is wobbling

- Excessive wheel bearing play
- Bent rim
- Improperly installed wheel hub
- Excessively worn swingarm pivot bearings
- Bent frame

The motorcycle pulls to one side

- Front and rear wheels not aligned
- Bent fork
- Bent swingarm
- Bent axle shaft
- Bent frame

Technical Information

This section contains dimensions, capacities, and other technical data.

Vehicle Identification	148
Specifications	149
Torque Specifications	150
Oxygenated Fuels	153
Competition Logbook	154
Optional Parts List	156
Spare Parts & Equipment	157
Wiring Diagram	158


Vehicle Identification

Serial Numbers

The VIN and engine serial number are required when you register your CRF. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (vehicle identification number) (1) is stamped on the right side of the steering head.


RIGHT SIDE

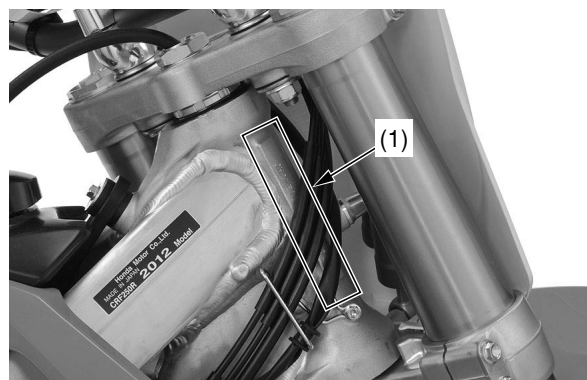

(1) VIN

The engine number (2) is stamped on the left crankcase.

LEFT SIDE

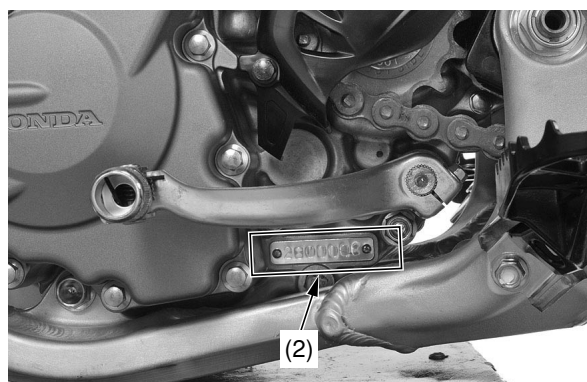

(2) engine number

Specifications

Item	English	Metric
Dimension		
Overall length	85.9 in	2,181 mm
Overall width	32.6 in	827 mm
Overall height	50.0 in	1,271 mm
Wheelbase	58.6 in	1,489 mm
Seat height	37.4 in	951 mm
Footpeg height	16.5 in	418 mm
Ground clearance	12.7 in	322 mm
Frame		
Type	Twin tube	
F. suspension	Telescopic fork travel 10.8 in (275 mm) stroke 12.2 in (310 mm)	
R. suspension	Pro-link travel 12.3 in (313 mm)	
Front tire	80/100 – 21 51M	
	DUNLOP	MX51F
Rear tire	100/90 – 19 57M	
	DUNLOP	MX51
Tire type	bias-ply, tube	
Tire pressure, front (cold)	15 psi (100 kPa, 1.0 kgf/cm ²)	
Tire pressure, rear (cold)	15 psi (100 kPa, 1.0 kgf/cm ²)	
F. brake, swept area	Single disc brake 51.8 in ² (334.5 cm ²)	
R. brake, swept area	Single disc brake 60.6 in ² (391.1 cm ²)	
Fuel	unleaded gasoline, pump octane number of 91 or higher	
Fuel capacity	1.5 US gal	5.7 ℓ
Caster angle	27°23'	
Trail length	4.6 in	118 mm
Fork oil capacity (except fork damper)	12.6 US oz	372 cm ³

Item	English	Metric
Engine		
Type	Liquid cooled, 4-stroke	
Cylinder arrangement	Single 5° inclined from vertical	
Bore and stroke	3.02 x 2.12 in	76.8 x 53.8 mm
Displacement	15.22 cu-in	249.4 cm³
Compression ratio	13.2 : 1	
Valve clearance (cold)	Intake: 0.005 ± 0.001 in (0.12 ± 0.03 mm) Exhaust: 0.011 ± 0.001 in (0.28 ± 0.03 mm)	
Engine oil capacity After draining	0.70 US qt	0.67 ℓ
After draining and oil filter change	0.73 US qt	0.69 ℓ
After disassembly	0.90 US qt	0.85 ℓ
Transmission oil capacity		
After draining	0.72 US qt	0.68 ℓ
After disassembly	0.79 US qt	0.75 ℓ
Throttle body		
Identification number	GQ26A	
Idle speed	2,000 ± 100 rpm	
Cooling system		
Cooling capacity after draining	1.09 US qt	1.03 ℓ
after disassembly	1.16 US qt	1.10 ℓ

Item	English	Metric
Drive train		
Clutch type	Wet, multi-plate type	
Transmission	5-speed, constant mesh	
Primary reduction	3.166	
Gear ratio I	2.357	
Gear ratio II	1.888	
Gear ratio III	1.555	
Gear ratio IV	1.333	
Gear ratio V	1.136	
Final reduction	3.769	
Gear shift pattern	Left foot-operated return system 1-N-2-3-4-5	
Electrical		
Ignition	ECM	
Starting system	Kickstarter	
Spark plug : Standard	NGK R0451B-8	
Spark plug gap	0.024 – 0.028 in (0.6 – 0.7 mm)	


Torque Specifications

Nuts, Bolts, Fasteners


Check and tighten nuts, bolts, and fasteners before every outing.

Engine

RIGHT SIDE

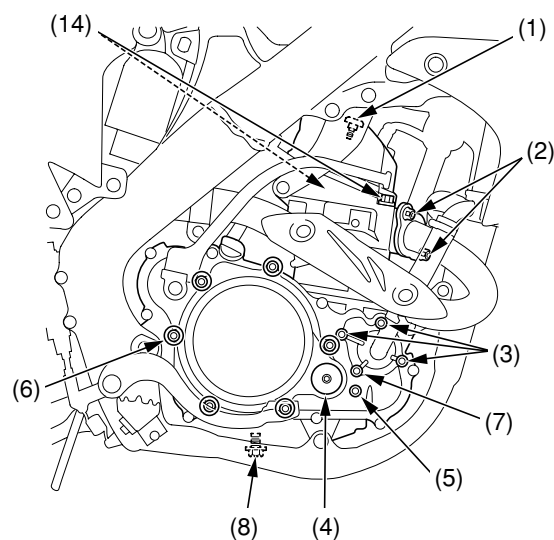

LEFT SIDE

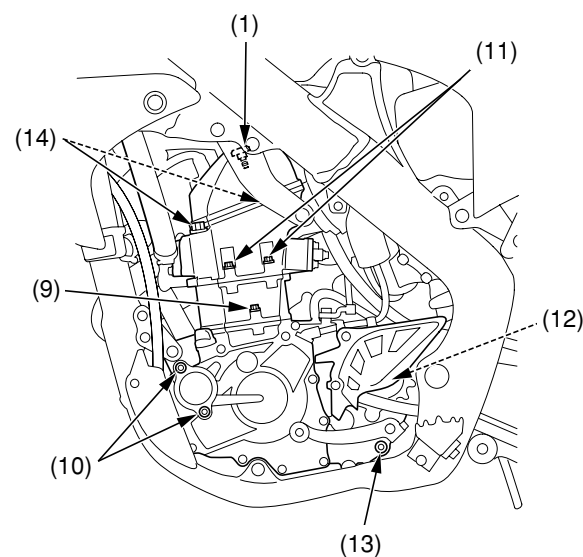


	Item	Torque			Remarks
		lbf•ft	N•m	kgf•m	
	ENGINE				
1	Cylinder head cover bolts	7	10	1.0	
2	Exhaust pipe joint nuts	15	21	2.1	
3	Water pump cover bolts	7	10	1.0	
4	Crankshaft hole cap	11	15	1.5	NOTE 1
5	Transmission oil check bolt	9	12	1.2	
6	Clutch cover bolts	7	10	1.0	
7	Coolant drain bolt	7	10	1.0	
8	Engine oil drain bolt	12	16	1.6	NOTE 2
9	Cylinder bolt	7	10	1.0	
10	Oil filter cover bolts	9	12	1.2	
11	Cylinder head bolts	7	10	1.0	
12	Drive sprocket bolt	23	31	3.2	
13	Transmission oil drain bolt	12	16	1.6	NOTE 2
14	Cylinder head stud bolts	33	45	4.6	NOTE 2

NOTES: 1. Apply grease to the threads.
2. Apply oil to the threads.

Torque Specifications

Frame

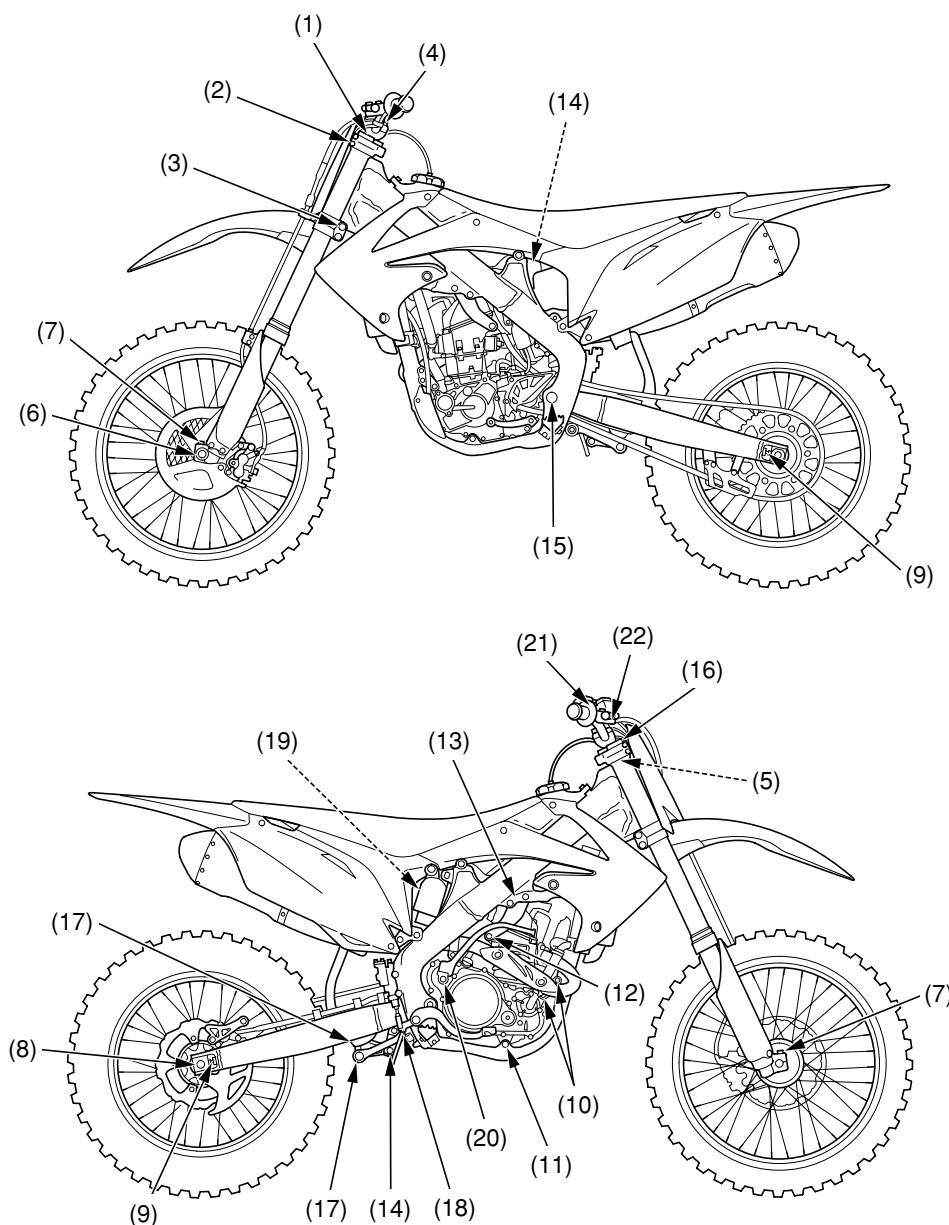


Item		Torque			Remarks
		lbf•ft	N•m	kgf•m	
	FRAME				
1	Steering stem nut	80	108	11.0	
2	Fork bridge upper pinch bolts	16	22	2.2	
3	Fork bridge lower pinch bolts	15	20	2.0	
4	Handlebar upper holder bolts	16	22	2.2	
5	Handlebar lower holder nuts	32	44	4.5	
6	Front axle nut	65	88	9.0	
7	Front axle pinch bolts	15	20	2.0	
8	Rear axle nut	94	128	13.1	NOTE 1
9	Chain adjuster lock nuts	20	27	2.8	NOTE 2
10	Front engine hanger nut	40	54	5.5	
	Front engine hanger plate nuts	19	26	2.7	
11	Lower engine hanger nut	40	54	5.5	
12	Cylinder head hanger bolts	40	54	5.5	
13	Cylinder head hanger plate bolts	24	33	3.4	
14	Shock absorber	32	44	4.5	NOTE 1
15	Swingarm pivot nut	65	88	9.0	NOTE 1
16	Fork (fork damper)	25	34	3.5	
	(fork cap)	22	30	3.1	
17	Rear shock arm nuts (swingarm side: nut width 17 mm)	39	53	5.4	NOTE 1, 3
	(shock link side: nut width 19 mm)	39	53	5.4	NOTE 1, 3
18	Rear shock link nuts (frame side)	39	53	5.4	NOTE 1, 3
19	Shock spring lock nut	32	44	4.5	
20	Kickstarter arm bolt	28	38	3.9	NOTE 4
21	Front brake master cylinder holder bolts	7.3	9.9	1.0	
22	Brake hose bolts	25	34	3.5	

NOTES: 1. U-nut.
 2. UBS nut.
 3. Apply molybdenum oil to the threads and flange surface.
 4. Alock bolt: replace with a new one
 5. Apply locking agent to the threads.
 6. SH bolt

Torque Specifications

Frame

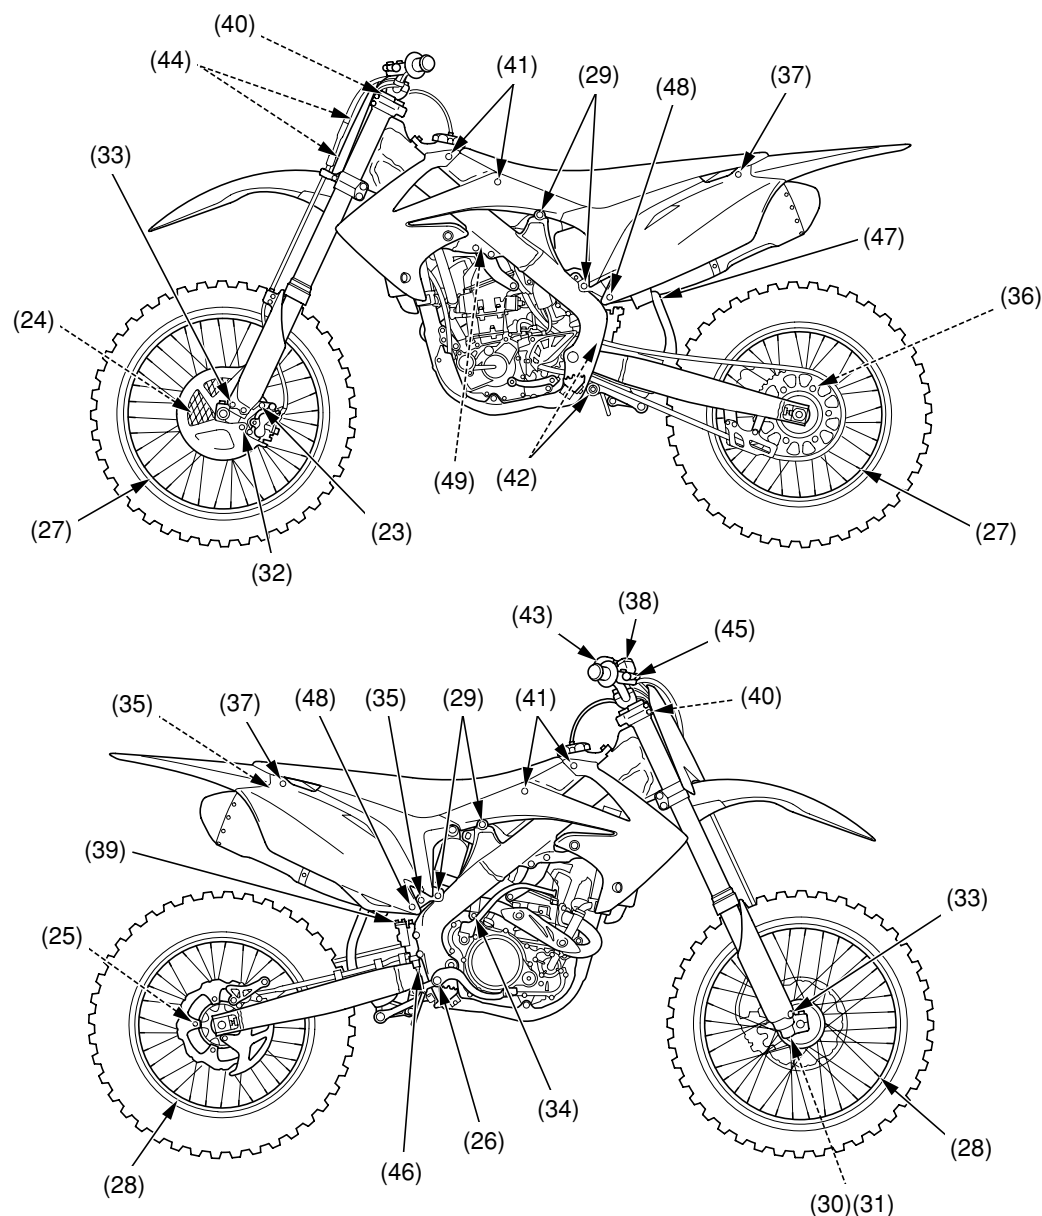

Item		Torque			Remarks
		lbf•ft	N•m	kgf•m	
	FRAME				
23	Caliper mounting bolts	22	30	3.1	NOTE 4
24	Front brake disc nuts	12	16	1.6	NOTE 1
25	Rear brake disc nuts	12	16	1.6	NOTE 1
26	Brake pedal pivot bolt	27	36	3.7	NOTE 5
27	Spoke (front)	2.7	3.7	0.4	
	(rear)	2.7	3.7	0.4	
28	Rim locks	9	12	1.2	
29	Subframe bolts (upper)	24	33	3.4	
	(Lower-left)	24	33	3.4	
	(Lower-right)	36	49	5.0	
30	Fork center bolt	51	69	7.0	
31	Fork center lock nut	16	22	2.2	
32	Disc cover bolts	10	13	1.3	
33	Fork protector bolts	5.2	7	0.7	NOTE 4
34	Muffler clamp bolt	15	21	2.1	
35	Muffler mounting Front side	19	26	2.7	
	A, B bolts Rear side	19	26	2.7	
36	Driven sprocket nuts	24	32	3.3	NOTE 1
37	Seat mounting bolts	19	26	2.7	
38	Front brake reservoir cap screws	0.7	1.0	0.1	
39	Rear brake reservoir cap bolts	0.7	1.0	0.1	
40	Fork air pressure release screw	1.0	1.3	0.1	
41	Shroud B bolts	3.7	5	0.5	
42	Drive chain roller (upper)	9	12	1.2	NOTE 6
	(lower)	9	12	1.2	NOTE 1
43	Throttle cable lock nut	3.0	4	0.4	
44	Steering damper mounting bolts	15	20	2.0	NOTE 4
45	Brake lever adjuster lock nut	4.4	5.9	0.6	
46	Brake pedal adjuster lock nut	4.4	5.9	0.6	
47	Mud guard screws	0.8	1.1	0.1	
48	Side cover bolts	7	10	1.0	
49	Fuel pump mounting bolts	8	11	1.1	

- NOTES:
1. U-nut.
 2. UBS nut.
 3. Apply molybdenum oil to the threads and flange surface.
 4. A lock bolt: replace with a new one
 5. Apply locking agent to the threads.
 6. SH bolt

Oxygenated Fuels

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions.

If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

The following are the EPA-approved percentages of oxygenates:

ETHANOL (ethyl or grain alcohol) 10% by Volume

You may use gasoline containing up to 10% ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol".

MTBE (Methyl Tertiary Butyl Ether) 15% by Volume

You may use gasoline containing up to 15% MTBE by volume.

METHANOL (methyl or wood alcohol) 5% by Volume

You may use gasoline containing methanol containing up to 15% methanol by volume as long as it contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.

Oxygenated fuels can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Wipe up any spills immediately.

NOTICE

Oxygenated fuels can damage paint and plastic.

Competition Logbook

Any serious competition effort relies heavily on the knowledge gained and compiled from previous racing events. The best way to organize the many bits of information is to record them in a logbook.

Your logbook can include such information as suspension adjustments, steering damper adjustments, gearing, and tire selection. This detailed information, along with your comments, can prove valuable when you compete at the same track or on similar terrain.

Your logbook can also tell you when maintenance was performed and when it will be necessary again. Your logbook also lets you record any repairs and lets you keep track of the running time on the engine and suspension components.

If you choose to sell your CRF, the accurate maintenance records in your logbook might be the deciding deal-maker for a potential buyer.

Consider using different color pens or pencils to record important information on specific subjects. For example, record results in black, steering damper setting in red, suspension/chassis settings in blue, and gearing selections in green. Color codes will help you identify the information you want with a glance.

Tuning & Adjustment Records

Keep track of the settings and adjustments that worked best at a particular location. These items include:

- basic track conditions, altitude, and temperature
- suspension settings
- steering damper settings
- chassis adjustments tested and selected
- gearing
- tire selection
- air pressure

Competition Records

- your placings
- thoughts to improve performance next time: both yours and your CRF's
- strategy notes

Maintenance Records

- regular interval maintenance
- repairs
- running time on engine
- running time on suspension components

Timekeeping

This Manual lists maintenance intervals for every-so-many races or every-so-many hours of running.

Because all races are not the same, the most effective way to schedule maintenance is by the hours you have run your CRF.

An official “guesstimate” is close enough for our timekeeping purposes. You may choose to record your time the same way aircraft operators do (but without the benefit of an electrical hourmeter). All running time is broken down into hours and tenths of an hour (each six minutes represents one tenth of an hour).

Racing Records

Information worth recording for this section of your logbook may include:

- Your placing in each moto and overall finishing position.
- Thoughts on what you could do to improve your performance next time.
- Notes on any patterns noted in choice of starting gate positions or in riding portions of the course as the day progressed that may prove helpful in future events.
- Any places on the course where you chose the wrong line and were passed too easily.
- Notes on strategy used by your competition or by riders in another event that are worth remembering.

Maintenance Records

Regular maintenance items you'll want to record in your logbook should include:

- Dates and results of cylinder, piston and ring examinations
- Patterns for frequency of need for decarbonization with a particular oil
- When you last performed shock linkage and swingarm pivot bearing maintenance
- Engine, transmission, and suspension oil changes
- Chain, sprocket, chain guide and slider replacements
- Coolant changes and related component replacements
- Spark plug, brake pad and control cable replacements

In addition, you should record any irregularities noted in component wear so you'll remember to keep a close eye on these areas in the future.

Competition Logbook



Date	Running Time	Location/Event	Comments (Suspension Settings, Steering Damper Settings, Gearing, Chassis Adjustments, Maintenance Performed, etc.)

 

 

 
 
 
(Make several photocopies of this page for future use)

Optional Parts List

These parts and tools may be ordered from your authorized dealer.

FRAME	Remarks
Driven sprocket Standard	< >: Drive chain links 49 Teeth, Aluminum. <116>
Optional	48 Teeth, Aluminum
	50 Teeth, Aluminum
Driven chain size/link	DID520DMA4-120RB RK520TXZ-120RJ
Handlebar lower holder	
Standard	3 mm offset
Optional	no offset

TOOLS	Remarks
Pin spanner A 	To adjust spring preload. (two spanners required)
Workstand 	For maintenance
Air gauge	For checking tire air pressure

FRAME	Remarks
Shock spring Standard	296.9 lbf/in (52.0 N/mm)  No mark (factory products) or  Blue paint (aftermarket parts)
Optional Softer	285.5 lbf/in (50.0 N/mm)  White paint
Stiffer	307.7 lbf/in (53.9 N/mm)  Red paint
Fork spring Standard	25.12 lbf/in (4.4 N/mm)  No mark
Optional Softer	23.98 lbf/in (4.2 N/mm)  1 scribe mark
Stiffer	26.20 lbf/in (4.59 N/mm)  2 scribe marks

The standard fork spring and shock spring mounted on the motorcycle when it leaves the factory are not marked. Before replacing the springs, be sure to mark them so they can be distinguished from other optional springs.

Spare Parts & Equipment

There are numerous spare parts you can take to an event to help ensure you get in a full day of riding. In addition to the usual nuts and bolts, consider the following:

Spare Parts

spark plugs
air cleaner (clean & oiled, sealed in a plastic bag)
chain & masterlinks
chain guide slider
chain guide
chain rollers
inner tubes (front & rear)
fenders
footpegs
fuel feed hose and retainers
fuel pump filter
number plate & side covers
handlebar
grips
levers (brake, clutch)
clutch lever handlebar mount
clutch cable
throttle assembly
throttle cable
shift lever
brake pedal
spokes (front & rear, each side)
sprockets (larger & smaller than standard, for gearing changes & collision damage replacement)
assorted nuts, bolts, washers, screws, cotter pins

Additional Spares

fuel pump
front brake master cylinder
rear brake assembly
wheels & tires (front & rear, mounted)
clutch discs and plates
engine & transmission oil

seat
ignition components
radiator hoses
radiator shrouds (L & R)
brake hoses (front & rear)

General Tools

sockets (3/8 in drive)
screwdrivers: blade & Phillips No. 1, 2, 3
wrench, large adjustable
wrenches: open end & box
wrenches: hex (Allen)
wrench, spoke
torque wrench (metric scale, click-stop style)
pliers: standard, needle-nose, channel-lock set
hammer, plastic head
syringe with adjustable stop
tire pressure gauge
tire irons
tire pump or air tank
feeler gauge set
vernier caliper (metric)
pressure/vacuum testing equipment (USA only)

Honda Special Tools

Any special tools for your motorcycle purchased from your dealer.

- Lock Nut Wrench 07WMA-KZ30100
- Spoke Wrench 07JMA-MR60100
- 070MA-KZ30100
- Tensioner Stopper 070MG-0010100
- 07AMG-001A100 (USA only)
- Piston Base 07958-2500001
- Fork Rod Holder 07AMB-KZ3A100 (USA only)

You can purchase a PGM-FI Setting Tool for your CRF from your dealer.

- PGM-FI Setting Tool 06380-N1D-670


Chemical Products

Pro Honda GN4 4-stroke Oil (Engine and Transmission Oil)
SAE80 or 90 gear oil
HP Fork Oil, SS-19
Pro Honda DOT4 Brake Fluid
Pro Honda HP Chain Lube
Pro Honda Foam Filter Oil
Pro Honda Hondabrite
Pro Honda Dielectric Grease
Pro Honda Handgrip Cement
Pro Honda Hondalock
Molybdenum Disulfide grease (containing more than 3% molybdenum disulfide additive)
Pro Honda White Lithium Grease
Multi-purpose Grease
Rust-inhibiting Oil
Cable lubricant
Pro Honda HP Coolant
Urea based multi-purpose grease designed for high temperature, high pressure performance (example: EXCELITE EP2 manufactured by KYODO YUSHI, Japan or Shell Stamina EP2 or equivalent).

Other Products

pliers-safety wire
safety wire
mechanic's wire
duct tape
plastic tie-wraps
hose clamps
drop light
electrical tape
Scotch-Brite Hand Pad #7447 (maroon)
Teflon tape

Wiring Diagram

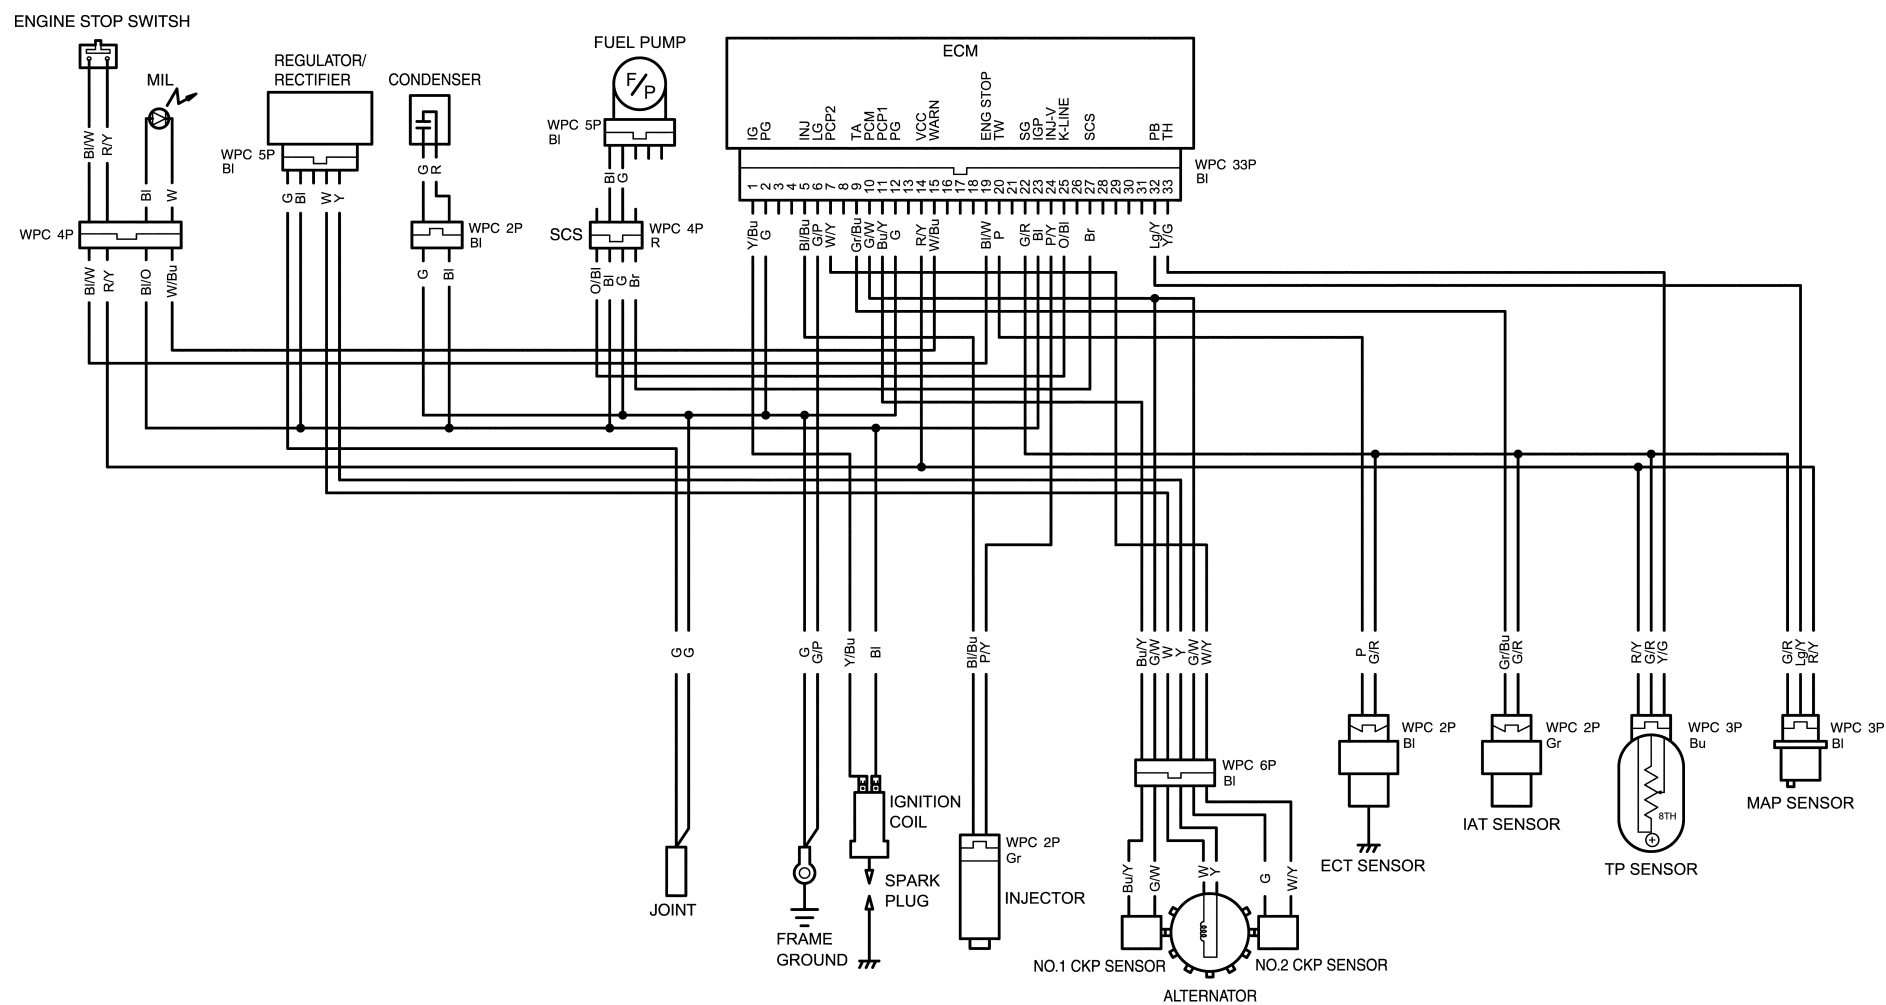

ENGINE STOP SWITCH		
	E	IG
FREE		
PUSH		
COLOR	BI/W	R/Y

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

Consumer Information

This section contains information about contacting Honda and how to get an official Honda Service Manual.

Authorized Manuals	160
Contacting Honda.....	161
Your Dealer	162
The Honda Rider's Club (USA only)	163

Authorized Manuals

The Service Manual used by your authorized dealer is available from your Honda dealer or Helm, Inc. (USA only, Canada: See your dealer to order authorized manuals)

Also available but not necessary to service your model is the Honda Common Service Manual which explains theory of operation and basic service information for various systems on Honda motorcycles, scooters, ATVs, MUVs, PWCs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them helpful if they have the proper tools and skills. Special Honda tools are necessary for some procedures.

Publication Item No.	Description
61KRN52	2012 CRF250R Service Manual
61CM002	Common Service Manual
31KRN680	2012 CRF250R Owner's Manual

Order On-Line: www.helminc.com

Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)

(NOTE: For Credit Card Orders Only)
Monday - Friday 8:00 AM - 6:00 PM EST

Contacting Honda

Your owner's manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the owner's manual can be answered by your dealer. If he doesn't have the answer right away, he will get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level.

If you wish to comment on your experiences with your Honda or with your dealer, please send your comments to the following address (USA only):

Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2200, Torrance CA 90509-2200, mailstop: 100-4C-7B, telephone: (866) 784-1870.

Canada: Honda Canada Inc., Customer Relations Dept, 180 Honda Boulevard, Markham, Ontario L6C 0H9, telephone: (888) 946 – 6329, facsimile: (877) 939 – 0909.

Please include the following information in your letter:

- name, address, and telephone number
- product model, year, and VIN
- date of purchase
- dealer name and address

We will likely ask your dealer to respond, or possibly acknowledge your comments directly.

Your Dealer

Once you purchase your new Honda, get familiar with the organization of your dealer so you can utilize the full range of services available.

The service department is there to perform regular maintenance and unexpected repairs. It has the latest available service information from Honda.

The parts department offers new Honda Genuine Parts, Pro Honda products and Honda Genuine Accessories (USA only), and Honda accessories and products (Canada only). The same quality that went into your Honda can be found in Honda Genuine replacement parts. You'll also find comparable quality in the accessories and products available from the parts department.

Your dealer can inform you about competition events in your area, as well as provide you with information about the Honda Rider's Club of America (USA only).

We're sure you'll be as pleased with the service your dealer continues to provide after the sale as you are with the quality and dependability of your Honda.

The Honda Rider's Club (USA only)

The Honda Rider's Club of America (HRCA) sponsors local riding chapters at Authorized Honda Dealerships across the country. You can log on to the HRCA Clubhouse website for more information at www.hrca.honda.com.

Index

A

accessories	3
adjustments,	
chassis	136
control freeplay	59, 62
for competition	109
gearing	137
personal fit	139
steering damper	134
suspension, front	110
suspension, rear	125
suspension, track conditions	129
tire selection	138
after competition maintenance	30
air cleaner	56
air pressure,	
front suspension	110
tires	95
apparel, protective	2
appearance care	107
authorized manuals	160

B

basic operation	15
before riding	11
between motos & practice maintenance	30
brakes,	
fluid level	91
lever, front adjustment	90
pad wear	93
pedal height	90
break-in guidelines	19

C

capacity, fuel	40
care, appearance	107
chain drive	97
chassis adjustments	136
cleaner, air	56
cleaning, appearance care	107
clutch system, adjustment	62
competition logbook	154
consumer information	159
contacting Honda	161
controls	5
coolant	54
customer service	162
cylinder system	79

D

damping adjustments,	
front	110
rear	126
steering damper	134
dealer, your	162
diagram, wiring	158
drive chain	97

E

engine,	
idle speed	61
lacks power	145
number	148
oil	49
pinging	40
starting	17
stop button	18
stopping	18
won't start	145
environment, protecting	144

F

filter,	
air	56
fuel pump	44
oil	50
fork,	
front suspension adjustment	110
front suspension inspection	85
oil recommendation	87
front brake lever adjustment	90
front suspension maintenance	112
fuel,	
line	40
line replacement	41
oxygenated	153
pump filter	44
refueling	40
system	40
tank capacity	40

Index

G

gap, spark plug	67
gasohol	153
gasoline	40
gearing	137
guidelines,	
steering damper	135
suspension adjustment	130

H

handlebar inspection	105
Honda,	
contacting	161
Rider's Club	163
service manual	160

I

identification, vehicle	148
idle speed, engine	61
indicator,	
MIL blink	7
circuit inspection	8
DTC index	9
inspection, pre-ride	13
instruments	5

L

labels, safety	4
logbook, competition	154

M

maintenance,	
after competition	30
before & after competition	30
between motos & practice	30
component locations	32
general competition	26
importance	22
safety	23
schedule	24
manual, service	160
modifications	3

O

oil,	
engine	49
fork	87
transmission	52
operating instructions	15
operation component locations	6
optional,	
parts list	156
sprockets	137
oxygenated fuels	153

P

pads, brake	93
parts, optional	156
personal fit adjustments	139
pinging, engine	40
plug, spark	67
pre-load, rear suspension	125
pre-ride inspection	13
protective apparel	2

R

rear suspension maintenance	125
Rider's Club Honda (USA only)	163
riding,	
apparel	2
basic operation	15
before	11
important safety information	2
safety precautions	2

S

safety,	
a few words about	Safety Messages
important information	2
important precautions	2
labels	4
maintenance	23
riding precautions	16
schedule, maintenance	24
seat	33
serial numbers	148
service,	
customer	162
manuals	160
spare parts	157
spark knock	40
spark plug,	
maintenance	67
reading	133
specifications	149
spring pre-load, rear suspension	125
starting,	
engine	17
troubleshooting	145
steering damper,	
adjustment	134
guidelines	135
operation inspection	104
steering stem inspection	105

(cont'd)

Index

stopping engine	18
storage	143
subframe	36
suspension,	
front	85
rear	86
suspension adjustment,	
front	110
rear	125
for track conditions	129
guidelines	130

T

transmission oil	52
tuning tips	133
throttle,	
freeplay	59
inspection	60
tires,	
air pressure	95
flat	95
selection	138
tools	157
torque specifications	
engine	150
frame	151-152
transporting	142
troubleshooting	145
tubes, replacing	95

V

vale clearance	68
vehicle identification no. (VIN)	148

W

washing your motorcycle	107
wheels	94
wiring diagram	158

MEMO

Quick Reference

The following is a brief, but important collection of information you need to know about your Honda. You'll also find space to record important notes.

How To Avoid Costly Repairs

The engine of your Honda can be the most expensive component to repair. Proper maintenance, especially the use of the recommended fluids and filters, prevents premature wear and damage.

Frequent causes of costly engine repairs are:

- Transmission oil & engine oil: insufficient quantity, improper oil.
- Air cleaner: dirty, leaking because of improper installation (poor seal).

Record important information here:

VIN	
Engine No.	
Owner's:	
Name	
Address	
City/State	
Phone	
Dealer's:	
Name	
Address	
City/State	
Phone	
Service Mgr.	

Maintenance	The maintenance schedule (page 25) lists service frequencies for: each race or about 2.5 hours, every 3 races or about 7.5 hours, every 6 races or about 15.0 hours, every 9 races or about 22.5 hours and every 12 races or about 30.0 hours					
Pre-ride Inspection	Check the items listed on the Pre-ride inspection checklist each time before you ride (page 13).					
Fuel tank Capacity	unleaded gasoline, pump octane number of 91 or higher tank: 1.5 US gal (5.7 ℓ)					
Engine oil	Pro Honda GN4 4-stroke oil, or an equivalent.					
Transmission oil	Pro Honda GN4 4-stroke oil, or an equivalent.					
Tires	Front	80/100 – 21 51M		Rear	100/90 – 19 57M	
		DUNLOP	MX51F		DUNLOP	MX51
	Type	bias-ply, tube				
Tire Pressure (cold)	Front: 15 psi (100 kPa, 1.0kgf/cm ²) Rear: 15 psi (100 kPa, 1.0kgf/cm ²)					
Spark Plug	standard: R0451B-8 (NGK)					
Coolant	ethylene glycol antifreeze (silicate-free) for aluminum engines in 50/50 solution with Pro Honda HP Coolant or equivalent distilled water.					
Drive Chain/link	DID520DMA4–116RB RK520TXZ–116RJ					